


1. Bus Bar
2. Circuit Breaker
3. Resistor
4. Fuel Gage
5. Fuel Gage Transfer Switch
6. Main Tank Transmitter
7. Aux. Inboard Transmitter
8. Aux. Outboard Transmitter

55-369-127

Fuel Quantity Indicator (Standard)  
 TC-531 thru TC-1298  
 TE-1 thru TE-767

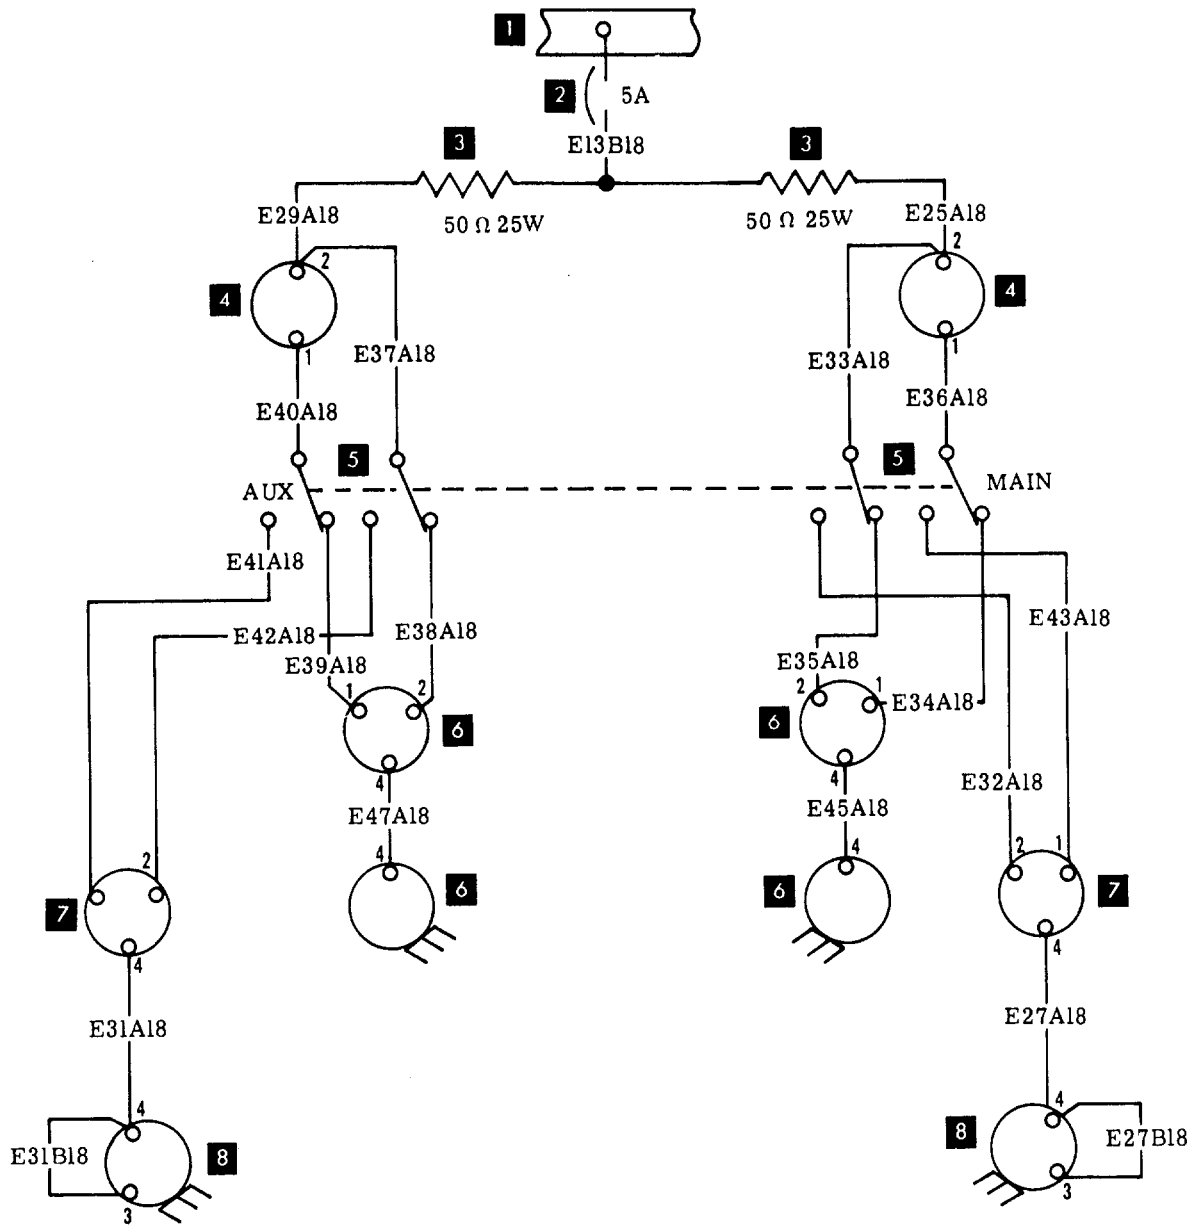

55-369-128

1. Bus Bar
2. Circuit Breaker
3. Resistor
4. Fuel Gage
5. Fuel Gage Transfer Switch
6. Main Tank Transmitter
7. Aux. Inboard Transmitter
8. Aux. Outboard Transmitter

Fuel Quantity Indicator (Optional)  
 TC-531 thru TC-1298  
 TE-1 thru TE-767