CONTINENTAL O-470 AND IO-470 SERIES ILLUSTRATED PARTS CATALOG

TABLE OF CONTENTS

SECTION I
INTRODUCTION
ABBREVIATIONS & SYMBOLS
ACCESSORY MANUFACTURERS
CUSTOMER SPECIFICATION TO SERIAL NUMBER CROSS REFERENCE

SECTION II - GROUP ASSEMBLY PARTS LIST

SECTION III - OVERSIZE AND UNDERSIZE PARTS LIST (ALL MODELS)

SECTION IV - REPAIR PARTS SETS AND MATERIALS (ALL MODELS)

SECTION V - NUMERICAL PARTS LIST (ALL MODELS)


SECTION VI - CUSTOMER SPECIFICATION

TOOLBAR HELP

OPEN/CLOSE BOOKMARKS

Copyright 2005 McCurtain Technology Group. All Rights Reserved.

TOOLBAR HELP

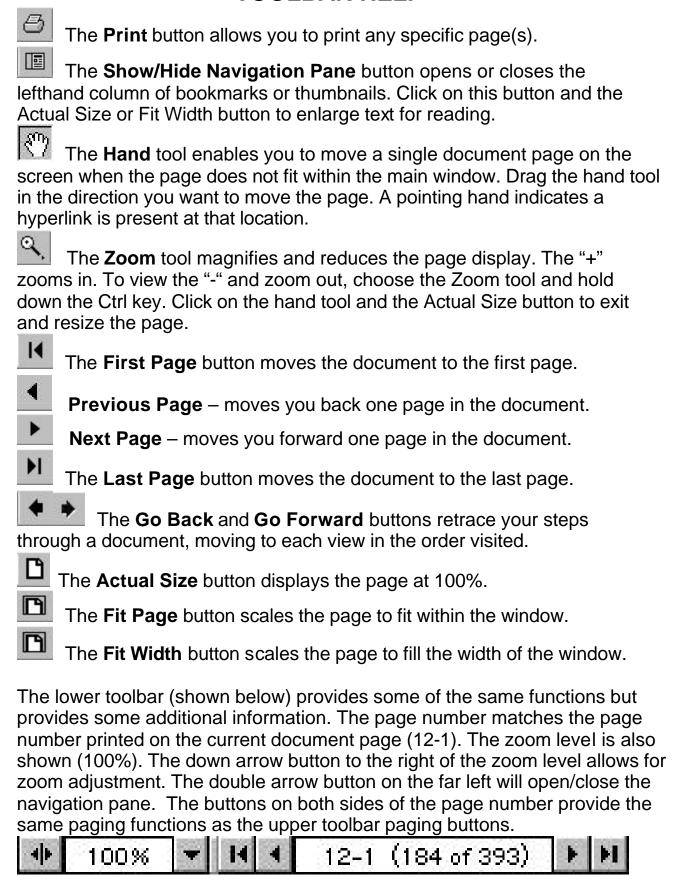

For additional help, click on the **Help** command on the right side of the top command line. Click on the **Go Back** button to return to the manual.

ILLUSTRATED PARTS CATALOG FOR 0-470 AND IO-470 SERIES AIRCRAFT ENGINES

CURRENT STATUS OF PAGES AS OF MARCH 1979

THE ORIGINAL DATE OF THIS PUBLICATION IS NOVEMBER 1975

INSERT LATEST PAGES

DESTROY SUPERSEDED PAGES

MODELS O-470-A,B,E,G,J,K,L,M,P,R,S & U and MODELS 10-470-C,D,E,F,G,H,J,K,L,M,N,P,R,S,U & V

 		 	10-470-G,D,E,F,	l		5465	07.17.10
PAGE	STATUS	PAGE	STATUS	PAGE	STATUS	PAGE	STATUS
i	MARCH 1979	2-16	MARCH 1979	2-58	MARCH 1979	2-100	MARCH 1979
ii	MARCH 1979	2-17	MARCH 1979	2-59	MARCH 1979	2-101	MARCH 1979
iii	MARCH 1979	2-18	MARCH 1979	2-60	MARCH 1979	2-102	MARCH 1979
iv	MARCH 1979	2-19	MARCH 1979	2-61	MARCH 1979	2-103	MARCH 1979
V	MARCH 1979	2-20	MARCH 1979	2-62	MARCH 1979	2-104	MARCH 1979
vi	MARCH 1979	2-21	MARCH 1979	2-63	MARCH 1979	2-105	MARCH 1979
vii	MARCH 1979	2-22	MARCH 1979	2-64	MARCH 1979	2-106	MARCH 1979
viii	MARCH 1979	2-23	MARCH 1979	2-65	MARCH 1979	2-107	MARCH 1979
ix	MARCH 1979	2-24	MARCH 1979	2-66	MARCH 1979	2-108	MARCH 1979
1-1	M A D CH 1070	2-25	MARCH 1979	2-67	MARCH 1979	2-109	MARCH 1979
ı	MARCH 1979	2-26	MARCH 1979	2-68	MARCH 1979	2-110	MARCH 1979
1-2	MARCH 1979	2-27	MARCH 1979	2-69	MARCH 1979	2-111	MARCH 1979
1-3 1-4	NOVEMBER 1975 NOVEMBER 1975	2-28	MARCH 1979	2-70	MARCH 1979	2-112	MARCH 1979
1-4	NOVEMBER 1975	2-29	MARCH 1979	2-71	MARCH 1979	2-113	MARCH 1979
1-6	NOVEMBER 1975	2-30	MARCH 1979	2-72	MARCH 1979	2-114	MARCH 1979
1-0		2-31	MARCH 1979	2-73	MARCH 1979	2-115	MARCH 1979
1-8	NOVEMBER 1975 NOVEMBER 1975	2-32	MARCH 1979	2-74	MARCH 1979	2-116	MARCH 1979
1-8	NOVEMBER 1975	2-33	MARCH 1979	2-75	MARCH 1979	2-117	MARCH 1979
1-10	NOVEMBER 1975	2-34	MARCH 1979	2-76	MARCH 1979	2-118	MARCH 1979
1-11	NOVEMBER 1975	2-35	MARCH 1979	2-77	MARCH 1979	2-119	MARCH 1979
1-12	NOVEMBER 1975	2-36	MARCH 1979	2-78	MARCH 1979	2-120	MARCH 1979
1-13	NOVEMBER 1975	2-37	MARCH 1979	2-79	MA'RCH 1979	2-121	MARCH 1979
1-14	NOVEMBER 1975	2-38	MARCH 1979	2-80	MARCH 1979	2-122	MARCH 1979
1-15	NOVEMBER 1975	2-39	MARCH 1979	2-81	MARCH 1979	0.1	MA DOU 1070
1-16	NOVEMBER 1975	2-40	MARCH 1979	2-82	MARCH 1979	3-1	MARCH 1979
1-17	NOVEMBER 1975	2-41	MARCH 1979	2-83	MARCH 1979	3-2	MARCH 1979
1		2-42	MARCH 1979	2-84	MARCH 1979	3-3	MARCH 1979
2-1	MARCH 1979	2-43	MARCH 1979	2-85	MARCH 1979	3-4	BLANK
2-2	MARCH 1979	2-44	MARCH 1979	2-86	MARCH 1979	A 1	MARCH 1979
2-3	MARCH 1979	2-45	MARCH 1979	2-87	MARCH 1979	4-1	
2-4	MARCH 1979	2-46	MARCH 1979	2-88	MARCH 1979	4-2	MARCH 1979
2-5	MARCH 1979	2-47	MARCH 1979	2-89	MARCH 1979	r 1	MARCH 1979
2-6	MARCH 1979	2-48	MARCH 1979	2-90	MARCH 1979	5-1	
2-7	MARCH 1979	2-49	MARCH 1979	2-91	MARCH 1979	5-2	MARCH 1979
2-8	MARCH 1979	2-50	MARCH 1979	2-92	MARCH 1979	5-3 E 1	MARCH 1979 MARCH 1979
2-9	MARCH 1979	2-51	MARCH 1979	2-93	MARCH 1979 MARCH 1979	5-4 5-5	MARCH 1979
2-10	MARCH 1979	2-52	MARCH 1979	2-94	MARCH 1979 MARCH 1979	5-6	MARCH 1979
2-11	MARCH 1979	2-53	MARCH 1979	2-95 2-96	MARCH 1979	5-6 5-7	MARCH 1979
2-12 2-13	MARCH 1979	2-54	MARCH 1979 MARCH 1979	2-96 2-97	MARCH 1979	5-7 5-8	MARCH 1979
2-13 2-14	MARCH 1979	2-55	MARCH 1979 MARCH 1979	2-97 2-98	MARCH 1979	5-6 5-9	MARCH 1979
	MARCH 1979	2-56		E	MARCH 1979	5-10	MARCH 1979
2-15	MARCH 1979	2-57	MARCH 1979	2-99	WANCH 1979	2-10	MANORISTS

CURRENT STATUS OF PAGES CONTINUED

PAGE	STATUS	PAGE	STATUS	PAGE	STATUS	PAGE	STATUS
5-11	MARCH 1979						
5-12	MARCH 1979						
5-13	MARCH 1979						
5-14	MARCH 1979						
5-15	MARCH 1979						
5-16	MARCH 1979			j			
5-17	MARCH 1979						
5-18	MARCH 1979	£.					
5-19	MARCH 1979	,					
5-20	MARCH 1979	·					
6-1	MARCH 1979					·	:
6-2	MARCH 1979						
6-3	MARCH 1979						
6-4	MARCH 1979						
6-5	MARCH 1979						
6-6	MARCH 1979						
6-7	MARCH 1979						
6-8	MARCH 1979						
6-9	MARCH 1979						
6-10	MARCH 1979						
6-11	MARCH 1979						
6-12	MARCH 1979						
6-13	MARCH 1979						i
6-14	MARCH 1979						
6-15 C 10	MARCH 1979						
6-16 6-17	MARCH 1979						
6-17	MARCH 1979 MARCH 1979						
6-19	MARCH 1979						
6-20	MARCH 1979						
6-21	MARCH 1979		100				
6-22	MARCH 1979						
6-23	MARCH 1979		i				
6-24	MARCH 1979						
6-25	MARCH 1979						
6-26	MARCH 1979						
6-27	MARCH 1979						
6-28	MARCH 1979						
			i				
<u></u>	l						

TABLE OF CONTENTS

c		v.	rı	n	RI	b
o	C	L	łſ	U	N	1

	INTRODUCTION	1-1
	ABBREVIATIONS AND SYMBOLS	1-2
	ACCESSORY MANUFACTURERS	1-2
SE	CTION II — GROUP ASSEMBLY PARTS LIST	
	Figure 1 — Crankcase Studding Assembly Models O-470-A, B, E, G, J, K, L, M, P, R, S, U	2-2
	Figure 2 — Crankcase Studding Assembly Models 10-470-C, D, E, F, G, H, J, K, L, M, N, P, R, S, U, V	2-4
	Figure 3 — Crankcase Attaching Parts Models O-470-A, B, E, G, J, K, L, M, P, R, S, U	2-6
	Figure 4 — Crankcase Attaching Parts Models 10-470-C, D, E, F, G, H, J, K, L, M, N, P, R, S, U, V	2-8
	Figure 5 — Crankcase Associated Parts Models O-470-A, B, E, G, J, K, L, M, P, R, S, U	2-10
	Figure 6 — Crankcase Associated Parts Models 10-470-C, D, E, F, G, H, J, K, L, M, N, P, R, S, U, V	2-12
	Figure 7 — Crankcase and Crankshaft Extension Assemblies Model 10-470-P	2-14
	Figure 8 — Crankshaft Assembly Models O-470-A, B, E, G, J, K, L, M, P, R, S, U	2-16
	Figure 9 — Crankshaft Assembly Models 10-470-C, D, E, F, G, H, J, K, L, M, N, P, R, S, U, V	2-18
	Figure 10 — Camshaft Assembly Models 0-470-A, B, E, G, J, K, L, M, P, R, S, U	2-20
	Figure 11 — Camshaft Assembly Models IO-470-C, D, E, F, G, H, J, K, L, M, N, P, R, S, U, V	2-21
	Figure 12 — Piston and Ring Assembly Models 0-470-A, B, E, G, J, M, P and IO-470-C, G, J, K, P, R	2-22

SECTION II-GROUP ASSEMBLY PARTS LIST CONTINUED

Figure 13 — Piston and Ring Assembly Models O-470-K, L, R, S, U	2-23
Figure 14 — Piston and Ring Assembly Models O-470-K, L, R	2-24
Figure 15 — Piston and Ring Assembly Models IO-470-D, E, F, H, L, M, N, S, U, V	2-25
Figure 16 — Cylinder Assembly Models 0-470-A, E, J	2-26
Figure 17 — Cylinder Assembly Models IO-470-J, K	2-28
Figure 18 — Cylinder Assembly Models O-470-B, G, K, L, M, P, R, S, U	2-30
Figure 19 — Cylinder Assembly Models 10-470-C, D, E, F, G, H, L, M, N, P, R, S, U, V	2-32
Figure 20 — Connecting Rod Assembly All Models	2-34
Figure 21 — Oil Cooler Models O-470-A, E, J, K and IO-470-F	2-35
Figure 22 — Oil Cooler Models O-470-G, L, P, R, S, U	2-36
Figure 23 — Oil Cooler Models 10-470-C, E, G, H, J, K, N, R, S	2-37
Figure 24 — Oil Cooler Models O-470-B, M and IO-470-D, L, M, U, V	2-38
Figure 25 — Oil Sump Models O-470-A, B, E, J, K, L, M, R, S, U and IO-470-D, E, F, G, L, M, P, R, S, U, V	2-40
Figure 26 — Oil Sump Models O-470-G, P and IO-470-C, H, J, N	2-42
Figure 27 — Oil Pump Assembly Models O-470-A, B, E, G, J, K, L, M, P, R, S, U	2-44
Figure 28 — Oil Pump Cover and Tachometer Drive Models O-470-A, B, E, G, J, K, L, M, P, R, S, U	2-46
Figure 29 — Oil Pump Assembly Models IO-470-C, D, E, F, G, H, J, K, L, M, N, P, R, S, U, V	2-48
Figure 30 — Oil Pump Cover and Tachometer Drive Models 10-470-C. D. E. F. G. H. J. K. L. M. N. P. R. S. U. V	2-50

SECTION II-GROUP ASSEMBLY PARTS LIST CONTINUED

Figure 31 – Starter and Starter Adapter Models O-470-A, B, E, G, J, K, L, M, P, R, S, U	2-52
Figure 32 — Starter and Starter Adapter Models 10-470-C, D, E, F, G, H, J, K, L, M, N, P, R, S, U, V	2-54
Figure 33 — Generator and Mounting Brackets Models O-470-A, B, E, G, J, K, M, P, R	2-56
Figure 34 — Generator and Mounting Brackets Models IO-470-C, D, E, F, G, H, J, K, L, N, P, R, S	2-57
Figure 35 — Generator and Mounting Brackets Model 10-470-M	2-58
Figure 36 — Generator and Mounting Brackets Models 10-470-U, V	2-59
Figure 37 — Alternator (Optional Equipment) All Models	2-60
Figure 38 — Priming System Models O-470-A, B, E, G, J, K, L, M, P	2-61
Figure 39 — Magneto and Accessory Drives Models O-470-A, B, E, G, J, K, L, M, P, R, S, U	2-62
Figure 40 — Magneto and Accessory Drives Models 10-470-C, D, E, F, G, H, J, K, L, M, N, P, R, S, U, V	2-63
Figure 41 — Ignition System Models O-470-A, B, E, G, J, K, L, M, P, R	2-64
Figure 42 — Ignition System Models 0-470-S, U	2-66
Figure 43 — Ignition System Models 10-470-C, E, F, G, H, L, M, N, P, R	2-68
Figure 44 — Ignition System Models 10-470-S, U, V	2-70
Figure 45 — Ignition System Models 10-470-J, K	2-72
Figure 46 — Ignition Cable Lead Lengths Models O-470-A, B, E, G, J, K, L, M, P and IO-470-C, D, E, F, G, H, L, M, N, P, R	2-74
Figure 47 — Ignition Cable, Spark Plug End Models O-470-G,P,R	2-75
Figure 48 — Ignition Cable, Spark Plug End Models O-470-A, B, E, J, K, L, M	2-7€

SECTION II-GROUP ASSEMBLY PARTS LIST CONTINUED

Figure 49 — Ignition Cable, Spark Plug End Models 10-470-C, D, E, F, G, H, L, M, N, P, R	2-78
Figure 50 — Ignition Cable, Spark Plug End Models 10-470-J, K, S, U, V	2-79
Figure 51 — Induction System Models 0-470-G, P	2-80
Figure 52 — Induction System Models 0-470-A, J, K, L, R, S, U	2-82
Figure 53 — Induction System Models 0-470-B, E, M	2-84
Figure 54 — Induction System Models 10-470-C, H, J, K, N	2-86
Figure 55 — Induction System Models 10-470-D, E, G, L, P, R, U, V	2-88
Figure 56 — Induction System Models 10-470-F, S	2-90
Figure 57 — Induction System Model IO-470-M	2-92
Figure 58 — Fuel Pump Assembly (Old Style) Models O-470-B, E, G, M, P	2-94
Figure 59 — Fuel Pump Assembly (New Style) Models O-470-B, E, G, M, P	2-95
Figure 60 — Fuel Injection System Models 10-470-C, H, J	2-96
Figure 61 — Fuel Injection System Model 10-470-F	2-98
Figure 62 — Fuel Injection System Models 10-470-K, N	2-100
Figure 63 — Fuel Injection System Model 10-470-L	2-102
Figure 64 — Fuel Injection System Model 10-470-M	2-104
Figure 65 — Fuel Injection System Model 10-470-S	2-106
Figure 66 — Fuel Injection System Models 10-470-U. V	2-108

SECTION II - GROUP ASSEMBLY PARTS LIST CONTINUED

Figure 67 — Fuel Injection System Models 10-470-D, E, G, P, R	2-110
Figure 68 — Throttle and Lever Assembly Models 10-470-C, D, E, F, G, H, J, K, L, M, N, P, R, S, U, V	2-112
Figure 69 — Throttle Levers (Old Style) Models 10-470-C, D, E, F, G, H, J, K, L, M, N, P, R, S, U, V	2-114
Figure 70 — Fuel Pump and Vapor Separator Fitting Locations (New Style) Models 10-470-C, D, E, F, G, H, J, K, L, M, N, P, R, S, U, V	2-115
Figure 71 — Fuel Pump Assembly, Complete (Old Style) Models 10-470-C, D, E, F, G, H, J, K, L, M, N, P, R, S, U	2-1 16
Figure 72 — Fuel Manifold Valve Models 10-470-C, D, E, F, G, H, J, K, L, M, N, P, R, S, U	2-118
Figure 73 — Fuel Manifold Valve Fitting Locations Models 10-470-C, D, E, F, G, H, J, K, L, M, N, P, R, S, U, V	2-119
Figure 74 — Fuel Control Fitting Locations Models 10-470-C, D, E, F, G, H, J, K, L, M, N, P, R, S, U, V	2-120
Figure 75 — Fuel Control Levers (Old Style) Models 10-470-C, D, E, F, G, H, J, K, L, M, N, P, R, S, U, V	2-121
SECTION III — OVERSIZE AND UNDERSIZE PARTS LIST (ALL MODELS)	3-1
SECTION IV — REPAIR PARTS SETS AND MATERIALS (ALL MODELS)	4-1
SECTION V — NUMERICAL PARTS LIST (ALL MODELS)	5-1
SECTION VI — CUSTOMER SPECIFICATION	
0-470-G Spec. 7	6-2 6-2
0-470-J Spec. 6, 8 & 11	6-2
0-470-K Spec. 3, 5, 9, 14, 15 & 17	6-2
0-470-L Spec. 2	6-3
0-470-M Spec. 1, 8 & 10	6-3
0-470-M Spec. 1, 12, 22, 23 & 26	6-4
0-470-R Spec. 1, 2, 3, 4 & 5	6-4
0-470-R Spec. 6, 9, 11, 13 & 14	6-6
0-470-R Spec. 15, 17, 20, 13, 25 & 32	6-6
0-470-R Spec. 35 & 37	6-7
0-470-R Spec. 35 & 37	6-7 6-7
0-470-R Spec. 35 & 37	6-7
0-470-R Spec. 35 & 37	6-7 6-7 6-7

SECTION VI-CUSTOMER SPECIFICATION (cont'd)

10-470-D Spec. 19, 27 & 30	6-9
10 470-D Spec. 42, 44 & 50	6-10
10 1=0 = 0	6-11
10-470-E Spec. 6, 8 & 13	6-11
10-470-F Spec. 1 & 3	6-11
10-470-F Spec. 4 & 5	6-12
10-470-F Spec. 7	6-13
10-470-F Spec. 18, 19 & 23	6-14
10-470-F Spec. 26	
10-470-J Spec. 6	6-16
10-470-K Spec. 3, 6, 11 & 12	6-16
10-470-L Spec. 3	6-16
10-470-L Spec. 5, 8, 9, 11 & 12	6-17
10-470-L Spec. 13, 15, 16 & 18	6-18
10-470-L Spec. 19 & 20	6-19
10-470-L Spec. 21	
10-470-N Spec. 3, 7 & 10	6-20
10-470-N Spec. 11 & 12	6-21
10-470-S Spec. 2	6-21
10-470-S Spec. 3 & 8	6-22
10-470-U Spec. 3	6-22
10-470-V Spec. 2 & 6	6-22
	6-23
Figure 76 & 77	6-25
	6-26
	6-27
	6.28

.

SECTION I

INTRODUCTION

- 1-1. This parts catalog is presented in looseleaf form so changes can be made to the affected pages only. A registration card is included. Those purchasers who register their catalog will be advised of changes as they occur, at a price to be determined at that time. The registrants will also be advised which pages are affected by the change.
- 1-2. Page iii of this publication depicts the current status of pages as of the date listed. Each page in the catalog is also dated. To be current, the date on the page should match the date listed for that page on the Status Page. With each change to the catalog issued, a change to the current Status Page will necessarily be issued.
- 1-3. In this edition, currently available parts are listed for all O-470 and IO-470 engines. If accessories or parts attached to any engine installed n an aircraft manufactured in the United States under a production model number do not appear in this catalog, determine whether they are available from the aircraft manufacturer before placing an order with a Teledyne Continental Authorized Distributor.
- 1-4. Section II contains 75 figures, in each of which one of the major assemblies or groups of the engine is illustrated in "exploded" form. Each figure has its own set of index numbers to indicate the sub-parts. The list of parts in the assembly or group appears on the same page with the illustration or on an adjacent page. The first column of each assembly group list contains the figure number (not repeated on all lines) and, following a dash, the index numbers of the sub-parts in numerical order. Do not order parts by index number. Use the part number, which appears in the second column. Use the name of the part which appears in the column under the title "DESCRIPTION."
- 1-5. Do not order any parts listed herein when "NO NUMBER" appears on the same line in the

- part number column or when "NOT SOLD" herein abbreviated as "NS" appears in the "UNITS PER ASSEM" column, because these parts are not suitable for installation without factory equipment, or they are major parts of assemblies and are more economically supplied in the assembled condition, or they are assemblies which would have to be disassembled for installation. To replace any detail part "NOT SOLD" order the smallest assembly containing the part (listed above, with name beginning one column to left). To replace any assembly "NOT SOLD," order whatever subassemblies and detail parts (listed below it, with names indented) that are in need of replacement.
- 1-6. Oversize and undersize parts are listed in Section III. These parts must be ordered by the numbers listed herein, with correct descriptions, to avoid errors. Corresponding standard size part numbers in Section II are preceded by a symbol (†) to indicate the availability of the non-standard size. (Refer to list of abbreviations and symbols.)
- 1-7. Sets of parts listed in Section IV are usually wanted in such groups for overhaul work and should be ordered by set part numbers.
- 1-8. Section V contains a list of part numbers arranged in numerical order in the first column. If the number of any desired part is known, the name may be located by referring to the figure and index number in Section II, which is listed opposite the part number in Section V.
- 1-9. Section VI contains a list of customer specifications of each engine model. The parts and accessory differences between the spec and basic engine are listed, as well as a Figure and Index column which will refer back to Section II or to the rear of Section VI for an illustration.
- NOTE... The aircraft manufacturer occasionally changes certain accessories per customer request.

LIST OF ABBREVIATIONS AND SYMBOLS

SYMBOL	DEFINITION	SYMBOL	DEFINITION
AR	As Required Diameter Inside Diameter	RF	Refer to
Dia.		NPT	National Pipe Tap (or thread)
ID		US	Undersize
In.	Inches	No.	Number
	Millimeters	†	Oversize parts available
mm OD OP	Outside Diameter Optional	† * * * *	Undersize parts available End of group of attaching parts
OS	Oversize Pitch Diameter (thread)	NS	Not Sold
PD		&	Parts included in a set

ACCESSORY MANUFACTURERS

AC	AC Spark Plug Division General Motors Corporation Flint, Michigan	Harrison	Harrison Radiator Division General Motors Corporation Lockport, New York
Air-Maze	Air-Maze Division Rockwell-Standard Corporation Cleveland, Ohio	Marvel	Marvel-Schebler Products Division Borg-Warner Corporation Decatur, Illinois
Bendix	Bendix Products Division Bendix Corporation South Bend, Indiana	Modine	Modine Manufacturing Company Racine, Wisconsin
Bendix- Scintilla	Bendix Corporation Scintilla Division Sidney, New York	Prestolite	The Prestolite Company Division of Eltra Corporation Toledo, Ohio
Champion	Champion Spark Plug Company Detroit, Michigan	Slick	Slick Electro Incorporated Rockford, Illinois
Delco-Remy	United Motors Service General Motors Building Detroit 2, Michigan		

CUSTOMER SPECIFICATION TO SERIAL NUMBER CROSS REFERENCE

O-470-A

- SPEC. 1 40001 thru 40004, 40006, 40009 thru 40026, 40028 thru 40624, 40626 thru 40656, 40658, 40659, 40661 thru 40663, 40665, 40666, 40668 thru 40673, 41001 thru 41043, 41045 thru 41050, 41052 thru 41054, 41056 thru 41062, 41064, 41066 thru 41090, 41093 thru 41136, 41138 thru 41203, 41205 thru 41215, 41217 thru 41221, 41223, 41224, 41226, 41229, 41231 thru 41233, 41235 thru 41259, 41261 thru 41357, 41359 thru 41366, 41368, 41370 thru 41387, 41389 thru 41392, 41394, 41396 thru 41438, 41440 thru 41470, 41472 thru 41483, 41485 thru 41487, 41490 thru 41501, 41503 thru 41508, 41510 thru 41512, 41514 thru 41519, 41521, 41522, 41524, 41527 thru 41534, 41536 thru 41539, 41541 thru 41543, 41545 thru 41547, 41549 thru 41572, 41574 thru 41576, 41578, 41579, 41581 thru 41587, 41589, 41590, 41592 thru 41616, 41618, 41620, 41621, 41624, 41629, 41630, 41632 thru 41640, 41642 thru 41667, 41672 thru 41674
- SPEC. 7 41204, 41216, 41222, 41225, 41227, 41228, 41230, 41234, 41260, 41358, 41367, 41369, 41388, 41393, 41395, 41439, 41471, 41484, 41502, 41509, 41513, 41520, 41523, 41525, 41535, 41540, 41544, 41548, 41573, 41577, 41580, 41588, 41591, 41617, 41619, 41622, 41625 thru 41627, 41631, 41641, 41668

O-470-B

- SPEC. 6 50001, 50002, 50005 thru 50022, 50025 thru 50031, 50034 thru 50040, 50045, 50046, 50048 thru 50051, 50053 thru 50070, 50073 thru 50091, 50093, 50099 thru 50131, 50139 thru 50178, 50181 thru 50188, 50190 thru 50211, 50216 thru 50231, 50233 thru 50236, 50238 thru 50251, 50253 thru 50256, 50258 thru 50294, 50296 thru 50324, 50336 thru 50343, 50345 thru 50372, 50375, 50381 thru 50399, 50401 thru 50430, 50433 thru 50436, 50438, 50448 thru 50452, 50454 thru 50482, 50489, 50492 thru 50515, 50517 thru 50537, 50542 thru 50592, 50594 thru 50617, 50624 thru 50628, 50643 thru 50652, 50654, 50660 thru 50663, 50668, 50685, 50686, 50691, 50813, 50814, 50817
- SPEC. 7 50003, 50004, 50023, 50024, 50041 thru 50044, 50072, 50092, 50094 thru 50098, 50132 thru 50138, 50329 thru 50335, 50376 thru 50380, 50432, 50437, 50439 thru 50447, 50453, 50483 thru 50485, 50629 thru 50638, 50664 thru 50666, 50669, 50671 thru 50677, 50679, 50680, 50682, 50683
- **SPEC. 17** 50189, 50232, 50237, 50252, 50257, 50295, 50344, 50400, 50431, 50516, 50538 thru 50541, 50593, 50619 thru 50623, 50640 thru 50642, 50653, 50655 thru 50659, 50667, 50670, 50678, 50681, 50684, 50687 thru 50690, 50802 thru 50806, 50808 thru 50812

O-470-E

SPEC. 3 60001 thru 60026, 60028 thru 60042, 60045 thru 60074, 60078, 60079, 60081 thru 60087, 60089, 60092, 60093, 60095, 60098, 60099, 60103

O-470-G

SPEC. 1 70001 thru 70067, 70069 thru 70110, 70112 thru 70164, 70166 thru 70492, 70494 thru 70500, 85504, 85505, 85514, 85515, 85524

O-470-J

- SPEC. 1 45001 thru 45175, 45177 thru 45239, 45214 thru 45329, 45331 thru 45335, 45337 thru 45353, 45356 thru 45367, 45369 thru 45372, 45374 thru 45377, 45379 thru 45386, 45388 thru 45399, 45401 thru 45423, 45425 thru 45438, 45441 thru 45448, 45450, 45451, 45453 thru 45458, 45460 thru 45481, 45483 thru 45500, 45503 thru 45514, 45516 thru 45520, 45523 thru 45535, 45537 thru 45553, 45555 thru 45557, 45559 thru 45661, 45563 thru 45570, 45576, 45579 thru 45600, 45602 thru 45632, 45634 thru 45656, 45658 thru 45670, 45672 thru 45686, 45688 thru 45704, 45706, 45707, 45726, 45731, 45732, 45734 thru 45752, 45754 thru 45799, 45801 thru 45836, 45838 thru 45841, 45843 thru 45860, 45862, 45863, 45865 thru 45873, 45875 thru 45878, 45880 thru 45892, 45895 thru 45926, 45928 thru 45931, 45933 thru 45941, 45943 thru 45945, 45965 thru 45975, 45977 thru 45981, 46002, 46004, 46007 thru 46009, 46074, 46075, 46163, 46164, 46170 thru 46175, 46186, 46198, 46215, 46221, 46236 thru 46238, 46255, 46271, 46278
- SPEC. 3 45176, 45240, 45330, 45336, 45354, 45355, 45368, 45378, 45400, 45424, 45439, 45440, 45482, 45515, 45521, 45522, 45562, 45571, 45572, 45578, 45601, 45657, 45671, 45687, 45708, 45842, 45864, 45879, 45927, 45942, 45946 thru 45949, 45953 thru 45955, 45960, 45962, 45976, 45982 thru 45987, 45989 thru 45991, 45994 thru 45996, 45999 thru 46001, 46003, 46005, 46010, 46018, 46019, 46025 thru 46028, 46030 thru 46034, 46039, 46045, 46049 thru 46052, 46063 thru 46068, 46073, 46077 thru 46079, 46082, 46088 thru 46091, 46104, 46105, 46107, 46116, 46122, 46124, 46127, 46132 thru 46145, 46149 thru 46152, 46154 thru 46158, 46160 thru 46162, 46165, 46166, 46168, 46176 thru 46178, 46192, 46225, 46239
- SPEC. 4

 45387, 45536, 45554, 45558, 45573 thru 45575, 45577, 45723 thru 45725, 45727 thru
 45730, 45733, 45753, 45837, 45874, 45932, 45959, 45993, 45997, 45998, 46006, 46014,
 46020 thru 46023, 46035, 46046, 46053, 46059, 46061, 46062, 46081, 46083 thru 46086,
 46117 thru 46121, 46123, 46125, 46128 thru 46130, 46146 thru 46148, 46153, 46159,
 46169, 46181, 46183 thru 46186, 46188, 46190, 46194, 46195, 46199, 46200, 46203 thru
 46205, 46208, 46209, 46211, 46213, 46217 thru 46219, 46222 thru 46224, 46227 thru 46230,
 46272, 46276, 46279 thru 46282
- SPEC. 6 45459, 45861, 45893, 45894, 45958, 45961, 45963, 45964, 46011, 46024, 46029, 46036 thru 46038, 46041 thru 46044, 46055 thru 46058, 46060, 46069 thru 46072, 46102, 46103

- 47001 thru 47271, 47273 thru 47292, 47294 thru 47323, 47325 thru 47375, 47377 thru 47473. SPEC. 1 47475 thru 47487, 47489 thru 47512, 47514, 47515, 47517 thru 47579, 47581 thru 47601. 47604 thru 47608, 47610 thru 47614, 47617, 47619 thru 47623, 47625 thru 47643, 47645 thru 47671, 47674 thru 47740, 47742 thru 47760, 47762 thru 47799, 47801 thru 47808, 47812, 47813, 47815, 47817 thru 47851, 47853 thru 47858, 47861, 47864, 47870 thru 47873, 47900, 47902 thru 47919, 47921, 47922, 47929, 47957 thru 47959, 47961 thru 47986. 48013 thru 48026, 48033 thru 48048, 48050, 48054 thru 48056, 48065 thru 48083, 48088 thru 48091, 48093, 48094, 48096 thru 48098, 48100, 48124, 48154 thru 48157, 48159, 48160, 48162 thru 48198, 48201, 48211, 48219, 48220, 48222, 48228, 48230 thru 48238, 48240 thru 48242, 48244, 48247, 48250, 48320, 48349, 48369 thru 48371, 48396, 48403, 48405, 48407, 48415, 48416, 48418, 48421, 48422, 48437 thru 48440, 48444, 48453, 48454, 48465. 48466, 48499, 48500, 48508, 48530, 48590, 48621, 48643, 48689, 48696, 48701 thru 48750. 48791 thru 48793, 48811, 48823, 48833, 48836, 48837, 48839, 48844, 48847, 48848, 48850, 48859, 48862, 48864, 48866, 48895, 48896, 48927, 48950, 48963, 48967, 48970, 48971, 48973, 48976, 48978, 48980, 48983, 48985, 48991, 48996 thru 48998, 55102, 55103
- SPEC. 3 47293, 47474, 47516, 47609, 47615, 47616, 47618, 47624, 47644, 47741, 47761, 47816, 47859, 47860, 47865, 47866, 47874, 47875, 47901, 47950 thru 47955, 48031, 48032, 48049, 48051, 48057, 48058, 48061 thru 48064, 48099, 48153, 48161, 48214, 48216 thru 48218, 48221, 48239, 48282, 48321, 48327, 48348, 48401, 48402, 48417, 48455, 48479, 48483, 48488, 48502, 48503, 48507, 48509, 48539 thru 48541, 48566, 48592, 48613, 48616 thru 48618, 48664, 48666 thru 48668, 48677, 48688, 48690, 48695, 48789, 48840 thru 48842, 48851 thru 48854, 48856 thru 48858, 48860, 48865, 48867, 48875 thru 48877, 48883, 48886, 48887, 48893, 48898, 48899, 48903, 48905, 48908 thru 48910, 48914, 48915, 48919, 48922, 48924 thru 48926, 48928 thru 48930, 48932, 48935, 48939, 48940, 48943, 48945 thru 48949, 48951, 48953, 48958 thru 48960, 48965, 48974, 48975, 48979, 55111,
- SPEC. 5 47488, 47513, 47602, 47603, 47800, 47809 thru 47811, 47814, 47852, 47862, 47863, 47867, 47868, 47876 thru 47878, 47946, 47949, 47956, 47960, 47997, 47998, 48027 thru 48030, 48052, 48053, 48059, 48060, 48084 thru 48086, 48095, 48100, 48101 thru 48106, 48199, 48202 thru 48206, 48223 thru 48225, 48245, 48249, 48276 thru 48281, 48283, 48315 thru 48319, 48330 thru 48333, 48344 thru 48347, 48350 thru 48352, 48372 thru 48381, 48408 thru 48414, 48423 thru 48429, 48458 thru 48461, 48542
- SPEC. 9 47880 thru 47899, 47925 thru 47928, 47930 thru 47945, 47987 thru 47996, 47999 thru 48012, 48108 thru 48123, 48125, thru 48152, 48158, 48207 thru 48210, 48212, 48213, 48215, 48248, 48254, 48258, 48285 thru 48295, 48382 thru 48395, 48404, 48556 thru 48565, 48631, 48633 thru 48642, 48644 thru 48663, 48665, 48710, 48712, 48714 thru 48732, 48743 thru 48764, 48768 thru 48770, 48790, 48796 thru 48810, 48814 thru 48816, 48818 thru 48822, 48824 thru 48831, 48834, 48835
- SPEC. 14 48226, 48227, 48229, 48243, 48246, 48250, 48251 thru 48253, 48255 thru 48257, 48259 thru 48275, 48430 thru 48436, 48441 thru 48443, 48445 thru 48452, 48456, 48462 thru 48464, 48467 thru 48477, 48480 thru 48482, 48484 thru 48487, 48489 thru 48498, 48504 thru 48506, 48510 thru 48529, 48531 thru 48538, 48543 thru 48555, 48567 thru 48582, 48586, 48593 thru 48595, 48597 thru 48612, 48614, 48615, 48619, 48620, 48622 thru 48630, 48632, 48669 thru 48676, 48678, 48681 thru 48687, 48691 thru 48693, 48699 thru 48709, 48711, 48713, 48734 thru 48741, 48765 thru 48767, 48771 thru 48786, 48788, 48794, 48812, 48813
- SPEC. 15 48296 thru 48314, 48322 thru 48326, 48328, 48329, 48334 thru 48343, 48353 thru 48368

- 66001 thru 66520, 66522 thru 66705, 66707 thru 66893, 66899 thru 66937, 66939 thru 67086. SPEC, 1 67088 thru 67096, 67098 thru 67220, 67222 thru 67327, 67330 thru 67341 67343 thru 67349. 67356, 67359, 67367, 67368, 67370 thru 67706, 67740, 67741, 67743, 67764, 67766 thru 67779, 67859, 67869, 67871, 67889 thru 67926, 67928 thru 67935, 67937 thru 67952, 67955 thru 68206, 68208 thru 68234, 68236 thru 68252, 68326, 68361 thru 68400, 68438, 68443 thru 68456, 68458 thru 68500, 68502 thru 68628, 68630 thru 68764, 68766 thru 68790, 68810 thru 68829, 68831 thru 69005, 69015, 69038, 69059, 69060, 80001 thru 80023, 80025 thru 80067, 80083 thru 80149, 80171 thru 80178, 80202, 80222, 80224, 80227, 80228. 80231 thru 80259, 80292, 80299, 80305, 80308 thru 80312, 80314, 80316 thru 80342, 80344 thru 80388, 80390 thru 80516, 80650, 80667, 80671, 80682, 80685 thru 80735, 80737. 80771 thru 80780, 80783 thru 80793, 80795, 80796, 80801 thru 80810, 80812 thru 80918, 80920 thru 81049, 81071, 81073 thru 81093, 81095 thru 81097, 81099 thru 81102, 81125, 81132, 81137, 81188, 81190 thru 81195, 81206 thru 81224, 81238, 81383, 81776, 81871. 81933, 81983, 82046, 82083, 82098, 82119, 82124, 82125, 82128, 82132, 82138, 82149. 82151, 82162, 82163, 82165 thru 82167, 82173, 82180, 82182, 82189, 82195, 82197, 82202. 82203, 82207, 82235, 82244, 82266, 82267, 82274
- SPEC. 2 66894 thru 66898, 66938, 67087, 67221, 67369, 67875, 67953, 67954, 68207, 68235, 68501, 68629, 80343, 80389, 80781, 80782, 80811, 80919, 81070, 81145, 81147, 81149, 81150, 81198, 81237, 81239, 81340, 81432, 81550, 81719, 81788, 81789, 81872, 81873, 81906, 81932, 81982, 82039, 82042, 82043, 82049, 82065, 82071 thru 82073, 82075 thru 82080, 82085, 82087, 82089 thru 82091, 82093, 82094, 82096, 82101 thru 82106, 82108, 82109, 82114, 82120 thru 82123, 82127, 82133 thru 82137, 82139 thru 82142, 82145, 82146, 82150, 82153, 82154, 82156, 82159 thru 82161, 82170, 82177, 82193, 82199, 82222, 82224, 82230, 22234, 82241, 82242, 82243, 82272
- SPEC. 5 67707, 67725, 67729 thru 67739, 67744 thru 67763, 67765, 67780 thru 67807, 68253 thru 68284, 68296, 80542 thru 80600, 81050 thru 81069, 81123, 81124, 81139 thru 81141
- SPEC. 6
 67708 thru 67724, 67726 thru 67728, 67742, 67808 thru 67858, 67860 thru 67868, 67870, 67872 thru 67874, 67876 thru 67888, 67927, 68285 thru 68295, 68297 thru 68325, 68327 thru 68360, 68401 thru 68437, 68439 thru 68442, 68457, 68765, 68791 thru 68805, 68807 thru 68809, 69006 thru 69014, 69016 thru 69037, 69039 thru 69058, 80024, 80068 thru 80082, 80150 thru 80159, 80161 thru 80169, 80179 thru 80201, 80203 thru 80221, 80223, 80225, 80226, 80229, 80230, 80260 thru 80280, 80282 thru 80291, 80293 thru 80298, 80300 thru 80304, 80306, 80307, 80313, 80315, 80517 thru 80541, 80601 thru 80666, 80668 thru 80670, 80672, 80673, 80675 thru 80681, 80683, 80684, 80736, 80738 thru 80771, 80794, 80797 thru 80800, 81094, 81098, 81103 thru 81122, 81126 thru 81131, 81133 thru 81136, 81138, 81142 thru 81144, 81146, 81148, 81151 thru 81169, 81171 thru 81187, 81189, 81199 thru 81205, 81225 thru 81231, 81236, 81240 thru 81299
- SPEC. 10 81072, 81196, 81197, 81232 thru 81235, 81300 thru 81339, 81341 thru 81364, 81394 thru 81399, 81461 thru 81543, 81545, 81547 thru 81549, 81643 thru 81675, 81785 thru 81787, 81791 thru 81793, 81821 thru 81823, 81836, 81842 thru 81849, 81851 thru 81861, 81895 thru 81905, 81907, 81909 thru 81931, 81934 thru 81952, 81958 thru 81981, 81984 thru 81998, 82007 thru 82036, 82041, 82048, 82050 thru 82064, 82066 thru 82070, 82074
- SPEC. 12 81747 thru 81775, 81777 thru 81784, 81790, 81794 thru 81817, 81819, 81824, 81827, 81828, 81837 thru 81841, 81862 thru 81870, 81874, 81875, 81877 thru 81895, 81952 thru 81957
- SPEC. 13 81365 thru 81382, 81384 thru 81393, 81400 thru 81431, 81433 thru 81460, 81544, 81546, 81551 thru 81615, 81618 thru 81642, 81676 thru 81718, 81720 thru 81746, 81818, 81825, 81826, 81829 thru 81835, 81850

- 51001 thru 51077, 51079 thru 51179, 51181 thru 51204, 51206 thru 51212, 51217 thru 51286. SPEC. 1 51289 thru 51354, 51356, 51358 thru 51407, 51410 thru 51471, 51475 thru 51477. 51480. 51481, 51489 thru 51519, 51521, 51523 thru 51607, 51609 thru 51612, 51615, 51617 thru 51633, 51650, 51653, 51656, 51659, 51671, 51674, 51675, 51677, 51685, 51686, 51688, 51690, 51692, 51695 thru 51697, 51700, 51707, 51733, 51737, 51759, 51760, 51762, 51763, 51768, 51773 thru 51779, 51781, 51782, 51790, 51792, 51816, 51832 thru 51851, 51853 thru 51856, 51863, 51871 thru 51873, 51875 thru 51905, 51927 thru 51937, 51939 thru 51958. 51960 thru 51967, 51987 thru 51998, 52000, 52002 thru 52005, 52007 thru 52023, 52027. 52032, 52035 thru 52043, 52048 thru 52102, 52104, 52105, 52108 thru 52128, 52130 thru 52132, 52138 thru 52142, 52144, 52145, 52149, 51151 thru 52157, 52159 thru 52176, 52179. 52181 thru 52214, 52236 thru 52273, 52278 thru 52281, 52298 thru 52312, 52367 thru 52388. 52390, 52391, 52429, 52436 thru 52453, 52456, 52464 thru 52467, 52494, 52496, 52517 thru 52536, 52547, 52548, 52559, 52563, 52567, 52569, 52571, 52580, 52583, 52612 thru 52615. 52617, 52619 thru 52621, 52630, 52643, 52643, 52645 thru 52647, 52650, 52673, 52674. 52695 thru 52699, 52800, 52805, 52808, 52809, 52810, 52811, 52812, 52814, 52815, 52820,, 53700, 53708, 53711, 53721, 53723 thru 53725, 53728 thru 53734, 53744, 53747, 53748, 53753 thru 53755, 53757, 53766, 53767, 53771 thru 53774, 53781, 53782, 53787, 53788, 53791, 53797, 53798
 - SPEC. 8 51634 thru 51645, 51648, 51651, 51652, 51654, 51655, 51657, 51658, 51660 thru 51668, 51670, 51672, 51673, 51678, 51682, 51684, 51687, 51689, 51693, 51694, 51699, 51702, 51706, 51708 thru 51710, 51712 thru 51732, 51734 thru 51736, 51741 thru 51755, 51772, 51784 thru 51789, 51791, 51793 thru 51811, 51830, 51831, 51852, 51857 thru 51862, 51864 thru 51866, 51868 thru 51871, 51874, 51906 thru 51916, 51919 thru 51926, 51938, 51968 thru 51986, 52024 thru 52026, 52133 thru 52135, 52137, 52143, 52146 thru 52148, 52150, 52274 thru 52277, 52282, 52284, 52285, 52287, 52288, 52290 thru 52293, 52295, 52296, 52317 thru 52346, 52362 thru 52366, 52389, 52392 thru 52403, 52407 thru 52428, 52430 thru 52435, 52454, 52455, 52457 thru 52463, 52468 thru 52482, 52511 thru 52516, 52538 thru 52543, 52582, 52584 thru 52558, 52560 thru 52562, 52566, 52568, 52570, 52573 thru 52579, 52581, 52582, 52584 thru 52601, 52749, 52750, 52765
 - **SPEC. 10** 51680, 51681, 51769, 51999, 52001, 52006, 52177, 52495, 52670, 52671, 52801, 52807, 52813, 52816, 52817, 53726, 53727, 53746, 53752, 53757 thru 53760, 53768, 53769, 53777 thru 53780
 - **SPEC. 11** 51738, 51739, 51764 thru 51767, 51770, 51771, 51783, 51813 thru 51815, 51817 thru 51825, 51829, 52215 thru 52235, 52313 thru 52316, 52404 thru 52406
 - SPEC. 12 51669, 51676, 51679, 51683, 51698, 51700, 51701, 51703 thru 51705, 51756 thru 51758, 51827, 51828, 52283, 52286, 52289, 52294, 52297, 52347 thru 52361, 52483 thru 52492, 52497 thru 52510, 52537, 52544, 52546, 52549, 52564, 52565, 52602 thru 52611, 52622 thru 52629, 52631 thru 52642, 52644, 52651 thru 52669, 52672, 52675 thru 52694, 53701 thru 53707, 53709, 53710, 53712 thru 53720, 53722, 53735 thru 53743, 53745

O-470-P

SPEC. 1 75001 thru 75015

O-470-R

- SPEC. 1 83001 thru 83004, 83006 thru 83237, 83240 to 83281, 83315, 83316, 83318, 83319, 83322 thru 83355, 83358 thru 83360, 83362 thru 83386, 83391 thru 83600, 83602 thru 83632, 83635, 83637, 83669, 83671 thru 83699, 83715 thru 83837, 83848 thru 83850, 83852 thru 83857, 83859 thru 83862, 84100, 84158, 84161, 84162, 84164, 84408, 84671, 84673, 84964, 130164, 130354 thru 130356, 130406, 130577, 131187
- SPEC. 2 83238, 83239, 83282 thru 83314, 83317, 83320, 83321, 83356, 83357, 83361, 83387 thru 83390, 83633, 83634, 83636, 83638 thru 83668, 83670, 83700 thru 83714, 83838 thru 83847, 83851, 83858, 83863 thru 83894, 83896 thru 83914, 83930 thru 83936, 83938, 83942 thru 83946, 83948, 83950 thru 83964, 83990, 84086, 130052
- 83895, 83915 thru 83925, 83937, 83939 thru 83941, 83947, 83949, 83965 thru 83989, SPEC. 3 83991 thru 84085, 84087 thru 84099, 84101 thru 84113, 84144 thru 84153, 84155 thru 84157, 84159, 84160, 84163, 84165 thru 84179, 84181 thru 84253, 84255 thru 84288, 84311 thru 84407, 84409 thru 84478, 84480 thru 84633, 84635 thru 84658, 84660 thru 84670, 84672, 84675 thru 84746, 84748 thru 84760, 84762 thru 84765, 84767 thru 84813, 84815, 84826, 84827, 84838 thru 84840, 84842, 84866, 84915 thru 84945, 84950 thru 84963, 84965 thru 84967, 84969 thru 84990, 84992 thru 84999, 130000, 130001, 130008 thru 130036, 130038 thru 130042, 130044 thru 130049, 130051, 130053, 130094, 130095, 130106, 130109 thru 130136, 130138 thru 130161, 130163, 130165 thru 130172, 130174 thru 130190, 130192, 130195, 130208, 130210, 130212, 130214, 130216 thru 130221, 130223, 130225, 130227, 130229, 130231, 130233 thru 130235, 130237, 130239, 130243 thru 130257, 130259 thru 130269, 130271 thru 130277, 130279 thru 130331, 130334 thru 130353, 130357 thru 130359, 130361 thru 130368, 130370 thru 130402, 130404, 130407 thru 130428, 130448, 130449, 130451 thru 130455, 130458, 130480, 130486 thru 130488, 130515, 130519, 130520, 130523 thru 130529, 130531 thru 130543, 130545 thru 130557, 130561, 130567, 130573, 130575, 130576, 130579, 130580, 130583, 130585, 130586, 130589, 130591, 130593 thru 130595, 130597 thru 130605, 130607 thru 130609, 130611 thru 130613, 130615 thru 130624, 130627 thru 130632, 130634 thru 130639, 130646, 130648, 130650, 130652 thru 130654, 130656, 130657, 130659, 130661 thru 130677, 130680, 130684, 130698, 130783, 130786, 130807, 130839, 130858, 130881, 130884, 131207, 131213, 131241, 131372, 131430, 131501, 131502, 131633, 131852, 131853, 131930, 132355, 132359, 132360, 132498, 132765, 133096 thru 133098, 133459 thru 133461, 133559, 133590, 133591, 133750, 133751, 133762, 133912, 133914, 133947, 133948, 191047, 191049, 191125, 191126, 191130, 191131, 191236, 191343, 191577, 191578
- SPEC. 4

 84114 thru 84143, 84289 thru 84309, 84814, 84841, 84848 thru 84858, 84860 thru 84865, 84867 thru 84873, 84875 thru 84878, 84880 thru 84914, 84947 thru 84949, 130096, 130191, 130193, 130194, 130196 thru 130207, 130209, 130211, 130213, 130215, 130222, 130224, 130226, 130228, 130230, 130232, 130236, 130238, 130240 thru 130242, 130403, 130429 thru 130436, 130440 thru 130443, 130445, 130446, 130456, 130460 thru 130463, 130465, 130467, 130469, 130471, 130473, 130475, 130477, 130479, 130481, 130483, 130501, 130503, 130513, 130687 thru 130697, 130699 thru 130707, 130709 thru 130727, 130747, 133104

- SPEC. 9 84816 thru 84825, 84828 thru 84837, 84843 thru 84847, 84991, 130007, 130037, 130043, 130050, 130054 thru 130081, 130083 thru 130093, 130099 thru 130105, 130107, 130108, 130437 thru 130439, 130444, 130447, 130457, 130459, 130464, 130466, 130468, 130470, 130472, 130474, 130476, 130478, 130482, 130484, 130485, 130489 thru 130492, 130494 thru 130500, 130502, 130504 thru 130512, 130514, 130516 thru 130518, 130521, 130522, 130558 thru 130560, 130562 thru 130566, 130568 thru 130572, 130574, 130581, 130582, 130584, 130587, 130588, 130590, 130596, 130606
- SPEC. 11 130082, 130098, 130258, 130332, 130333, 130405, 130450, 130493, 130544, 130644, 130708, 130811, 130879, 130883, 130327, 130328, 131438, 133731, 191051, 200023, 200034 thru 200036
- SPEC. 15

 130530, 130610, 130614, 130625, 130626, 130633, 130640 thru 130643, 130645, 130647, 130649, 130651, 130655, 130658, 130660, 130678, 130679, 130681 thru 130683, 130685, 130686, 130729 thru 130746, 130748, 130749, 130751 thru 130782, 130784, 130785, 130787 thru 130806, 130808 thru 130810, 130812 thru 130838, 130840 thru 130857, 130859, 130861 thru 130878, 130885 thru 130892, 130894 thru 130966, 130971 thru 131135, 131137 thru 131186, 131188 thru 131206, 131209 thru 131212, 131214 thru 131240, 131242 thru 131319, 131321 thru 131326, 131329 thru 131356, 131358 thru 131371, 131373 thru 131407, 131409 thru 131429, 131431 thru 131437, 131439 thru 131471, 131473 thru 131500, 131503 thru 131600, 131613 thru 131623, 131626 thru 131632, 131634 thru 131762, 131764 thru 131851, 131855 thru 131909, 131916 thru 131929, 131931 thru 132312, 132314, 132319, 132639 thru 132641, 133117, 133118, 133250, 133462, 133463, 133735, 133949, 191053, 191176, 191426, 191782
- **SPEC. 20** 132313, 132315 thru 132318, 132320 thru 132354, 132361 thru 132447, 132449 thru 132530, 132532, 132534 thru 132554, 132556 thru 132615, 132618 thru 132634, 132636, 132637. 132645 thru 132764, 132772 thru 132927, 132929 thru 132931, 132933 thru 133066, 133068, 133069, 133071 thru 133093, 133104 thru 133116, 133119 thru 133127, 133129 thru 133136, 133138, 133140, 133141, 133144, 133145, 133147, 133149 thru 133151, 133153. 133155 thru 133249, 133251 thru 133294, 133314, 133315, 133321 thru 133339, 133341 thru 133348, 133350 thru 133372, 133398 thru 133457, 133476, 133479, 133484, 133485, 133497, 133498, 133500, 133505, 133508, 133510 thru 133558, 133560 thru 133589, 133592 thru 133730, 133732 thru 133734, 133738 thru 133740, 133752 thru 133758, 133761, 133763, 133766 thru 133876, 133883 thru 133911, 133913, 133919 thru 133946, 133951 thru 133999. 191001 thru 191009, 191011 thru 191046, 191048, 191054 thru 191124, 191127 thru 191129, 191132 thru 191174, 191177 thru 191234, 191237 thru 191342, 191352 thru 191356, 131371 thru 191388, 191390 thru 191394, 191397 thru 191422, 191432 thru 191480, 191485, 191489 thru 191494, 191496 thru 191503, 191505 thru 191507, 191509, 191510, 191514 thru 191519, 191521 thru 191526, 191528 thru 191560, 191585, 191587 thru 191781. 191783 thru 191851, 191856 thru 191912, 191914 thru 191957, 191963 thru 191999, 194551 thru 194580, 194587 thru 194613, 194619 thru 194659, 194662 thru 194709, 194711 thru 194720, 194726, 194729, 194732, 194735 thru 194737, 194739, 202619

- SPEC. 23

 132531, 132533, 132555, 132616, 132617, 132635, 132638, 132642 thru 132644, 132766 thru 132771, 132928, 132932, 133067, 133070, 133128, 133137, 133139, 133142, 133143, 133146, 133148, 133152, 133154, 133295 thru 133298, 133300 thru 133313, 133316 thru 133320, 133373 thru 133397, 133464 thru 133475, 133477, 133478, 133480 thru 133483, 133486 thru 133496, 133498, 133501 thru 133504, 133506, 133507, 133509, 133744 thru 133749, 133877 thru 133882, 191175, 191179, 191344 thru 191351, 191357 thru 191370, 191389, 191481 thru 191484, 191486 thru 191488, 191495, 191504, 191508, 191511 thru 191513, 191520, 191527, 191561 thru 191576, 191579 thru 191581, 191583, 191852 thru 191855, 194618, 202970, 203098, 222419, 222636, 222637, 222638
- 194742, 194750 thru 194758, 194760 thru 194919, 194921 thru 194924, 194926 thru 195000, **SPEC. 25** 200000 thru 200019, 200030, 200038 thru 200134, 200136 thru 200138, 200140 thru 200199, 202501 thru 202555, 202557, 202558, 202560 thru 202565, 202568 thru 202618, 202620 thru 202790, 202793 thru 202812, 202814 thru 202888, 202892 thru 202931, 202933, 202938, 202941 thru 202947, 202950, 202952, 202962 thru 202969, 202971 thru 203067, 203069 thru 203096, 203099, 203100, 203102 thru 203170, 203172 thru 203178, 203181 thru 203200, 203202 thru 203296, 203299 thru 203329, 203331, 203332, 203333, 203335 thru 203342, 203344 thru 203355, 203357 thru 203374, 203388 thru 203391, 203395 thru 203440, 203442 thru 203500, 211000 thru 211029, 211031 thru 211111, 211113 thru 211120, 211124 thru 211145, 211147, 211150, 211151, 211152, 211154, 211156, 211158, 211159, 211160, 211168, 211171 thru 211189, 211191 thru 211198, 211200 thru 211232, 211234 thru 211245, 211247 thru 211262, 211266 thru 211301, 211306, 211309, 211310, 211314, 211316 thru 211369, 211371 thru 211384, 211386 thru 211407, 211410 thru 211418, 211420 thru 211424, 211426, 211428, 211430 thru 211467, 211469 thru 211474, 211476 thru 211480, 211483, 211484, 211485, 211487 thru 211495, 211497, 211498, 211500 thru 211510, 211512, 211513, 211516 thru 211535, 211539 thru 211547, 211550 thru 211554, 211556 thru 211564, 211567, 211568, 211574 thru 211583, 211585, 211588 thru 211593, 211596 thru 211606, 211609 thru 211613, 211618 thru 211623, 211625 thru 211635, 211638, 211639, 211640, 211642, 211643, 211644, 211646, 211647, 211654 thru 211664, 211669 thru 211676, 211678 thru 211687, 211689, 211691 thru 211697, 211699 thru 211704, 211707, 211714 thru 211730, 211732, 211734 thru 211747, 211754, 211755, 211757 thru 211763, 211765 thru 211771, 211777, 211778, 211779, 211784 thru 211793, 211798, 211800, 211801, 211802 thru 211809, 211811 thru 211821, 211823, 211826, 211828, 211830, 211832, 211834, 211836, 211837, 211839, 211841, 211843, 211848 thru 211864, 211866 thru 211879, 211881, 211883 thru 211890, 211892 thru 211908, 211910, 211912 thru 211919, 211921, 211923 thru 211927, 211929 thru 211935, 211939 thru 211944, 211946, 211947, 211948, 211952 thru 211962, 211964, 211966 thru 211983, 211986 thru 211200, 222401 thru 222404, 222406, 222410, 222412 thru 222415, 222420 thru 222429, 222432 thru 222440, 222443 thru 222458, 222462 thru 222478, 222480, 222482, 222484 thru 222489, 222492 thru 222499, 222501 thru 222503, 222505 thru 222545, 222547 thru 222556, 222559, 222568 thru 222570, 222572 thru 222575, 222578 thru 222589, 222591 thru 222600, 222642 thru 222667, 222670 thru 222691, 222693, 222695 thru 222712, 222714 thru 222716, 222720 thru 222737, 222739, 222741 thru 222744, 222747 thru 222797, 222800 thru 222816, 222819 thru 222829, 222831 thru 222834, 222836 thru 222840, 222842 thru 222849, 222851 thru 222859, 222871, 222873 thru 222898, 222900 thru 222902, 222904, 222907, 222909, 222911, 222912, 222927 thru 222949, 222951, 222953 thru 222954, 222957, 222959 thru 222966, 222968 thru 223000, 223500 thru 223521, 223524 thru 223528, 223534 thru 223552, 223554 thru 223556, 223560 thru 223595, 223599 thru 223618

211408, 211409, 211419, 211468, 211475, 211481, 211482, 211486, 211496, 211499, 211511 **SPEC. 35** 211514, 211515, 211536, 211537, 211538, 211548, 211549, 211555, 211566, 211570 thru 211573, 211584, 211586, 211587, 211594, 211595, 211607, 211608, 211645, 211648, 211649. 211651, 211652, 211653, 211665 thru 211668, 211690 211698, 211701 thru 211705, 211708 thru 211713, 211733, 211748 thru 211751, 211753, 211756, 211764, 211772 thru 211776. 211780 thru 211783, 211794, 211795, 211799, 211801, 211810, 211822, 211824, 211825, 211827, 211829, 211831, 211833, 211835, 211838, 211840, 211842, 211844, 211845, 211846, 211865, 211880, 211882, 211891, 211905, 211909, 211911, 211920, 211922, 211928, 211936, 211937, 211938, 211945, 222984, 222985, 222405, 222407 thru 222409, 222411, 222430, 222431. 222441, 222442, 222459 thru 222461, 222483, 222490, 222491, 222500, 222546, 222560 thru 222562, 222571, 222576, 222577, 222590, 222601 thru 222635, 222638, 222639, 222669, 222692, 222694, 222713, 222717 thru 222719, 222738, 222740, 222745, 222746, 222798, 222799, 222817. 222835, 222868 thru 222870, 222872, 222899, 222908, 222910, 222913 thru 222926, 222950. 222952, 222955, 222956, 222958, 222967, 223522, 223529 thru 223533, 223553, 223557 thru 223559, 223596 thru 223598

10-470-C

SPEC. 1 71005 thru 71020, 71022 thru 71117, 71119 thru 71121, 71123 thru 71159, 71161 thru 71315, 71317 thru 71385, 71387 thru 71496, 71498 thru 71678, 71681 thru 71749, 71751 thru 71801, 71803 thru 71807, 71809 thru 71870, 71872 thru 71911, 71913 thru 71946, 71948 thru 72033, 72036 thru 72257, 72259 thru 72299, 72301, 72302, 72303, 72306 thru 72314, 72317 thru 72333, 72335 thru 72342, 72345 thru 72349, 72351 thru 72364.

10-470-D

- SPEC. 1 75001 thru 75011, 75013 thru 75077, 75079 thru 75081, 75084 thru 75118, 75120 thru 75129, 75131 thru 75135, 75142, 75160 thru 75184, 75186 thru 75235, 75238, 75241 thru 75264, 75266 thru 75339, 75341 thru 75344, 75346 thru 75355, 75357, 75367, 75370, 75453 thru 75460, 75464 thru 75471, 75473 thru 75476, 75478, 75481, 75492, 75493, 75495 thru 75502, 75506 thru 75510, 75512 thru 75518, 75520 thru 75524, 75526, 75527, 75529 thru 75532, 75535 thru 75549, 75551 thru 75553, 75555, 75557 thru 75568, 75570, 75575 thru 75578, 75664 thru 75669, 75722, 75741, 75743 thru 75749, 75772, 75954, 75955, 75964, 75965, 79011, 79040, 79043, 79050, 79055, 79134, 79145, 79158, 79159, 79191, 79275, 79391, 79476, 79616, 79618, 79622, 79626, 79644, 79645, 79683, 79687, 104047, 104136, 104137, 104180, 104181
- SPEC. 4 75130, 75136 thru 75141, 75143 thru 75159, 75340, 75345, 75356, 75358 thru 75366, 75368, 75369, 75371 thru 75377, 75380 thru 75392, 75394 thru 75417, 75419, 75420, 75422 thru 75425, 75427, 75428, 75461 thru 75463, 79112, 79114, 104362, 104363
- **SPEC. 5** 75236, 75239, 75240, 75443, 75451, 75482, 75483, 75511, 75519, 75528, 75550, 75600, 75601, 79205, 79209, 79236, 79237, 79338, 79625, 79627
- SPEC. 7 75421, 75426, 75429 thru 75442, 75444 thru 75450, 75452, 75472, 75477, 75479, 75480, 75484 thru 75488, 75490, 75494, 75503 thru 75505
- SPEC. 9 75525, 75533, 75534, 75554, 75556, 75564, 75565, 75571 thru 75574, 75579 thru 75599, 75602 thru 75612, 75620 thru 75637, 75642, 75651, 75717 thru 75721, 75723 thru 75740, 75742, 75750 thru 75770, 75773, 75774, 75776 thru 75859, 75861 thru 75874, 75876 thru 75953, 75956 thru 75963, 75966 thru 75991, 79001, 79016 thru 79039, 79041, 79042, 79044 thru 79049, 79051 thru 79054, 79056 thru 79064, 79072 thru 79083, 79102 thru 79111, 79174, 79176 thru 79178, 79195, 79198, 79272, 79273, 79381, 79382, 79438, 79491, 79521, 79562, 79578, 79601, 79614, 79659 thru 79662, 79684, 79711 thru 79713, 79785, 79830, 104021, 104022, 104036, 104038, 104048, 104100, 104108, 104145, 104358, 104371

- SPEC. 12 75613 thru 75617, 75638 thru 75641, 75643 thru 75648, 75650, 75653 thru 75655, 75657 thru 75663, 75670 thru 75690, 75692 thru 75716, 75992 thru 75999, 79002 thru 79010, 79013 thru 79015, 79084 thru 79100, 79113, 79115 thru 79126, 79128 thru 79133, 79135 thru 79144, 79146 thru 79157, 79160, 79161, 79166, 79170 thru 79173, 79175, 79179 thru 79190, 79192 thru 79194, 79196, 79197, 79200, 79202 thru 79204, 79206, 79208, 79229, 79628, 79641, 79658, 79685, 79686, 79710, 79932, 79933, 104020, 104060, 104086, 104187, 104188, 104288 thru 104291, 104317, 104318, 104407, 104412, 104413, 104432, 104447, 104450, 104451, 104453, 104605, 104637, 104638
- SPEC. 15
 79162 thru 79165, 79168, 79169, 79199, 79201, 79207, 79210 thru 79227, 79238 thru 79242, 79244 thru 79271, 79274, 79276 thru 79278, 79285 thru 79337, 79339 thru 79343, 79345 thru 79365, 79368, 79369, 79383 thru 79390, 79392 thru 79413, 79415, 79419 thru 79421, 79426, 79427, 79429 thru 79437, 79439 thru 79475, 79477 thru 79489, 79492, 79493, 79495 thru 79520, 79522 thru 79526, 79528 thru 79538, 79540 thru 79542, 79544, 79546 thru 79551, 79553, 79556 thru 79558, 79560, 79564, 79566 thru 79577, 79579, 79581 thru 79600, 79603 thru 79609, 79613, 79615, 79617, 79619, 79808, 79809, 79811, 79831, 79850, 79851, 79854, 79855, 79857, 79879, 79880, 104465, 104494, 104514, 104539, 104540
- SPEC. 19 79629 thru 79640, 79642, 79646, 79649 thru 79654, 79663 thru 79682, 79688 thru 79694, 79697, 79700 thru 79709, 79714 thru 79743, 79747 thru 79750, 79752 thru 79757, 79760, 79761, 79763 thru 79765, 79767 thru 79784, 79786 thru 79807, 79810, 79812 thru 79817, 79819 thru 79823, 79825 thru 79828, 79832 thru 79846, 79852, 79853, 79856, 79858 thru 79878, 79881 thru 79901, 79904 thru 79906, 79908 thru 79925, 79934 thru 79965, 79967, 79968, 79971, 79973 thru 79999, 104000 thru 104008, 104010 thru 104017, 104023 thru 104029, 104033, 104037, 104039 thru 104044, 104046, 104049 thru 104052, 104056, 104058, 104063 thru 104065, 104068, 104448, 104486, 104487, 104527, 104528, 104536 thru 104538, 104556 thru 104559, 104569, 104570, 104587, 104588, 104610, 104611, 104628, 104629, 104634, 104642, 104657 thru 104660, 104683, 104686
- SPEC. 25 79766, 79818, 104009, 104218, 104244, 104245, 104294, 104295, 104380, 104405, 104436, 104437, 104442, 104466 thru 104468, 104492, 104495 thru 104497, 104501 thru 104508
- SPEC. 27 104053 thru 104055, 104057, 104059, 104061, 104062, 104069 thru 104082, 104084, 104087 thru 104093, 104095, 104097 thru 104099, 104101 thru 104107, 104109 thru 104115, 104117, 104119 thru 104135, 104138 thru 104144, 104146 thru 104152, 104158 thru 104168, 104171 thru 104179, 104182 thru 104186, 104190 thru 104207, 104209 thru 104214, 104216, 104217, 104219, 104220, 104223, 104226, 104228 thru 104243, 104246 thru 104267, 104269 thru 104284, 104287, 104292, 104293, 104299 thru 104309, 104311 thru 104316, 104319 thru 104341, 104343 thru 104352, 104354 thru 104357, 104364 thru 104369, 104372 thru 104379, 104381, 104382, 104384 thru 104387, 104389 thru 104399, 104402 thru 104404, 104418 thru 104421, 104423 thru 104430, 104457, 104488, 104489, 104526, 104560 thru 104562, 104572, 104573, 104575, 104576, 104591, 104592, 104598, 104601, 104609, 104613 thru 104617, 104630, 104632, 104645 thru 104650, 104665, 104666, 104684, 104685
- SPEC. 30 79966, 79972, 104034, 104035, 104094, 104096, 104154, 104221, 104222, 104310, 104401, 104414, 104440, 104460, 104461, 104462, 104469, 104474, 104481, 104483, 104490, 104491, 104512, 104513, 104520, 104532, 104533, 104567, 104568, 104571, 104574, 104581, 104582, 104585, 104586, 104594, 104602, 104607, 104619, 104620, 104621, 104631, 104633, 104636, 104639, 104640, 104641, 104643, 104644, 104653, 104654, 104663, 104664
- SPEC. 42 104477, 104478, 104510, 104511, 104550, 104551, 104564, 104565, 104577 thru 104580, 104593, 104595 thru 104597, 104599, 104600, 104608, 104612, 104622 thru 104627, 104655, 104656, 104667, 104668, 104671 thru 104682, 104687 thru 104702
- SPEC. 50 104635, 104651, 104652

10-470-E

- SPEC. 1 77001, 77006 thru 77325, 77346, 77387 thru 77389, 77393 thru 77526, 77573 thru 77580, 77582, 77585 thru 77587, 77591, 77592, 77610, 77621, 77639, 77643, 77772, 77866, 77898, 77907, 77911, 77922, 77929
- SPEC. 5 77347 thru 77386, 77390 thru 77392, 77532 thru 77560, 77562 thru 77572, 77622, 77623
- SPEC. 6 77581, 77583, 77584, 77589, 77590, 77595 thru 77609, 77611 thru 77620, 77624 thru 77638, 77640 thru 77642, 77645 thru 77706, 77708 thru 77747, 77749 thru 77771, 77773 thru 77784, 77786, 77789, 77835 thru 77851, 77862 thru 77865, 77867 thru 77877, 77879, 77883, 77885, 77895, 77897, 77899, 77900, 77903, 77905, 77906, 77910
- SPEC. 7 77785, 77787, 77788, 77790 thru 77816, 77818 thru 77829

10-470-F

- SPEC. 1 76001 thru 76088, 76090 thru 76124, 76126, 76128 thru 76135, 76938, 135103, 135125, 135126, 135140, 135155, 135162, 135165, 135187, 135203, 135204, 135218, 135219, 135277, 135281 thru 135284, 135287, 135299, 135303, 135305 thru 135309, 135311, 135318, 135319, 135324, 135326, 135345, 135368 thru 135370, 135372, 135389 thru 135401, 135421 thru 135425, 135448, 135450, 135451, 135453, 135459 thru 135461, 135463 thru 135467, 135472 thru 135481, 135496 thru 135501, 135508, 135533 thru 135535, 135545 thru 135549, 135555, 135556, 135560, 135562, 135564, 135644, 135646, 135647, 135662, 135668, 135672, 135710, 135711, 135717, 135732, 135733, 135750, 135752
- SPEC. 3 76125, 76127, 76136 thru 76385, 76387 thru 76436, 76438 thru 76450, 76452 thru 76570, 76577 thru 76606, 76612 thru 76661, 76663, 76664, 76668, 76673 thru 76677, 76679 thru 76684, 76728, 76730, 76736, 76737, 76741, 76756, 76790, 76802, 76804, 76807, 76824, 76835, 76857, 76862, 76863, 76907, 76913, 76917, 76966, 135021, 135041, 135045, 135061, 135065, 135067, 135096, 135099, 135113, 135133, 135139, 135145, 135160, 135213 thru 135215, 135260, 135261, 135294, 135310, 135371, 135377, 135384 thru 135386, 135426, 135452, 135470, 135471, 135484 thru 135488, 135505, 135506, 135520, 135538 thru 135540, 135563, 135569, 135570, 135577, 135579 thru 135586, 135611, 135612, 135622, 135623, 135649, 135657, 135658, 135663, 135674, 135675, 135677, 135702, 135709, 135712, 135713, 135715, 135716
- SPEC. 5
 76437, 76751 thru 76576, 76607 thru 76609, 76611, 76662, 76665 thru 76667, 76669, 76671, 76678, 76696, 76697, 76703, 76707, 76713, 76720, 76727, 76729, 76738, 76744, 76749, 76757, 76758, 76765, 76769, 76789, 76801, 76803, 76806, 76808, 76810, 76815, 76827, 76861, 76871, 76878, 76906, 76908, 76911, 76914 thru 76916, 76929, 76941, 76945, 76983, 76984, 135022, 135038 thru 135040, 135057, 135063, 135064, 135066, 135068 thru 135071, 135074, 135101, 135102, 135109 thru 135112, 135127 thru 135130, 135137, 135138, 135142, 135158, 135161, 135179, 135211, 135212, 135246, 135293, 135374, 135402, 135405 thru 135412, 135483, 135521, 135757, 135762, 135782, 135797
 - SPEC. 7
 76670, 76672, 76685 thru 76695, 76698 thru 76702, 76704 thru 76706, 76722 thru 76724, 76731 thru 76735, 76751 thru 76755, 76759 thru 76764, 76766 thru 76768, 76770 thru 76778, 76780 thru 76788, 76791 thru 76800, 76809, 76811 thru 76814, 76816 thru 76821, 76829, 76836 thru 76839, 76848 thru 76856, 76901 thru 76905, 76912, 76918 thru 76928, 76930 thru 76936, 76939, 76940, 76942 thru 76944, 76947 thru 76964, 76968 thru 76970, 76974, 76977, 76981, 76982, 76985 thru 76993, 135012 thru 135020, 135023 thru 135026, 135028 thru 135037, 135042 thru 135044, 135051 thru 135056, 135058, 135059, 135107, 135108, 135132, 135494, 135495, 135518, 135519, 135613, 135634, 135653 thru 135656, 135660, 135673, 135745, 135761, 135763 thru 135770, 135774, 135776, 135799, 135801
 - SPEC. 8 76708 thru 76712, 76739, 76740, 76742, 76743, 76745 thru 76748, 76750, 135542

- SPEC. 9 76714 thru 76719, 76779 thru 76785, 76965, 76967, 76972, 76973, 76975, 76976, 76978 thru 76980, 76995 thru 76999, 135004 thru 135011, 135046 thru 135050, 135131, 135134 thru 135136, 135457
- SPEC. 11 76822, 76823, 76826, 76828, 76830 thru 76834, 76840 thru 76847, 76859, 76860, 76864, 76870, 76886 thru 76900, 76910, 76994, 135072, 135073, 135141, 135143, 135144, 135146 thru 135154, 135163, 135164, 135168, 135169, 135171 thru 135176, 135180, 135186, 135189, 135192, 135194, 135195, 135201, 135205
- SPEC. 17

 135060, 135062, 135075 thru 135095, 135097, 135098, 135100, 135104 thru 135106, 135114 thru 135124, 135157, 135159, 135166, 135167, 135170, 135177, 135178, 135181 thru 135184, 135206 thru 135210, 135232, 135237, 135238, 135241, 135242, 135244, 135248, 135249, 135251, 135256 thru 135258, 135262, 135264, 135266, 135268, 135270 thru 135276, 135278 thru 135280, 135285, 135286, 135288, 135290, 135291, 135297, 135300 thru 135302, 135304, 135312 thru 135317, 135327, 135332 thru 135339, 135351 thru 135367, 135373, 135375, 135376, 135378 thru 135383, 135388, 135456, 135708, 135718 thru 135721
- SPEC. 18

 135216, 135217, 135220 thru 135227, 135229 thru 135231, 135233, 135239, 135240, 135243, 135245, 135245, 135247, 135250, 135252, 135253, 135259, 135263, 135265, 135267, 135269, 135289, 135292, 135295, 135296, 135298, 135328 thru 135331, 135341 thru 135344, 135348 thru 135351, 135403, 135404, 135414, 135416 thru 135420, 135428, 135430 thru 135443, 135446, 135449, 135454, 135455, 135458, 135462, 135482, 135502, 135503, 135507, 135512 thru 135517, 135522, 135524 thru 135532, 135536, 135541, 135543, 135544, 135550 thru 135554, 135557 thru 135559, 135561, 135565, 135566, 135568, 135571 thru 135576, 135600 thru 135606, 135608, 135609, 135610, 135615, 135620, 135624 thru 135633, 135635, 135636, 135638, 135640, 135641, 135643, 135652, 135669, 135722, 135753, 135754, 135759, 135760, 135779, 135780, 135781, 135785, 135786, 135796, 135798

10-470-H

SPEC. 1 87002 thru 87009, 87011 thru 87099, 87100 thru 87169

10-470-J

SPEC. 1 85101 thru 85270, 85272 thru 85399, 85400 thru 85416, 85420, 85421, 85424, 85426, 85427, 85432, 85433, 85434

10-470-K

- SPEC. 3 86001 thru 86258, 86260 thru 86310, 86313 thru 86532, 86534 thru 86583, 86585 thru 86611, 86613 thru 86716, 86718 thru 86741, 86744 thru 86798, 86800 thru 86805, 86809 thru 86851, 86854, 86856 thru 86946, 86949 thru 86969, 86971, 86972, 86974, 86975, 86977 thru 86980, 86984, 86985, 86986, 86989
- SPEC. 11 86981, 86982, 86996 thru 87000, 203501 thru 203505, 203508 thru 203511, 203518 thru 203536

10-470-L

- SPEC. 1 90001 thru 90060, 90063 thru 90252, 91236, 91237, 91242, 91674, 91675, 155268
- SPEC. 3 90253 thru 90422, 90424 thru 90458, 90460 thru 90522, 90524 thru 90551, 90553 thru 90559, 90564, 90722, 90918, 91673, 91768, 91954, 91955, 155056, 155528, 155529, 155547, 155894, 155895

- SPEC. 5 90552, 90560 thru 90563, 90565 thru 90596, 90598 thru 90606, 90609 thru 90645, 90647 thru 90668, 90670 thru 90713, 90715, 90718 thru 90721, 90723 thru 90740, 90742 thru 90763, 90766 thru 90833, 90835 thru 90912, 90914, 90916, 90917, 90919 thru 90942, 90944 thru 91043, 91045 thru 91071, 91073 thru 91098, 91100 thru 91153, 91155 thru 91235, 91238 thru 91241, 91243 thru 91260, 91262 thru 91265, 91267, 91268, 91270 thru 91304, 91306 thru 91320, 91322 thru 91355, 91357 thru 91457, 91459 thru 91515, 91518 thru 91564, 91566 thru 91672, 91676 thru 91702, 91704 thru 91716, 91746, 91747, 91790, 91836, 91854 thru 91857, 91872, 91886, 91926, 91930, 91931, 91934, 91939, 91940, 91956, 155011, 155017, 155019, 155020, 155093, 155106, 155108, 155120, 155233, 155236 thru 155238, 155267, 155285, 155530, 155557, 155877
- SPEC. 8 91703, 91718 thru 91745, 91748 thru 91767, 91769 thru 91789, 91791 thru 91795, 91798, 91800 thru 91810, 91812 thru 91835, 91837 thru 91853, 91858 thru 91871, 91873 thru 91885, 91887 thru 91925, 91932, 91933, 91935, 91937, 91938, 91941 thru 91953, 91957 thru 91984, 91986 thru 91999, 155001 thru 155010, 155012 thru 155016, 155018, 155021 thru 155045, 155048 thru 155055, 155057 thru 155087, 155089 thru 155092, 155094 thru 155105, 155109 thru 155112, 155192, 155195, 155230, 155231, 155263 thru 155265, 155293, 155295, 155300, 155373 thru 155378, 155415, 155418, 155421, 155438 thru 155440, 155471, 155473, 155596, 155597, 155684 thru 155687, 155976, 201076, 201155
- SPEC. 9 155118, 155121 thru 155156, 155159, 155162 thru 155170, 155176 thru 155191, 155193, 155194, 155196 thru 155199, 155202 thru 155229, 155232, 155234, 155235, 155239 thru 155262, 155269 thru 155284, 155286 thru 155292, 155294, 155296 thru 155333, 155336, 155338 thru 155349, 155352, 155353, 155355 thru 155372, 155386, 155388 thru 155414, 155416, 155417, 155419, 155420, 155423 thru 155437, 155441 thru 155449, 155452, 155453, 155472, 155482, 155486, 155488, 155491 thru 155493, 155497 thru 155501, 155509, 155511, 155512, 155514 thru 155516, 155519, 155525, 155534 thru 155536, 155538, 155540, 155543 thru 155646, 155573 thru 155580, 155590 thru 155595, 155598 thru 155603, 155606 thru 155617, 155620 thru 155630, 155635 thru 155677, 155688 thru 155762, 155764 thru 155767, 155769 thru 155782, 155784 thru 155789, 155792 thru 155876, 155879 thru 155883, 155885 thru 155888
- SPEC. 13 155379 thru 155384, 155387, 155422, 155454 thru 155468, 155483, 155484, 155502 thru 155508, 155510, 155517, 155518, 155526, 155527, 155531 thru 155533, 155548 thru 155554, 155558 thru 155572, 155583, 155588, 155589, 155604, 155605, 155618, 155619, 155631 thru 155634, 155783
- SPEC. 15 155878, 155884, 155889 thru 155893, 155896 thru 155942, 155944 thru 155973, 155977, 155979 thru 15600, 201001 thru 201021, 201023, 201025 thru 201028, 201031 thru 201052, 201056 thru 201060, 201150, 201156, 201377, 201458
- SPEC. 18 155790, 155791, 201147, 201148, 201153, 201168, 201351, 201425, 201426, 201434, 201459, 201551, 201552
- SPEC. 19 201063 thru 201075, 201077 thru 201082, 201085 thru 201146, 201157 thru 201167, 201171 thru 201199, 201200 thru 201215, 201218, 201219, 201222 thru 201269, 201272 thru 201305, 201308 thru 201347, 201349, 201350, 201352 thru 201357, 201359 thru 201366, 201378 thru 201393, 201395, 201404 thru 201424, 201429 thru 201433, 201435 thru 201453, 201455, 201456, 201465 thru 201505, 201508 thru 201521, 201532, 201533, 201534, 201550, 201604, 201678, 201679
- SPEC. 21 201523 thru 201527, 201529, 201530, 201535, 201536 thru 201549, 201553 thru 201575, 201577 thru 201595, 201597, 201598, 201600 thru 201602, 201605 thru 201671, 201674, 201675, 201677, 201680 thru 201724

10-470-M

SPEC. 1 93001 thru 93028, 93031 thru 93199, 93200 thru 93216, 93228 thru 93232, 93235

10-470-N

- SPEC. 1 95001 thru 95251, 95253 thru 95446, 95453 thru 95455, 95458 thru 95491, 95493, 95494, 95496 thru 95502, 95504 thru 95512, 95514 thru 95625, 95627 thru 95649, 95651 thru 95780, 95784 thru 95789, 95792 thru 95799, 95800, 95801, 95802, 95809, 95810, 95811, 95813 thru 95832, 95834, 95835, 95836, 95838
- SPEC. 7 95650, 95839 thru 95850, 95898, 95901, 95912
- SPEC. 10 95851 thru 95894, 95813
- SPEC. 11 95895, 95896, 95897, 96899, 95900, 95902 thru 95911, 95913 thru 95916

10-470-S

- SPEC. 1 102001 thru 102275, 102532, 102997
- SPEC. 2 102276 thru 102297, 102301 thru 102323, 102329 thru 102357, 102360 thru 102363, 102365, 102368 thru 102425, 102427, 102428, 102433, 102434, 102440, 102443, 102444, 102446, 102449, 102451, 102452, 102454, 102456, 102457, 102461 thru 102472, 102477 thru 102482, 102492 thru 102497, 102503 thru 102507, 102510 thru 102528, 102530, 102531, 102533 thru 102535, 102537 thru 102539, 102541 thru 102544, 102546, 102547, 102555 thru 102569, 102589 thru 102610, 102619 thru 102632, 102635, 102644 thru 102664, 102668 thru 102671, 102675, 102677 thru 102695, 102700 thru 102707, 102709, 102712, 102714 thru 102755, 102761 thru 102768, 102774 thru 102785, 102792, 102794, 102796, 102798, 102800 thru 102820, 102822 thru 102825, 102827, 102836 thru 102842, 102844 thru 102870, 102872 thru 102879, 102881 thru 102883, 102886 thru 102901, 102912, 102914, 102919 thru 102937, 102939 thru 102959, 102961 thru 102967, 102969, 102970, 102994, 102995, 102999, 103002, 103005 thru 103009, 103011, 103013 thru 103018, 103020, 103021, 103023, 103025 thru 103028
- SPEC. 3

 102298 thru 102300, 102324 thru 102328, 102358, 102359, 102364, 102366, 102367, 102426, 102429, 102430, 102432, 102441, 102442, 102445, 102447, 102448, 102449, 102450, 102453, 102455, 102458 thru 102460, 102473 thru 102476, 102483 thru 102491, 102508, 102509, 102536, 102578 thru 102586, 102611 thru 102618, 102633, 102634, 102636 thru 102643, 102665 thru 102667, 102672 thru 102674, 102708, 102710, 102711, 102713, 102756 thru 102760, 102769 thru 102773, 102786 thru 102791, 102793, 102795, 102797, 102799, 102821, 102826, 102828 thru 102835, 102843, 102871, 102880, 102990, 102996, 103001, 103003, 103004, 103010, 103019, 103022, 103024, 103030
- SPEC. 4 102435 thru 102439, 102498 thru 102502, 102529, 102540, 102545, 102548 thru 102554, 102570 thru 102577, 102587, 102588, 102884, 102885, 102902 thru 102911, 102913, 102915 thru 102918

10-470-U

SPEC. 1 115001 thru 115738, 115740 thru 115742, 115744 thru 115792, 115808 thru 115836, 115839 thru 115847, 115854 thru 115864, 115866 thru 115873, 115875, 115884, 115886, 115888, 115890 thru 115907, 115909 thru 115912, 115915, 115916, 115918 thru 115929, 115933 thru 115936

IO-470-V

- SPEC. 1 147001 thru 147099, 147101 thru 147360, 147362 thru 147493, 147497, 147498, 147511, 147519, 147562 thru 147564, 147846, 147851, 147937, 147938, 147948, 147949, 147951, 147953, 147956, 147971, 147977, 148906
- SPEC. 2 147494 thru 147496, 147499 thru 147510, 147512 thru 147518, 147520 thru 147561, 147565 thru 147706, 147708 thru 147845, 147847 thru 147850, 147852 thru 147936, 147939 thru 147947, 147950, 147952, 147954, 147955, 147957 thru 147970, 147972 thru 147976, 147978 thru 147987, 147990 thru 148001, 148877, 148898
- SPEC. 6 149235, 149301, 149395, 149579
- SPEC. 8 147989, 148002 thru 148093, 148095 thru 148386, 148391 thru 148395, 148398 thru 148403, 148405, 148406, 148417, 148420 thru 148422, 148427 thru 148433, 148468, 148511, 148512
- SPEC. 9 148900 thru 148905, 148907 thru 148974, 148976 thru 148997, 148999 thru 149079, 149083 thru 149118, 149121 thru 149234, 149236 thru 149299, 149302 thru 149328, 149331 thru 149359, 149362 thru 149394, 149397 thru 149445, 149447 thru 149450, 149452 thru 149501, 149503 thru 149555, 149558 thru 149578, 149580 thru 149647
- SPEC. 10 148975, 148998, 149080 thru 149082, 149119, 149120, 149300, 149329, 149330, 149360, 149361, 149396, 149446, 149451, 149502, 149556, 149557

.

SECTION II GROUP ASSEMBLY PARTS LIST

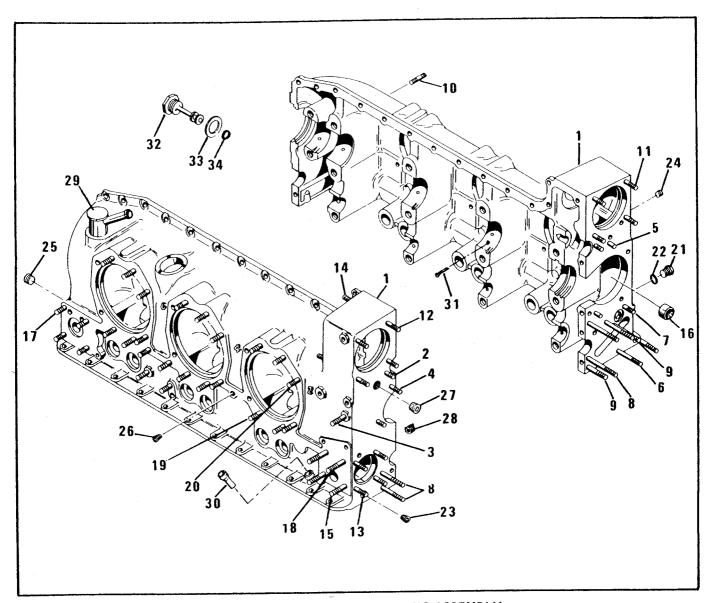


FIGURE 1 - CRANKCASE STUDDING ASSEMBLY MODELS 0-470-A,B,E,G,J,K,L,M,P,R,S,U

FIG.	PART	T								 	 	T	Q	UΑ	N	[]T	Υ	P	EF	}	AS	SSI	EΜ	BL	Υ.	
INDEX	NUMBER		123	45	D	ESC	RIPT	ΠΟΙ	N	 	 	A	В	E	G	J	K	L	М	P	R	S	U	_	\perp	\bot
1-1	539501	Θ	Crank	case S	tuddin	ng As	sembl	y		 	 	.	1					Ì								
-1	539734		Crank											1			- 1					ļ	1		- 1	
-1			Crank												1					1					ı	
-1	642183A1	① ②	Crank	case S	tuddin	ng As	sembl	ly		 	 	. 1				1	1			-						
-1	642182A1		Crank											'				1								
-1	642193A1	2	Crank	case S	tuddir	ng As	sembl	ly		 	 	.							1							
-1	642159A1	②	Crank	case S	tuddir	ng As	sembl	ly		 	 	.									1			l		
-1	642194A1		Crank																			1	1			
-2	401963	t	. Stud	, 1/4	x 1 In	ich L	ong			 	 	. 2		2	2	2	2	2		2	2	2	2			
-2	401870		. Stud										2						2							
-3	402042	†	. Stud	1, 5/18	3 x 1	Inch	Long			 	 	-	1		1					1						
-3	402048	t	. Stud	1, 5/16	3 x 3-	11/16	3 Inch	1 Lo	ng .	 	 	.							1							
-4	401885	ţ	. Stud	1, 5/10	3 x 1-!	5/16	Inch	Lon	g.	 	 	. 2	2 2	2	2	2	2	2	2	2	2	2	2			
-5	531548	•	Dov	vel	. .					 	 	. 2	2	2	2	2	2	2	2	2	2	2	2			
-6	402129	†	. Stud	1, 1/4	x 2-3	/4 In	ch Lo	ng		 	 	. 2	2	2	2	2	2	2	2	2	2	2	2			, [

FIG.	PART		QUANTITY PER ASSEMBLY										\neg				
INDEX	NUMBER	12345 DESCRIPTION	A	В	Ε	G	J	K	L	М	Р	R	S	U	\Box	T	\top
1 -7	401852	† . Stud, 1/4 x 1-13/32 Inch Long	1	1	1	1	1	1	1	1	1	1	2	1	\top		11
-8	402056	t Stud 1/4 v 3.9/16 Inch Long	- 15	15	5	15 1	5	15	5	5	5	5	5	5			
-9	401886	† . Stud, 1/4 x 3-3/16 Inch Long	. 2	2	2	2	2	2	2	2	2	2	2	2		1	
-10	401841	† . Stud, 1/4 x 2-3/32 Inch Long	. 5		5	3	5	5	3		3	3	3	3			
-10	401806	† . Stud, 1/4 x 1-1/8 Inch Long				2					2					1	
-10	401808	t Stud 1/4 x 1-5/16 lnch Long	.	5					2	5		2	2	2			
-11	401885	t Stud 5/16 x 1-5/16 Inch Long	. 6	6	6	6	6	6	6	6	6	6	6	6			
-12	401965	† . Stud, 3/8 x 1-13/32 Inch Long	. 2	2			2	2	2	2		2		2			
-12	402153	† . Stud, 3/8 x 1-5/16 Inch Long	.	1	12	2					2					1	
-13	401814	† . Stud, 5/16 x 1-7/8 Inch Long		4	4												1
-13	402151	† Stud	.			4			ĺ	4	4						
-13	401836	† . Stud, 5/16 x 1-3/8 Inch Long	. 4				4	4	4			4	4	4			
-14	401885	t . Stud. 5/16 x 1-5/16 Inch Long	. 4	4	4	4	4	4	4	4	4	4	4	4		-	11
-15	401861	† . Stud, 3/8 x 1-25/32 Inch Long	.	15	15			1		8					. 1	-	
-15	402066	† . Stud. 3/8 x 1-7/8 Inch Long	. ps							7			15				
-16	537721	Rearing Mondle	1	11	1	1	1	1	1	1	1	1	1	1		-	
-17	401814	† Stud, 5/16 x 1-7/8 Inch Long	.	4	4					4							
-17	401899	† . Stud, 5/16 x 2 Inch Long	. 4			4	4	4	4		4	4	4	4			
-18	401861	t . Stud, 3/8 x 1-25/32 Inch Long	.	1	1			ļ ·		1							
-18	402066	† . Stud. 3/8 x 1-7/8 Inch Long	. [1	1	l	ľ		1					1				
-19	639418-2	(A) . Stud. 7/16 x 1-19/32 Inch Long , Class 3	. [1]	2 12	12	12	12	12	12	12	12	12	12	12			
-19	631867	1 . Stud. 7/16 x 1-19/32 Inch Long	. 112	12	12	12	12	12	12	12	12	12	12	12			
-20	639418-1	4 . Stud, 7/16 x 2-1/16 Inch Long, Class 3	. 24	124	24	24	24	24	24	24	24	24	24	24			
-20	538404	(4) † Stud 7/16 x 2-1/16 Inch Long	. 2	1124	124	24	24	24	24	34	24	24	24	24			
-21	532432	Plug, Drilled Hex Head, 5/8 - 18	. 1	1	1	1	1	1	1	1	1	1	1	1			
-22	AN900-10	& Gasket, Annular	. 11	1	1	1	1	1	1	1	1	1	1	1		-	
-23	629518-1H	. Plug, Pipe, 1/8 NPT	. 1	1	1	1	1	1	1	1	1	1	1	1		- 1	
-24	629518-1H	. Plug, Pipe, 1/8 NPT	. 1	1	1	1	1	1	1	1	1	1	1	1			
-25	2025	. Plug, Pipe, 3/8 NPT	. 7	4	6	4	4	4	4	4	4	4	4	4			
-26	629518-3H	Plug, Pipe, 3/8 NPT Plug, Pipe, 3/8 NPT Plug, Pipe, 3/8 NPT Plug, Pipe, 3/8 NPT	٠ .	1	1	1	1	1	1	1	1	1	1	1		- 1	
-27	629518-3H	Plug, Pipe, 3/8 NPT	. 1	1	1	1	1	1	1	1	1	1	1	1			
-28	MS122162	Insert	. 4	4	4	4	4	4	4	4	4	4	4	4			
-28	MS122122	. Insert	. 1	1	1	1	1	1	1	1	1	1	1	1		١	
-29		Rreather Assembly Crankcase	. 11	11	11	11	1	1	1	1	1	1	1	1		-	- 1
-30	537297	Guide, Oil Gauge Rod		1	1		1	1	1	1							
-30	631927	. Guide, Oil Gauge Rod	.									1		1			
-31 _i	629847	. Nozzle Squirt											6	6		1	
-32	626334	Plug, Special							Ι.	1							
-33	625966	& Gasket							1	1							
-34	AN123866	& Seal, O-Ring	.						1	1						1	

NOTES:

- ① Crankcase for models 0-470-A-B-E-J can be supplied with 1/2" thru bolts by ordering 625566A1 crankcase kit if engine model is specified on your order.
- 2 These are Phase 3 style crankcases. For earlier style, Phase 1 & 2, see Service Bulletin M78-9.
- 3 For early model 0-470-G engines not equipped with oil transfer collars, order 628783A1 crankcase and collar kit.
- **3** Service in accordance with Service Bulletin M72-24.

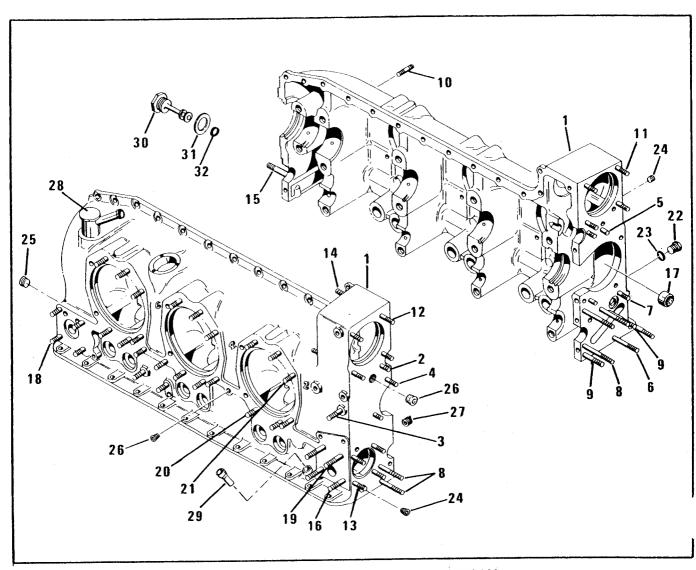


FIGURE 2 - CRANKCASE STUDDING ASSEMBLY MODELS 10-470-C,D,E,F,G,H,J,K,L,M,N,P,R,S,U,V

FIG.	PART			QI	UΑ	N.	ГΙ٦	ΓΥ	F	E	3	A	SSE	ΞM	BL	Υ.		
INDEX	NUMBER	12345 DESCRIPTION	C	D	Ε	F	G	Н	J	Κ	L	М	N	P	R	s	υ	V
2-1	642178A1	① Crankcase Studding Assembly	1				1			1					l			
-1	642172A1	① Crankcase Studding Assembly		1									.				-	- 1
-1	642167A1	① Crankcase Studding Assembly			1										1	וי		- [
-1	642173A1	① Crankcase Studding Assembly				1										l		1
-1	642179A1	① Crankcase Studding Assembly					1	1					ון			١		l
-1	642189A1	① Crankcase Studding Assembly							1	l						-	ı	ı
-1	642177A1	① Crankcase Studding Assembly									1							-
-1	642166A1	① Crankcase Studding Assembly	ŕ									1						- 1
-1	629887	Crankcase Studding Assembly												1		- 1		
-1	642169A1	① Crankcase Studding Assembly															1	
-1	642170A1	① Crankcase Studding Assembly											 					1
-2	401963	t . Stud, 1/4 x 1 Inch Long	2	}		2	2	2	2	2		2	2	_				
-2	401870	t . Stud, 1/4 x 1-1/8 Inch Long		2	2						2			2	2	2	2	2
-3	402042	t . Stud, 5/16 x 1 Inch Long	1			1	1		1	1	1							
-3	401881	t . Stud, 5/16 x 1-1/8 Inch Long		1	1									1	1	1		
-3	402151	t . Stud, 5/16 x 1-1/4 Inch Long						1					1					
-4	401885	t . Stud, 5/16 x 1-5/16 Inch Long	2	2	2	2	2	2	2	2	2	2	2	2	2	2		

FIG.	PART		QUANTITY PER ASSEMBLY											٦				
INDEX	NUMBER	12345 DESCRIPTION	C					н	_								υN	H
		. Dowel	-	, -	2			_					_			_	2	_
2!-5	531548	t . Stud, 1/4 x 2-3/4 Inch Long	12	2	2	2	2	2	2	2	2	2	2	2	2	2	2	5
-6		1 . Stud, 1/4 x 2-3/4 little Long	1	1	1	1	1	1	1	1	1	1	1	-	1	1	2	1
-7	401852	t . Stud, 1/4 x 1-13/32 inch Long	1.	'	•	•	•	'	•	•	'	•	•	1	'	٠,	'	'
-7	401893	5 . Stud, 1/4 x 1-1/4 little Luly	15	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5
-8	402056	t . Stud, 1/4 x 3-9/16 Inch Long	12	2	2	2	2	2	2	2	5 2	2	2	2	2	2	2	
-9		t . Stud, 1/4 x 3-3/16 Inch Long		-	2	<u> </u>	2	3	2	2	-	_	3	2	3	2	-	۲
-10	401841	t . Stud, 1/4 x 2-3/32 Inch Long			2	J	3	2	ა ე	2			2			2	- 1	
-10	401806	t . Stud, 1/4 x 1-1/4 Inch Long	4	5			2			4	5	5	2		4	- 1	5	_
-10	401808	t . Stud, 1/4 x 1-5/16 Inch Long	l _e	2	e	c	ا ا	ا ۽	c	c	6		٦	6	6		6	
-11	401885	t . Stud, 5/16 x 1-5/16 Inch Long	P	P	U	U	U	٥	υ	U	O	2	U	О	ן ס	ם	ן	미
-11	401895	t . Stud, 5/16 x 2-7/16 Inch Long	1,	1	1	2	2	2	2	2	١		2		ا ا			٦
-12	401965	t . Stud, 3/8 x 1-13/32 Inch Long	12	12	2	2	2	2	2	2	4	2			2		2	۷
-12	402153	t . Stud, 3/8 x 1-5/16 Inch Long	١.	١.						١.	١.			2		2		۰
-13	402151	t . Stud, 5/16 x 1-1/4 Inch Long	4	4	4	4	4	4	4	4	4	4	4		4	4	4	2
-13	401814	t . Stud, 5/16 x 1-7/8 Inch Long	١.	١.	١.	١.	١.			١.	١. ا		١. ا	4				
-14	401885	t . Stud, 5/16 x 1-5/16 Inch Long	1	4	4	4	4	4	4	4	4	4			4	4	4	4
-15		t . Stud, 7/16 x 3-1/4 Inch Long					ŀ			1				2				
-16		t . Stud, 3/8 x 1-25/32 Inch Long		8										7			7	
-16	402066	t . Stud, 3/8 x 1-7/8 Inch Long		7	16	16				ŀ	14	16			16	16	8	8
-16	401798	t . Stud. 3/8 x 2 Inch Long			1					1	1			l			.	
-17	537721	. Bearing, Needle								1	1	1	1	1			1	
-18	401899	t . Stud, 5/16 x 2 Inch Long	4	4	4	4	4	4		4	4	4	4		4	4.	4	4
-18	401814	t . Stud. 5/16 x 1-7/8 Inch Long				ľ								4				
-18		t . Stud, 5/16 x 1-3/8 Inch Long							4		'			ŀ			:	
-19	401977	† . Stud, 3/8 x 2-3/32 Inch Long				}					1	ĺ						
-19	401861	† . Stud, 3/8 x 1-25/32 Inch Long				1				l				1			. 1	l
-20	639418-2	② . Stud, 7/16 x 1-19/32 Inch Long , Class 3	12	2 12	12	12	12	12	12	12	12	12	12	12	12	12	12	12
-20	631867 ②	† . Stud, 7/16 x 1-19/32 Inch Long	12	2 12	12	12	12	12	12	12	12	12	12	12	12	12	12	12
-21	639418-1	2 . Stud, 7/16 x 2-1/16 Inch Long , Class 3	24	124	24	24	24	24	24	24	24	24	24	24	24	24	24	24
-21	538404 ②	† . Stud, 7/16 x 2-1/16 Inch Long	24	124	24	24	24	24	24	24	24	24	24	24	24	24	24	24
-22	E00400	Di E/D 10	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
-22	AN900-10	& Gasket, Annular	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
-23 -24	629518-1H	Plue 1/8 NPT	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	
	2025	Diug. 3/8 NPT	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4
-25		Ding 2/9 NDT	12	2	2	2	2	2	2	2	2	2	2	2	2	2		2
-26	629518-3H	Plug, 3/8 NPT	1	4	4	4	4	4	4	4	4	4	4	4	4	4		4
-27 27	MS122162	Inpart	1	1	1	1	1	1	ĺ	1	li	i	1	1	1	1	1.1	1
-27	MS122122	Breather Assembly, Crankcase		1	1	1	1	1	1	1	1	i	1	1	1	1	1 1	1
-28	537505	Colds Oil Cours Pod	'	1	1	1	'		Ι΄	•	١.	i		1				1
-29	537297	. Guide, Oil Gauge Rod	Į	li	'	'					1	١.		<u>ا</u>			1 []	1
-30	626334	Plug, Special		li							i						1 1	1
-31	625996	Gasket, Special		1							1		'				1	1
-32	AN123866	Seal, O-Ring		1'				1	ł	1	1		ļ		1	1		•

NOTES:

- ① These are Phase 3 style crankcases. For earlier style, Phase 1 & 2, see Service Bulletin M78-9.
- ② Service in accordance with Service Bulletin M72-24.

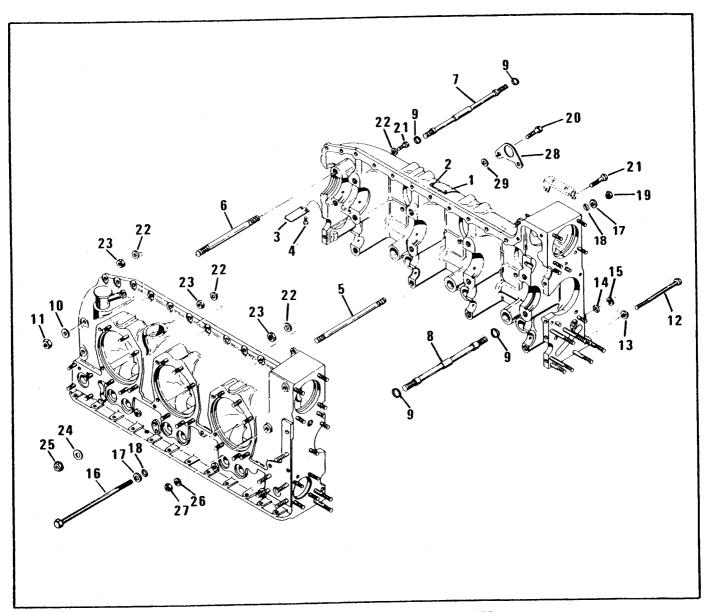


FIGURE 3 - CRANKCASE ATTACHING PARTS MODELS 0-470-A,B,E,G,J,K,L,M,P,R,S,U

FIG.	PART			QI	JΑ	N	П	ΓY	P	PΕΙ	R	Α	SS	ΕN	1BL	.Υ		_
INDEX	NUMBER	12345 DESCRIPTION	A	В	E	G	J	K	L	M	P	R	S	U				
3-1	* * *	Plate, Identification	1	1	1	1	1	1	1	1	1	1	1	1		T		
.		ATTACHING PARTS											l		1			ļ
-2	24764	Screw, Drive	6	R	6	6	6	6	a	6	Б	6	6	6	1			
-2	24704	Sciew, Dive	١	0	U		0	٦	٥					١				
-3	642250 ①	Clip, Spring				1					1							ļ
Ū	0.2200	ATTACHING PARTS																ļ
-4	AN500A10-4	Screw				2					2							ĺ
-4	ANOUUATU-4	* * * *				_												
.5	538944-10.50	Bolt, Crankcase Through	4	4	4	4	4	4	4	4	4	4	4	4				l
-6	538944-8.88	Bolt, Crankcase Through	2	2	2	4	2	2	2	2	2	2		2		Į		ĺ
-0 -7	641930-9.81	Bolt, Crankcase Through	1	1	1	1	1	1	1	1	1	1		1				
-8	641931-10.75	Bolt, Crankcase Through	7	7	7	7	i	7	7	7	7	7	7	7			.	
-8 -9	MS29513-010	O-Ring	1'	1 -	1 -	1'	1 -	1.	16	16	16	16	16	16		- 1		
-10	25171	Spacer, Crankcase Through Bolt			4			4	4		4	4	4	4				ĺ
-10	531001	Nut, Flanged	4	4	4	4		4		4	4	4	4	4				l
-12	627443	Bolt	4	4	4	4		4			4	4	5	5				ı
-13	2473	Washer, Plain, 5/16 Inch	3			3			3		3	3		Δ				ĺ
-14		O-Ring	ľ		1	1		1	1	1	1	1	1	li		1		ĺ
-15	539374	Washer	li	li	1	i	i	1	i	1	1	1	i.	li.		- 1		ł
-16	535810	Bolt	li.	i	1	1	1	li	li	1	1	1	'	'		- 1		l
-16	630693-10.44	Bolt	1	Ι΄	Ι΄.		ľ		'	Ι΄	'		1	1	1	-		ĺ
-10 -17	24239	Washer, Plain	2	2	2	2	2	2	2	2	2	2	1 -	2	11	- 1		
-18		O-Ring	2	2	2	2	2	2	2	2	2	2	2	2				
-19	2441	Nut, Plain Hex, 3/8	1	1	1	2	1	2			1			2				
-20		Bolt	2	2	2	2			2				2					
-20	AN5-13A 3	Bolt	2	1		1	-	-		-	-	Γ						
-21		Bolt	111	1 .	11	11	111	11	11	11	111	11	111	11				
-21		Bolt		2		2		2				2		2				
-21		Bolt												11				
-22	2473	Washer, Flat												24				Ì
-23	2439	Nut, Plain Hex					13	13	13					13				l
-24	25171	Spacer	8		8		8		8	8		8		8	i l			
-25	531001	Nut, Flanged, 7/17	8	8	8		8	8	8	8		8		8				
-26	538989	Washer, Plain	4	4	4	4	4	3	4		4	4		4				
-27	634511	Nut, Plain	4	4	4	4	4	3	4	4	4	4	4	4				
-28	538650	Lifting Eye			1	1	1	1			1	1		1				
-29	538949	Spacer, Crankcase-to-Lifting Eye	2		2					2		2		2				
-20	JUUUTU	opaco, orankouse to Enting Lys	1		-			1						1				

- *** Order Identification Plate in accordance with Service Bulletin M75-5.
- ① Early crankcase design uses PN 626990. Spring Clip 642250 and 626990 are not interchangeable. See Service Bulletin M78-3.
- ① These bolts are used and supplied with Phase 3 crankcases. See Service Bulletin M78-9.
- 3 These bolts are used with Phase 1 & 2 crankcases. See Service Bulletin M78-9.

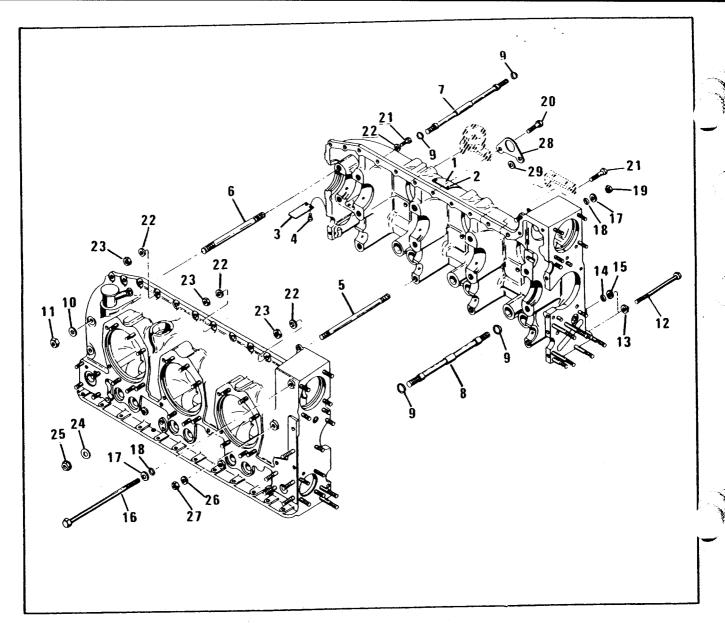


FIGURE 4 - CRANKCASE ATTACHING PARTS MODELS 10-470-C,D,E,F,G,H,J,K,L,M,N,P,R,S,U,V

FIG.	PART	•	1	u	UP	111	1 1	ΙY	r	E	٦_	A	22	LIV	/IBI	LY		
INDEX	NUMBER	12345 DESCRIPTION	C	D	Ε	F	G	Н	J	K	L	М	N	Р	R	S	U	V
4-1	* * *	Plate, Identification	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
		ATTACHING PARTS																
-2	24764	Screw, Drive	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6
-2	24704	* * * *																
-3	642250 O	Clip, Spring	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
		ATTACHING PARTS																
-4	AN500A10-4	Screw	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
•	,,	* * *																_
-5	538944-10.50	Bolt, Crankcase Through											4					
-6	538944-8.88	Bolt, Crankcase Through		2	2	2	2	2		2			2				2	
-7	641930-9.81	Bolt, Crankcase Through	1	1	1 1	1			r	•		1	1]	1	1	1	1
-8	641931-10.75	Bolt, Crankcase Through	7		7		7					7		1/	1	/	/	!
-9	MS29513-010	0-Ring		i i													16	
-10	25171	Spacer, Crankcase Through Bolt	4		4	4		4	4	4	4	4	4	4		4	4	
-11	531001	Nut, Flanged		4				4	4	4	4	1	•				4	
-12	627433	Bolt, Drilled Hex Head	4			4		4	4		4						4	
-13	2473	Washer, Plain	3	:	3	3	3	3	3	3	3	3	3	3	3		3	4
-14	25328 &	0-Ring	1	i	1	1	1		1		1	!!	1		!	1		1
-15	539374	Washer, Plain	1	1	1	١.	1	1	1	1			1		, ,	1	'	1
-15	401506	Washer	١.	١.		1		١.							١,			1
-16	535810	Bolt	1	1 .	1	1		1					1			1	,	•
-17	24239	Washer, Plain	2		2	2		2				2						2
-18	AN123862 8	0-Ring	2	ı	2			2				2		2	2	2		
-19	2441	Nut. Plain Hex, 3/8 Inch	1	1	1	1	, .	1	('	1	١.	1		1	1	1	1	١
-20		Bolt	2		2	2	1	2	2	2	2	2	2	2	2	2	2	2
-20	AN5-13A @	Bolt	1	1	1	1	1	1	1	1]		1	!		1		1
-21	AN5-14A 2		1	1 .	1	1	1	1	1	1	1		1	1		1	'	1
-21		Bolt	2		2	2		2				2		2	2	2	9	2
		Bolt	9		9			9			9				9		- 1	_
	AN5-12A 3	Bolt	9			9								ſ	9	1	9	-
	AN5-12A	Bolt	1			1		1			1			1	, -		, ,	•
-22	2473	Washer, Flat	Ι	24	24	24	24	24	24	24	24	24	24	24	24	24	24 14	2 4
-23	2439	Nut, Plain Hex	114		1	1	1								1			
-24	25171	Spacer	8	8	B	8	8	8	8	8	8			8			8	
-25	531001	Nut, Flanged	8	8	8	8	8	8	ß	8	8	B	8	Ö	ď	Ö	8 5	
-26	538989	Washer, Plain	4			4		4		4	4	4	4	4	4			
-27	634511	Nut, Plain	4		1	4		4			4			4				1
-28	538650	Lifting. Eve	1			1			1	1 -			1				1 1	
-29	538949	Spacer, Crankcase-to-Lifting Eye	1	1	1	1	1	1	1	1	1		'	'	['			. •

- *** Order Identification Plate in accordance with Service Bulletin M75-5.
- Early crankcase design uses P/N 626990. Spring clip 626990 and 642250 are not interchangeable. See Service Bulletin M78-3.
- ① These bolts are used and supplied with Phase 3 style crankcases. See Service Bulletin M78-9.
- 3 These bolts are used with Phase 1 & 2 style crankcases. See Service Bulletin M78-9.

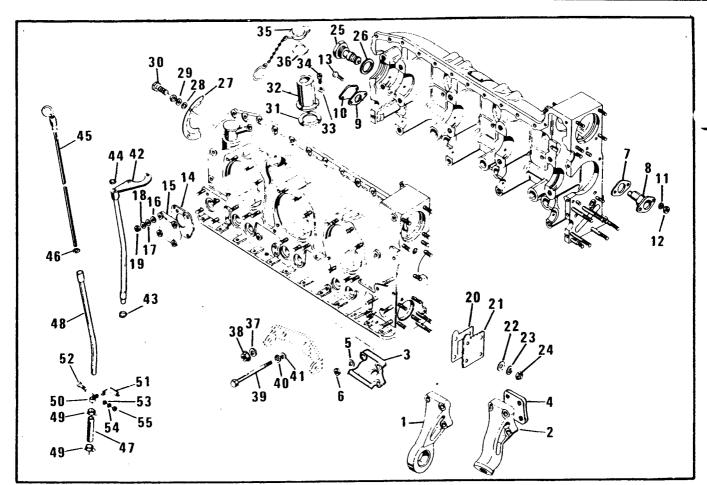


FIGURE 5 - CRANKCASE ASSOCIATED PARTS MODELS 0-470-A,B,E,G,J,K,L,M,P,R,S,U

FIG.	PART					_	•	•••		ΤY		PEI			_		1BL	Υ.	_	ľ
INDEX	NUMBER		12345	DESCRIPTION	A	В	E	G	J	K	L	М	Р	R	S	υ				
5-1	534470	0	Bracket, Engine	Mounting	4	4	4		4											
-2	539518	①	Bracket, Engine	Mounting						4	4			4	3	3				
-2	628257	0	Bracket, Engine	e Mounting, Cylinder No. 2	Ì				ĺ						1	1				
-3	539914	①		Mounting								4						Ì		
			Į.	ATTACHING PARTS			ļ				١.									
-4	632357		Spacer		1					1					1	1				
-5	539058				116	16	16		16	16	16	16		16	16	16				
-6	2441		•		16	16	16		16	16	16	16		16	16	16				
			,	* * * *		ł						ŀ	l	1						
-7	534740	&	Gasket		1	1	1	1	1	1	1	1	1	1	1	1				1
-8	534728			Support	1					1	1	1	1	1	1	1				
-9	629202	②		ole Cover	1	1					1	1		1	1	1				
-10	642914	2	Cover, Cam Ho	le	1	1	1	1	1	1	1	1		1	1	1				
			Į.	ATTACHING PARTS																
-11	MS35338-44				4	4	4	4	4	4	4	4	4	4	4	4				1
-12	2437				12	2	2	2	2	2	2	2	2	2	2	2				140.
-13	626487	2	Screw		2	2	2	2	2	2	2	2		2		2				
				* * * *																
-14	641651	&	Gasket		1	1	1	1	1	1	1			1	1	1				
-15	639997			r Pad	1	1	1	1	1	1	1	1	1	1	1	1				I
			Δ	ATTACHING PARTS					·										l	
-16	22535			nch	8	8	8	8	8	8	8	8	8	8	8	8				١.,
-17	2473				Ĭ,	4	1	Ĭ	1	1	1	A	4	4		4	1			ſ

FIG.	PART		Π	QI	IJΑ	N.	TI.	ΤY	P	EI	R	A	SS	EM	IBL	 Y	\neg
INDEX	NUMBER	12345 DESCRIPTION	A	В	E	G	J	Κ		М		R			\Box	П	\exists
5-18	MS35338-45	Washer, Lock	4	4	4	4	4	4	4	4			4				
-19	2439	Nut, Plain	4	4	4	4	4	4	4	4	4	4	4	4			
		* * * *															
20		Gasket	1					· 1	1				1				
-21	534942	Cover, Fuel Pump Pad	'				1	1	1			,	'	,			
		ATTACHING PARTS															
-22	2473	Washer, Flat	4						4					4			ı
-23	MS335338-45	Washer, Lock	4				4	4					4	4			il
-24	2439	Nut, Plain	4				4	4	4		į	4	4	4			i İ
		* * *	1.	ļ													
-25	534445	Temperature Control Valve	1			1				4		,	1	,			
-25	639304	Temperature Control Valve	1	1	1		1	1				1					
-26	625966	. Gasket		1	1 -	1 .	1	1	1	1		1	l	1			
	EQ6491	Kit, Oil Seal Retainer	op	op	op	op	op	ор 2	op	op	op	op					
-27	641361	. Retainer, Oil Seal	Z	2	2	2	2	2	2	12	2	2					
		ATTACHING PARTS					_										
-28	AN960-10L	Washer, Flat	4	4	4	4	4	4	4	4	4						
-29	.22910	. Washer, Lock	4	4	4	4	4	4	4	4	4	4					
-30	MS20074-03-03	. Bolt	4	4	4	4	4	4	4	4	4	4		}			
		* * *												,			
-31		Gasket	11	1	1 '	1	1	1		1	'	1	1	1			
-32	538773	Neck Assembly, Oil Filler	1	1,	1	1	'		,	1	1	'	'				
	538801	Neck Assembly, Oil Filler		1		1				1	1						
		ATTACHING PARTS	1														
-33	MS35338-44	Washer, Lock		1									3	3		-	ļ
-34	AN500-416-8	Screw	3	3	3	3	3	3	3	3	3	3	3	3	1		
		* * *	١.						1								
-35	640620-8	Cap Assembly, Oil Filler	1	1	1		1	'		1	'	1	'	'			
-35	640620-4	Cap Assembly, Oil Filler	1.	1		1		1	1	1	1	1	,	1			
-36	635134	. Gasket	1					1					'	'			
-37	2794	Washer, 17/32	1		1							1					
-38	538969	Nut, Flanged	l'i		li	1											
-39 -40	627433 MS35333-41	Bolt, 5/16 x 5-1/4 Inch Long	li		1		1	1	1		1	1					
-40 -41	2473	Washer, Plain	1 -				1	1		1	1	li					
-42	625213	Tube Assembly, Oil Gauge Rod	'	'	Ι.	1	1	'	Ι.	Ι΄	1	1					
-43		O-Ring				1		1			1			ĺ			
-44	537299	Ring, Oil Gauge Lock	1	1	1	1	1	1	1	1	1	1	1	1			
-45	* * *	Rod Assembly, Oil Gauge	1		1			1		1	- 1	1	1	1			
-46	AN123860 &	. O-Ring	1	1	1			1				1	1	1			
-47	631928	Hose										1	1	1			
-48	632151	Housing										1	1	1			
-49	36151R	Clamp			1.							2	2	2			
-50	631266-1	Clamp										1	1	1 -			
-51	632149	Bracket										1	1	1			
		ATTACHING PARTS										'					
-52	22904	Screw										1	•	1			
-53	2471	Washer, Plain						-				1		1			
-54	22910	Washer, Lock										1	1				
-55	13XX1896	Nut, No. 10										1	1	1			
		•	•														

^{***} Order number stamped on rod. If none supply engine model, name of airplane and year manufactured.

① See Section VI for Specification Applications.

These parts are found on Phase 3 crankcases. See Service Bulletin M78-9.

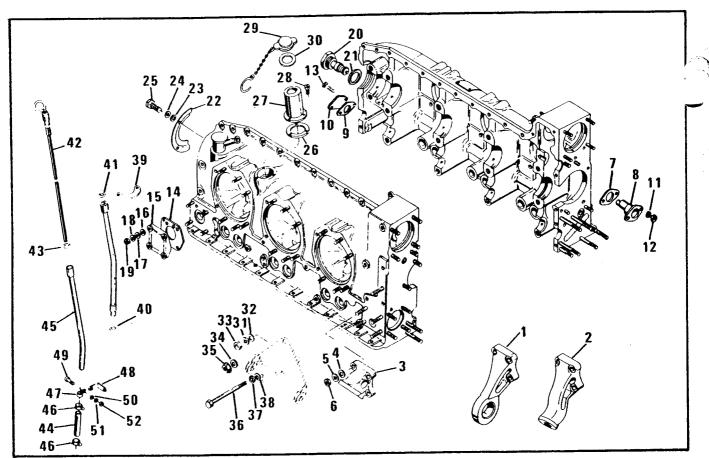


FIGURE 6 - CRANKCASE ASSOCIATED PARTS MODELS 10-470-C,D,E,F,G,H,J,K,L,M,N,P,R,S,U,V

																				دير.
FIG.	PART						Q	UA	N1	IT	Υ	PE	R	Α	SS	ΕN	1B	LY	,	
INDEX	NUMBER		12345	DESCRIPTION		C	D	E	F	G	H J	K	L	M	N	Р	R	S	U	\overline{V}
6-1	534470	1	Bracket, Engine	Mounting					4							2				- 1
-2	539518	1	Bracket, Engine	Mounting		1		4		4			4	3			4	4		
-2	628257	1	Bracket, Engine	Mounting										1						ı
-3	539914	1	Bracket, Engine	Mounting				4											3	3
-3	628008	1	Bracket, Engine	Mounting															1	1
				ATTACHING I	PARTS						١									.
-4	539058		Washer, Plain .						16					16	1			16		
-5	MS35338-46		Washer, Lock .						16			ı		16						16 l
-6	2441						16	16	16	6			16	16		8	16	16	16	16
				* * * *	•			l				-								
-7	534740	&	Gasket			1	1	1	1			1	1	1	1	1	1	1	1	1
-8	534728		Pin, Idler Gear S	Support		1	1	1	1	1	1 1	1	1	1	1	1	1	1	1	1
-9	629202	②	Gasket, Cam Ho	le Cover					1			1	1	1	1	1	1	1	1	1
-10	642914	2	Cover, Cam Holi	e		1	1	1	1	1	1 1	1	1	1	1	1	1	1	1	1
				ATTACHING I						ı			l							
-11	MS35338-44		Washer, Lock .				4	4	4	4	4 4	1 4	4	4	4	4	4	4	4	4
-12	2437		Nest			12	2	2	2	2	2 2	2 2	2	2	2	2	2	2	2	2
-13	626487	2	Screw			2	2	2	2	2	2 2	2 2	2	2	2	2	2	2	2	2
				* * * *						١										i l
-14	641651	&	Gasket			1	1	1	1	1	1 1	1	1	1	1	1	1	1	1	1
-15	639997		Cover			1	1	1	1	1	1 1	1	1	1	1	1	1	1	7	
				ATTACHING I	PARTS														! 	
-16	22535		Washer, 5/16 .			4	4	4	4	4	4 /	1 4	4	4	4	4	4	4	4	4

	Г			T-															
FIG.	PART	-			Q	U	٩N	ITI	ΤY	/ !	PE	R	Α	SS	ΕN	ИB	LY	1	- 1
INDEX	NUMBER		12345 DESCRIPTION	Tr.	D						Īκ				P				137
L									.	-	+	+				_	-	-	V
6-17	2473		Washer, Flat		4			4		4	4	4	4	4	4	4	4		4
-18	MS35338-45		Washer, Lock	4	4										4	4	4	4	4
-19	2439		Nut	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	
			* * * *					l		ĺ								'	'
-20	534445		Temperature Control Valve											İ			1		
-20	639304		Temperature Control Valve	1		1	1	1	1	1	1			1	1	1	'		
-21	625966			1			1				1			ì	ł	1			
-21			Gasket	1.											1 -	1			
	EQ6491		Kit, Oil Seal Retainer	op	op	op	op	op	op	op	op	Op	op	op	op	op	ор	op	ор
-22	641361		. Retainer, Oil Seal	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
			ATTACHING PARTS																
-23	AN960-10L			1	4	1	1	1	1	1	1	1	1	1	1	1	1	1	,
-24	22910		· · · · · · · · · · · · · · · · · · ·	4		4			4			4					•	1	
-25		`	Washer, Lock												4		4		4
-25	MS20074-03-03	3	. Bolt	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4
			* * *	1	1.							-							
-26	538804	&	Gasket	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
-27	538773		Neck Assembly, Oil Filler				1							ł			l		
	538801		Neck Assembly, Oil Filler		1	1	ľ	1	1	ŀ			1		1	1	1	1	1
	627166		Neck Assembly, Oil Filler	1				l		1	1	1		1				1	
							1	Į									l		
20	A NIFOO 440 O		ATTACHING PARTS														_		
-28	AN500-416-8		Screw	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3
			* * * *							ł				ĺ					
-29	640620-5		Cap Assembly, Oil Filler	1						1	1		ĺ	1	1		l		
-29	640620-8		Cap Assembly, Oil Filler	İ	1	1	1	1	1			1	1		1	1	1	1	1
-30	635134		. Gasket	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
-31	MS35338-45		Washer, Lock	1	1	1	1	1	1	1	1	1	1	1	1	1	1		
-32	2473		Washer, 11/32	1		1	1	1					1	1	1	1	1		1
-33	2439		Nut, 5/16	1		ĺ	1						i	, -	1	1	1	ĺ	'
-34	2794			1'	1	i	'	1	,	'	'	'	1	•	1		1		4
			Washer, 17/32		'	1		1					!		!	1	1		
-35	538969		Nut, Flanged, 1/2					1				ľ			1	1			
-36	627433		Bolt	1	1]]	1	1	1	1	1	1	1	1	1	1		1	1
-37	MS35338-45		Washer, Lock	[]			1								1		1		
-38	2473		***************************************	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
-39	625213		Tube Assembly, Oil Gauge Rod Guide			ļ			1										
-39	627164		Tube Assembly, Oil Gauge Rod Guide	1						1	1			1					
-39	628543		Tube Assembly, Oil Gauge Rod Guide									1							
-40	AN123865	&	0-Ring	1					1	1	1	1		1					
-41	537299		Ring, Oil Gauge Lock	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
-42	* * *		Rod Assembly, Oil Gauge	li			1					i.				4 1		1	
-43	AN123860	Q.			1							•		1 '			*	1	' I
-40			• O-Ring	'		'	'	'	'	•	•	•	'	'	'		1	' '	
A A	25328	ά	. O-Ring														1		
-44	631928		Hose														1	•	
-45	631915		Housing, Extension														1		
-46	36151R		Clamp														2		
-47	631266-1		Clamp														1		
-48	631275-1		Bracket														1		
			ATTACHING PARTS																
-49	22904		Screw														1		
-50	2471			1													1		
			Washer, Plain														1		
	22910		Washer, Lock														1		
-52	13XX1896		Nut, No. 10														,		
NOTES	٠,			F	ı	r !	. 1		ı	' '	•	' '	, 1	1	' '	. 1	'		•

^{***} Order number stamped on rod. If none, supply engine model, name of airplane and year manufactured.

① See Section VI for Specification Applications.

② These parts are found on Phase 3 crankcases. See Service Bulletin M78-9.

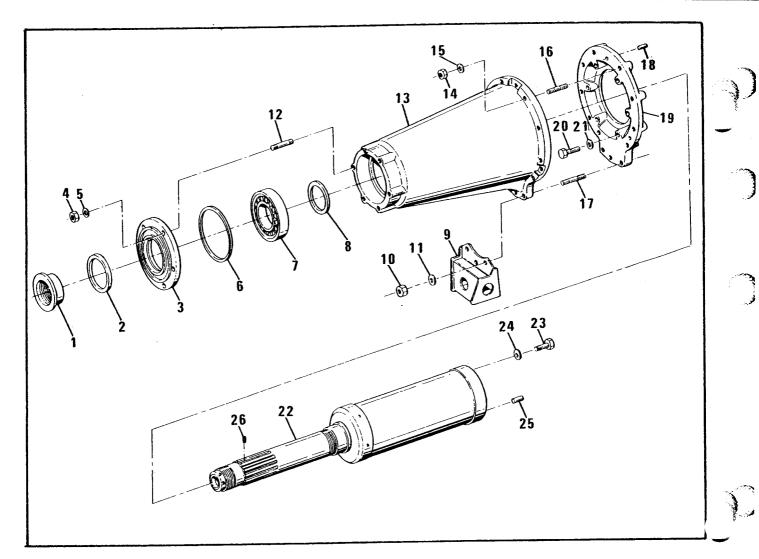


FIGURE 7 - CRANKCASE AND CRANKSHAFT EXTENSION ASSEMBLIES MODEL 10-470-P

[FIG.	PART				Q	U/	N	TI.	TY	' F	PEI	3	A	SSI	ΕN	IBI	Υ.Υ		\neg
	INDEX	NUMBER		12345 DESCRIPTION	C	D	E	F	G	Н	J	K	L	M	N	P	R	s	U	V
	7-1	629885 532873	1	Nut, Bearing Retaining												1 1 1				
	-3	531141	Θ	Cover, Extension Housing												•				
	-4 -5	2441 2274		Nut, Plain, Hex												6 6				
	-6 -7 -8 -9	AN6230-26 (538135 538136 629675	00	O-Ring												1 1 1				
	-10 -11	2443 25171		ATTACHING PARTS Nut, Plain, Hex												3				
	-12 -13	628245 401861 No Number		Adapter and Housing Assembly, Prop. Ext Stud, 3/8 x 1-3/4 Inch Long												1 6 ns				
	-14 -15	2441 401507		ATTACHING PARTS . Nut, Hex, 3/8											l i	8				
	-16 -17 -18 -19	402066 401830 532683 No Number	t	Stud, 3/8 x 1-7/8 Inch Long												8 1 3 ns				
	-20 -21	539961 401507		ATTACHING PARTS Bolt, 3/8 x 1-3/4 Inch Long												6 6				
	-22	538127	0	Extension, Crankshaft Assembly												1				
	-23 -24	AN78-10 AN960-816L		ATTACHING PARTS Bolt, Drilled Hex Head												6 6				
3	-25 -26	531494 22366		. Dowel											1 1	2				
	•																			
	-																			
	NOTE ①	: No longer av	railab	ole.																

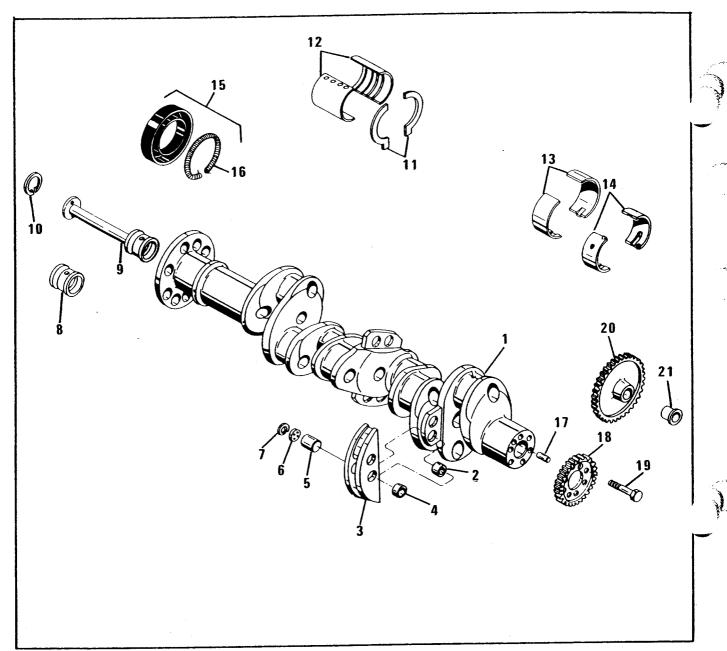


FIGURE 8 - CRANKSHAFT ASSEMBLY MODELS 0-470-A,B,E,G,J,K,L,M,P,R,S,U

FIG.	PART	QUANTITY PER ASSEMBLY
INDEX	NUMBER	12345 DESCRIPTION ABEGJKLMPRSU
, L		
8-1	633225	Clankshall and Damper Assembly
-1	633227	Ciankshart and Damper recensery 111111111111111111111111111111111111
.1		Clairkshart and Damper Assembly
-1		Clankshart and Damper Assembly
-1		Cranksnatt and Damper Assembly
-1	641905	Crankshaft and Damper Assembly
_	00000	† . Bushing, Crankshaft Damper
-3	639195	Counterweight Assembly
-3	639197	
-4	639193	Dusting, Counterweight
-5	630261-40	
-5	630261-37	
· 5	630261-35	
-5	630261-36	
-5	630261-39	
-6	635623	Plate
-7	629104	Snap Ring
-8	633189	Plug, Oil Control
-9	633254	. Tube Assembly, Uil Transfer
-10	522188	. Retaining Ring
-11	637579	Thrust Washer
-12	633136 & † 9	
-13	642720 & † 9	D Bearing, Main
-14		Dearing, Connecting Rod
-14	• • • • • • •	† Bearing, Connecting Rod
-15	641250	Seal Assembly, Oil
-16	641306	. Spring, Oil Seal
-17	536563	t Dowel
-18	536421	Gear, Crankshaft
		ATTACHING PARTS
-19	536379	Screw, Drilled Hex Head
		* * * *
-20	534757	Gear Assembly, Idler
-21	534741	. Bushing, Idler
1		

- ① Service earlier crankshafts and bearings in accordance with Service Bulletins M78-9 and M74-12.
- ② Use bearing 530383 and rod assembly A36121. See Service Bulletin M74-12 Rev. 1.

0-470-G engines with modernized crankshafts require two (2) each 630464 front main and six (6) each 537848 rear and intermediate bearings.

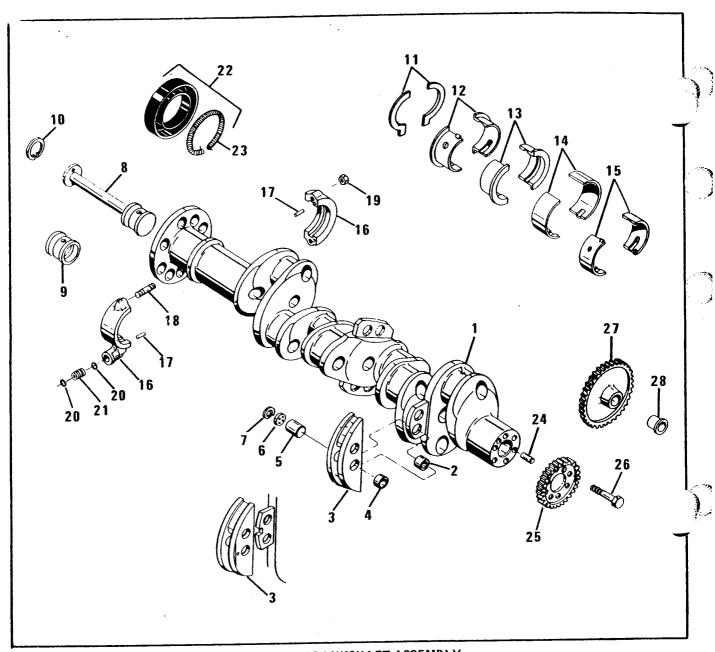


FIGURE 9 - CRANKSHAFT ASSEMBLY MODELS 10-470-C,D,E,F,G,H,J,K,L,M,N,P,R,S,U,V

FIG.	PART															ER			SSE				_	
INDEX	NUMBER		12345	DE	SCRI	PTION	 		 C	D	E	F	G	H	J	<u> </u>	L	M	N	P	R	S	Νļ	V
9-1	633258		Crankshaft an	d Dan	nner As	ssembly			 1				ŀ											
-1	630977	(1)	Crankshaft an											1		ľ			-		1	ı		
-1	633246		Crankshaft an								ļ	ĺ		- 1	1	1	1	-			- 1			
-1	630886	(1)	Crankshaft an													-	1						1	
-1	630932	Õ	Crankshaft an								Į		1	ļ	-				1					١
-1	630927	ŏ	Crankshaft an							1	1	1	1		-			1		-	İ	1		
-1	629882		Crankshaft an							li			i	l	-	- 1	١			1	1			
-2	350998	t	Bushing, Cra						8	8	8	8	8	8	8	8	8	8	8		8		8	8
-3	639195	•	. Counterwei						4	4	4	4	4	4	2	2	4	4	4	2	4	4	2	2
-3	639196		. Counterwei	ght As	ssembly	1															-		2	2
-4	639193		. Bushing, (Counte	erweiah	nt			 4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4
-5	630261-40		. Pin											-		ļ	ĺ			4				
-5	630261-35		. Pin						8	8	8	8	8	8	2	2	4	8	8		8	8	4	4
.5	630261-37		. Pin						1						2	2	4	.	- [- [2	2
-5	630261-39		. Pin										ı								١		2	2
-6	635623		Dioto						16	16	16	16	16	16	8	8	16	16	16	8	16	16	16	16
-6 -7	629104		. Snap Ring						 16	16	16	16	16	16	8	8	16	16	16	8	16	16	16	16
-8	633254	2	. Tube Assem	hlv (il Tran	 ocfer			 1					ĺ									-	
-o -9	633189		. Plug, Oil Co	ntrol),, ,, a,	13101				1	1	1	1	1	1	1	1	1	1		1	1	1	1
-5 -10	522188		. Retaining R	ina					 1				ŀ			-	ı				- [
-10	637579		Washer, Thrus	iliy . et					 4	4	4	4	4	4	4	4	4	4	4		4	4	4	4
		ρ. t	Bearing, Main	Fland	red							١	Ì						}	2			Ī	
-12 -13		& †	Bearing, Main	Flan	ned								ŀ						ŀ	2	-	- 1		١
-13 -14	642720 &		Bearing, Main	, , , , , , , ,	yeu		<i>.</i>		 10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10
	530383	† ③	Bearing, Conr	 Action	n Rod				 12				12		12			ł	- 1	12	12			
-15 -15	630826	, ,	Bearing, Com	octine	g Nou . s Rod	<i></i>			12	12	12	12	12	12	12	12	12	12	12	ı	İ	12	12	12
-15	626739	+	Collar Assemb	icciniy Nv	gnou					1			1				1	1	1		1	1	1	1
-16	628198		Collar Assemi											ļ				Ī		1				
	626889	,	. Dowel						2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
-17 -18	401893	+	. Stud, 1/4 x	1.1/4	Inch I	ong			 2	2		2	2	2	2	2	2	2	2		2	2	2	2
-18	401898		. Stud, 1/4 x									ı			ı	-				2				
-18	632443-4	'	. Nut, Marsde	n Lor	-k	Long			 2	2	2	2	2	2	2	2	2	2	2	2	2		2	2
-19	MS9021-011	Q,	O-Ring							2	2	2	2	2	2		2	2	2	2	2	2	2	2
-20 -21	642249	Œ	Cloove					 .	 1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
-22	641250		Cool Accombly	, na					 1	1	1	1	1	1	1	1	1	1	1		1	1	1	1
-23	641306		. Spring, Oil	Seal					 יו	, ,		1	1	1	1	1	1	1	1		1	1	1	1
-24	536563	t	Dowel						 11	, ,			1		1	1	1	1	1	1	1	1	1	1
-25	536421	•	Gear, Cranksh	naft .					 1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
23	330121		Guar, Granner			ACHIN														ı				
200	E00070		Screw, Drilled	ł Unv					l s	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6
-26	536379		Screw, Dimet) HEX	пеаи	* * *			 ľ							_	-					- }		
27	E247E7		Gear Assembl	v Lali	۵r				 1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
-27 29	534757 524741		. Bushing, Id	lor Co	or				 11	1	1	1	1	1	1				1			1	1	1
-28	534741		. Dusiniy, Id	ici UE	ul				 1											-				
													.								ļ			
NOTES:									1				ŀ	ļ	-	l	ŀ		1	ŀ	.	ļ	İ	ļ

1) When engine serial number on these models is not prefixed by "CS", order the C/S assembly suffixed with "A1", (ie 630977A1), 6 each 628752 connecting rods and 12 each 630826 connecting rod bearings.

3 625475A1 tube assembly used on earlier 10-470-C crankshafts.

Service earlier bearings in accordance with Service Bulletin M78-9.
 Use bearing 530383 with rod assembly A36121. See Service Bulletin M74-12 Rev. 1.

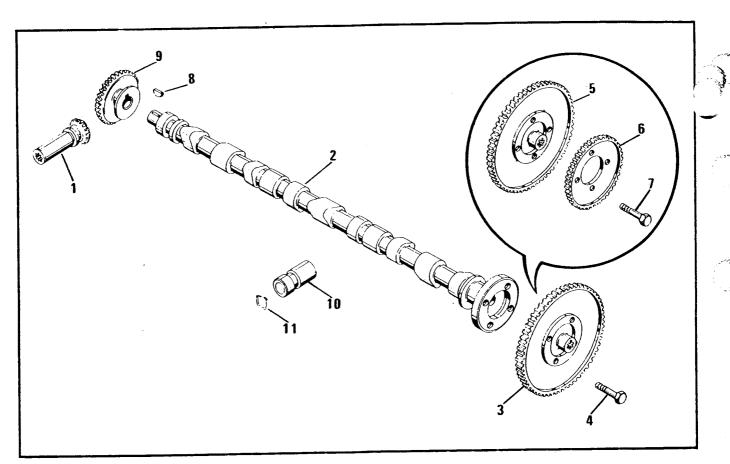


FIGURE 10 - CAMSHAFT ASSEMBLY MODELS 0-470-A,B,E,G,J,K,L,M,P,R,S,U

FIG.	PART	QUANTITY PER ASSEMBLY	_
INDEX	NUMBER	12345 DESCRIPTION ABEGJKLMPRSU	_
10-1	538076	Gear, Governor Drive Bevel	
-2	535661	† Camshaft	
-3	535660	Gear, Camshaft	- 1 -
-3	631845	Gear, Camshaft	-
-4	535737	ATTACHING PARTS Screw, Drilled, Hex Head	
-5	537432	Gear, Camshaft	
-6	535662	Gear, Cam Cluster	1
		ATTACHING PARTS	j.
-7	535666	Screw, Drilled, Hex Head	
-8	MS35756-8	Key, Woodruff	
.9	534655	Gear Governor Drive [1 1 1 1 1 1 1 1 1 1	
-10	628488	Lifter Assembly, Hydraulic	1
-11	641862	① . Ring, Snap	٥

The new configuration of the 628488 hydraulic lifter incorporates this new snap ring P/N 641862 (red in color). However, snap ring P/N 628491 must be used with the older configuration of the lifter. The most discernible difference between the old and new lifter is in the ball socket. The old design socket tapered from the center nearly to the 0.D. The newer of that must use the new snap ring (641862) shoulders roughly half-way between the center and 0.D. The socket of diameter differences are 1/16" for the old design and 1/8" for the new.

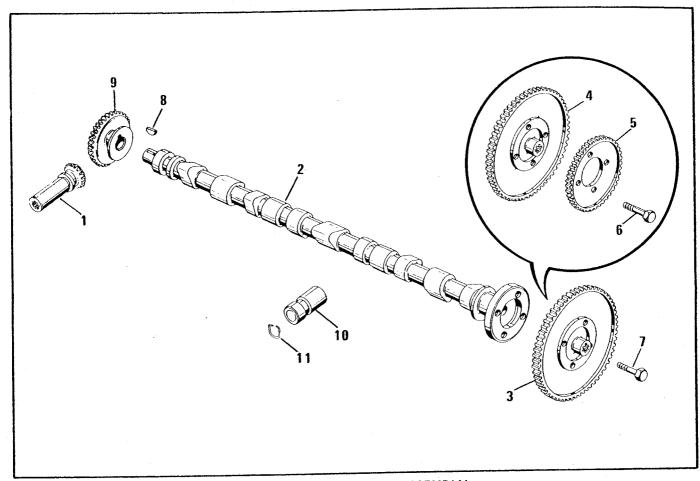


FIGURE 11 - CAMSHAFT ASSEMBLY MODELS 10-470-C,D,E,F,G,H,J,K,L,M,N,P,R,S,U,V

		MODELO IO 110 Oppi-ja ja ja ja ja ja ja ja ja																<u> </u>
FIG.	PART			Ql	JΑ	N.	TI	ΤY	F	EF	3	A:	SS	ΕN	BL	Υ_		
INDEX	NUMBER	12345 DESCRIPTION	c	D	E	F	G	Н	J	K	L	М	N	Р	R	S	U	٧
11-1	538076	Gear, Governor Drive Bevel	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
-2	535661	† Camshaft	١,	'\	•	'	•	'	1	1	'	'	,	•			•	
-3	535660	Gear, Camshaft	1	1	1	1	1	1	'	'	1	1	1	1	1	1		
-4	537432	Gear, Camshaft	•	'		'	'	'		1	'		•	١.			1	1
-4	631845	Gear, Camshaft			1	1	1	1	1	1	1	1	1	1	1	1	1	1
-5	535662	Gear, Cam Cluster	'	1	1		'	1	'	'	'	'	'	'	'	•	ľ	
		ATTACHING PARTS								ļ		١.	١.			,		
-6	535666	OCICIA DILLION LLOW LLOW	4	4	4	4	4	4			,	4	4	4	4	4	4	4
-7	535737	Screw Drilled Hex Head							4	4								
		* * *		,	4			١,		1	1	1	1	1	1	1	1	1
-8	MS35756-8	Key, Woodruff	1	1	1	1			;			1	1	1	1	1	1	1
-9	534665	Case Covernor Drive	1		1	1	1	110				12	12	12	12	12	12	12
-10	628488	Lifter Accomply Hydraulic	1 4	12	1 2	1.2	1 * *	4 4	14	1 1 2	1/2	1	12	12	1	1	1	11
-11	641862	① . Ring, Snap	1		1		1		'		'	'	'	'	"	•	'	•

The new configuration of the 628488 hydraulic lifter incorporates this new snap ring P/N 641862 (red in color). However, snap ring P/N 628491 must be used with the older configuration of the lifter. The most discernible difference between the old and new lifter is in the ball socket. The old design socket tapered from the center nearly to the O.D. The newer design that must use the new snap ring (641862) shoulders roughly half-way between the center and O.D. The socket oil hole diameter differences are 1/16" for the old design and 1/8" for the new.

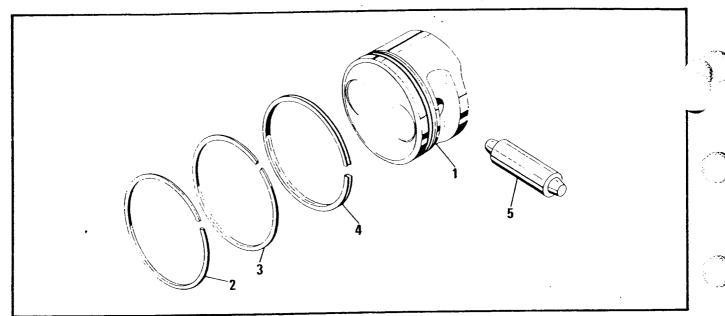


FIGURE 12 - PISTON AND RING ASSEMBLY MODELS 0-470-A,B,E,G,J,M,P

																				_
FIG.	PART						Q	UΑ	N	TIT	Υ	PE	R	A	SS	ΕM	BL	Υ.		
INDEX	NUMBER		12345	DESCRIPTION		Α	В	E	G	J	ΚL	M	Р	R	S	U		_	\perp]
12-1	534895			Compression Ratio		6		6		6										
-1	537883			Compression Ratio			6					6	6							
-1	539814	t	Piston, 8:1 C	Compression Ratio		_ ,			6											ı
-2	639567	†	Ring, Piston,	Top Groove		6	6	6		6		6	6				- }	ŀ		
-2	639566	ţ	Ring, Piston,	Top and Second Groov	ve				12	ا. ا		1.0						-		1
-2	640299	\odot	Ring, Piston,	Top & Second Groove	!,,,,,,,,,,,	12	12	12		12		12	12				- 1			3
-2	640301	(1)	Ring, Piston,	Top & Second Groove					12		İ						1			1
-3	639568	^ †	Ring, Piston,	Second Groove		6	6	6		6		1	6	1 1					T	
-4	639768	② <u>†</u>	Ring, Piston,	Third Groove		6	6	6	6	6	1	ı.	6							ı
-4	640300	0	Ring, Piston,	Third Groove		6	6	6	6	6		6	1 -							1
-5	539467	†	Pin and Plug	Assembly, Piston		6	6	6	6	6		6	6					Ì		

MODELS 10-470-C,G,J,K,P,R

				,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	• • • • •	, , , , ,															_
FIG.	PART											Υ				SSE					
INDEX	NUMBER		12345	DESCRIP	TION		C	D	E	F	G	1 1	K	L	M	N	P	R S		JV	ļ
12-1	539814	†	Piston, 8:1 (Compression Ra	tio		6			ŀ	6						6	6			ļ
-1	534895			Compression Ra					- 1			6	6								
-2	639566	t		, Top & Second						1	12					1	2	12			Ì
-2	639567	t		, Top Groove .								6	6								
-2	640301	0		, Top & Second						1	12					1	2	12			I
-2	640299			, Top & Second								12	12	2	1						ı
-3	639568			, Second Groov							\perp		6	ł			-				I
-4	639768			, Third Groove			6		- 1	ı	6		6				٧.	6			
-4	640300	_		, Third Groove			6		١		6	6	6				6	6			ř
-5	539467		Ψ.	Assembly Pisto							6	6	6				6	6			
							E		- 1	- 1	- 1		1	1			ı		1		

- For use with chrome cylinders.
- This ring and expander assembly includes 629828 ring, which is not serviced separately.
 See Section IV for complete ring assemblies.

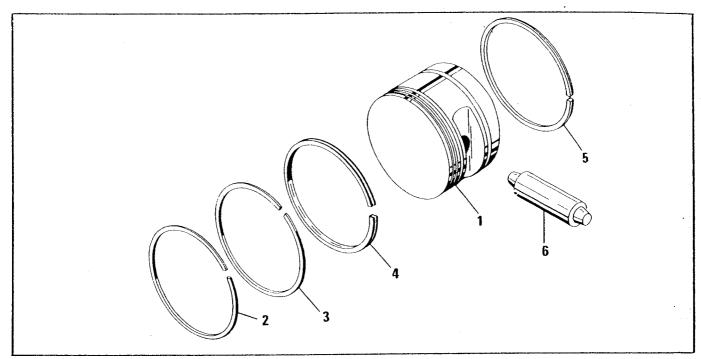


FIGURE 13 - PISTON AND RING ASSEMBLY MODELS 0-470-K,L,R,S,U

FIG.	PART				Q	U/	N	TI	ΤΥ	F	ΡĮ	R	A	SSI	ΕM	BL	Y	
INDEX	NUMBER		12345 DESCRIPTION	Α	В	Ε	G	J	K	L	М	P	R	S	U		\Box	\prod
13-1	640518	†	Piston, 7:1 Compression Ratio										6	6				
-1	632932 ①	t	Piston, 7:1 Compression Ratio						6	6			op					
-1	631481	t	Piston, 8:1 Compression Ratio												6	l.		
-2	639565	t	Ring, Piston, Top Groove										6	6	6			
-2	639567	†	Ring, Piston, Top Groove						6	6			ор					1
-2	0.000,		Ring, Piston, Top & Second Groove	1									12	12	12		.	
-2	640299	②	Ring, Piston, Top & Second Groove						12	12			op					
-3	639566	†	Ring, Piston, Second Groove										6	6	6			
-3	639568	t	Ring, Piston, Second Groove						6	6								
-4	642086		Ring, Piston, Third Groove										6	6	6			
-4	639768	_	Ring, Piston, Third Groove						6	6			op					
-4	639663 ③	2	Ring, Piston, Third Groove						6	6			6		6			
-5	627480		Ring, Piston, Fourth Groove						6	6			6	6	6			
-5	640302	②	Ring, Piston, Fourth Groove						6	6		1	6	7	6			
-6	539467	t	Pin and Plug Assembly, Piston	-					6	6			6	6	6			
													1		1			
															5 1,3		-	
								-					173					

- ① Parts superseded and not interchangable with later pistons or rings except in complete sets. (626992 piston is still available if required.) See Figure 14.
- 2 For use with chrome cylinders.
- This ring and expander assembly includes 639664 and 629828 rings respectively, which are not serviced separately. See Section IV for complete ring assemblies.

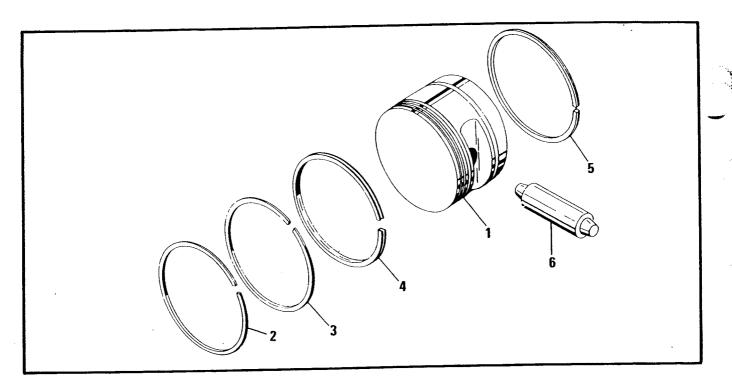


FIGURE 14 - PISTON AND RING ASSEMBLY MODELS 0-470-K,L,R

FIG.	PART							ΤY						EM		Υ		
INDEX	NUMBER	12345 DESCRIPTION	Α	В	E	G	J	K	L	М	Р	R	S	U	4	_	\perp	4
14-1 -2 -2 -3 -4 -4 -5 -5	639568 639768 † 640300 627480	† Piston, 7:1 Compression Ratio † Ring, Piston, Top Groove 2 Ring, Piston, Top & Second Groove † Ring, Piston, Second Groove 3 Ring, Piston, Third Groove 2 Ring, Piston, Third Groove † Ring, Piston, Fourth Groove † Ring, Piston, Fourth Groove † Pin & Plug Assembly, Piston						6 6 6 6 6 6 6 6	6 6 12 6 6 6 6 6 6			6 6 12 6 6 6 6 6 6 6						
																		1000

- Parts superseded and not interchangable with later pistons or rings except in complete sets. (626992 piston is still available if required.)
- Por use with chrome cylinders.
- 3 This ring and expander assembly includes 639664 and 629828 rings respectively, which are not serviced separately.
 See Section IV for complete ring assemblies.

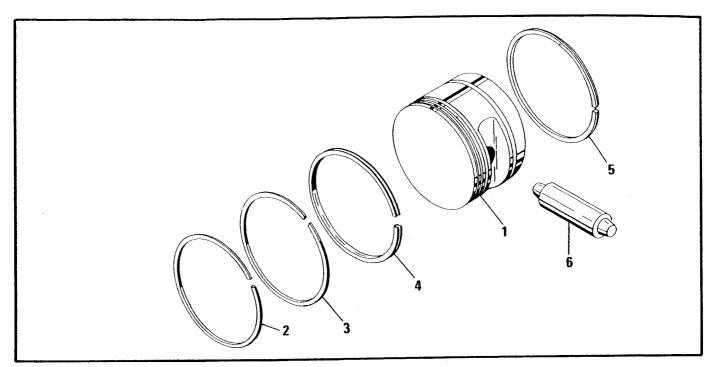


FIGURE 15 -PISTON AND RING ASSEMBLY MODELS 10-470-D,E,F,H,L,M,N,S,U,V

FIG.	PART						QU	AN	TI	ΓY	PE	R	A	SSI	EM	IBL	Y	
INDEX	NUMBER		12345	DESCRIPT	ION						J k							JV
15-1 -2 -2 -3 -4 -4 -5 -5	627738 639565 640301 639566	† † † † † † † † † † † † † † † † † † †	Piston, 8.6:1 Ring, Piston, Ring, Piston, Ring, Piston, Ring, Piston, Ring, Piston, Ring, Piston, Ring, Piston,	Compression Rat Top Groove Top & Second G Second Groove Third Groove Third Groove Fourth Groove .	roove		6 6 12 6 6 6 6 6	6 6 6 6 6 6 6 6 6 6 6		6 6 12 6 6 6 6 6		6	6 6 12 6 6 6 6	6 6 12 6		1	6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6	6 6 6 6 6 6 6 6 6 6
NOTES	: or use with ch																	

① This ring and expander assembly includes 629828 ring, which is not serviced separately.

³ See Section IV for complete ring assemblies.

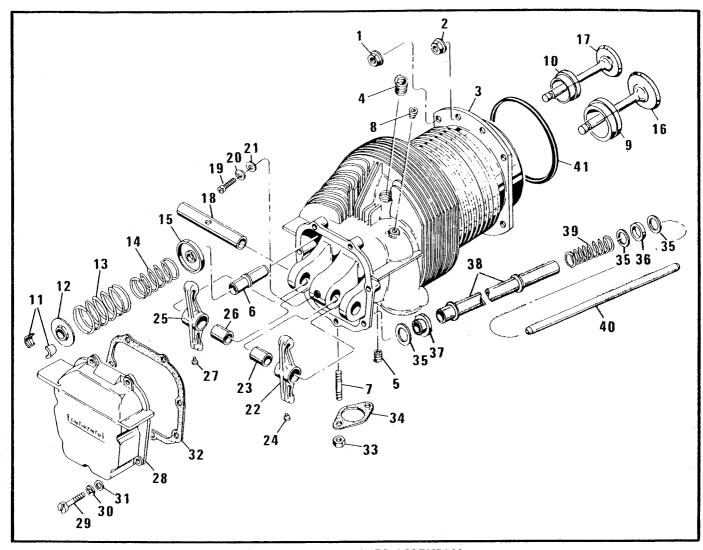


FIGURE 16 - CYLINDER ASSEMBLY MODELS 0-470-A,E,J

FIG.	PART			QI	UΑ	TN	17	ſΥ		PE	R	Α	SS	SE	М	BL	Υ		
INDEX	NUMBER	12345 DESCRIPTION	Α	В	E	G	J	Κ	L	IM	IP	R	S		ı	\prod		\Box	\Box
16-	539491A3 539491CP-A1 ① 628051A1	Cylinder and Valve Assembly	6		6 op		6)p												
	628051CP-A1 ①	Cylinder and Valve Assembly	рp												1				-
		ATTACHING PARTS													١				- [
-1	634505	Nut, Flanged	12		12	1	2												-
-2	531001	Nut, Flanged			36		36								-			-	
		* * * *														l			
-3	539491	. Cylinder Assembly			1		1								١		ı	Ì	١
-3	539491CP ①	. Cylinder Assembly		.	op	C	p								1				1
-3	628051	. Cylinder Assembly	1																
-3	628051CP ①	. Cylinder Assembly	ор				١												
-4	520112	Insert, Spark Plug, 18mm			2		2								1			1	١
-5	MS122121	Insert, Intake Flange, 1/4 - 20			2		2											ĺ	1
-6	631496 †	Guide, Valve			2		2										-		-
-7	401885 t	Stud, 5/16 x 1-9/32 Inch Long			2		2									İ			1
-8	629518-1H	Plug, 1/8 Inch NPTF			1		1												

[F. 5]	5557	\neg		Γ	_ເ	112	N	- I	ΓY	·P	E	 R	A!	SSI	ΕM	BI	Υ.	-
FIG. INDEX	PART NUMBER		12345 DESCRIPTION			E	G										Ī	1
16 -9	35966	t	Insert, Intake Valve Seat	1		1		1										
-10	35967	t	Insert, Exhaust Valve Seat	1		1		1										
-11	24802	•	. Key, Valve Spring Retainer	4		4	1 1	4								- 1		
-12	35971		. Retainer, Valve Spring Outer	2		2		2										
-13	520105		. Spring, Valve, Outer	2		2		2										
-14	637836		Spring, Valve, Inner	2		2		2										
- 15	625393		. Retainer, Valve Spring, Inner	2		2		2										
-16	532129		. Valve, Intake	1		1		1										
-17	626540		. Valve, Exhaust	1		1		1								}		
-18	625142		Shaft, Valve Rocker	6		6		6										
-19	535666		Screw, 5/16 x 25/32 Inch Long	6		6		6									- 1	
-20	MS35338-45		Washer, Lock	6		6		6									ĺ	1
-21	2473		Washer, Plain	6		6) 1	6									ĺ	ļ
-22	A24814		Rocker Assembly, Intake Valve	6		6		6									ļ	ı
-23	530367		Bushing, Valve Rocker	1		1		1										
-24	21007		. Screw, Round Head Drive	1		1		1									ł	
-25	A24815		Rocker Assembly, Exhaust Valve	6		6	l	6		Ì	1		l					
-26	530367		. Bushing, Valve Rocker	1	İ	1		1			ŀ			ĺ				
-27	21007		. Screw, Round Head Drive	1	ļ	1		1				1						
-28	532450		Cover, Valve Rocker	6		6		6										
20	002.00		ATTACHING PARTS															
-29	535118		Screw, Fillister Head	42	2	42	2	42		}								
-30	MS35338-44		Washer, Lock		2	42	2	42										ŀ
-31	20522		Washer, Plain	ı	1	42		42										
-32	532451	&	Gasket Valve Rocker Cover	6		6		6										
-33	22022		Nut Hex	1 2		12		12										
-34	21493	&	Gasket, Exhaust Flange	Įρ	1	6		6										
-34	627429		Gasket Snirotalic	рp)	9£		op							l			
-35	534609		Washer Pushrod Housing	βt)	ßt		36										•
-36	534610	&	Packing, Pushrod Housing	13	١.	12		12 12								1		
-37	536410	&	Packing Pushrod Housing	112	-	12		12					1					
-38	537296		Housing, Pushrod	112		12		12									l	
-39	626147		Spring, Pushrod Housing	12	2	1:		12										
-40	538305		Pushrod	6		6		6								1		
-41	532200	Č	Packing King, Cynnuel to Grankcuse	١													}	1
																		1 1
											İ							
				1														ll
					ľ							١						
				l														
				1						1								
							1											
								1										
					1													
N.O.	rr.																	
NOT																		
•	Optional chro	me (cylinders.											ļ				
				ı	i	ı	ı	1	ì	ı	Í	ŀ	1	J	,	ı	1	, '

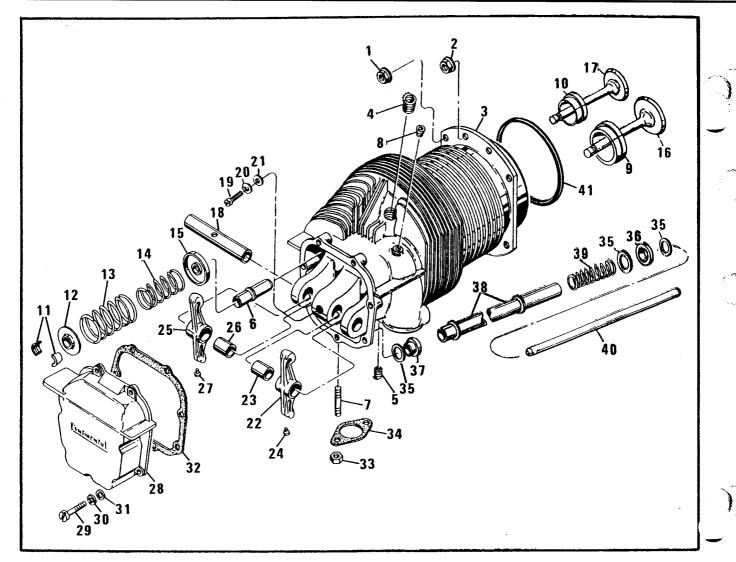


FIGURE 17 - CYLINDER ASSEMBLY MODELS 10-470-J,K

FIG.	PART			C	۱U	٩N	TI	ΤY	/	PEI	R	A	SS	ΕN	1BL	Υ.		
INDEX	NUMBER	12345 DESCRIPTION	C	D	E	F	G	Н	J	K	L	M	N	Р	R	S	U	V
17-	539491A3 539491CP-A3	Cylinder and Valve Assembly Cylinder and Valve Assembly							1	6 op								
		ATTACHING PARTS								1								
-1	634505	Nut, Flanged							12	12								
-2	531001	Nut, Flanged							36	36								
-3	539491	. Cylinder Assembly							1	1			İ.					
-3	539491CP	① . Cylinder Assembly	١.			Ì			pp	рp		İ						
-4	520112	Insert Spark Plug, 18mm				l			2	2			-					
-5	MS122121	Insert, Intake Flange, 1/4 - 20							2	2			Ì					
-6	631496	† Guide, Valve				l			2	2								
-7	401885	† Stud, 5/16 x 1-9/32 Inch Long							2	2								
-8	629518-1H	Plug, Hollow Square Head Pipe, 1/8 Inch NPTF							1	1			1					
-9	35966	† Insert, Intake Valve Seat							1	1								
-10	35967	† Insert, Exhaust Valve Seat		İ					1	1								
-11	24802	. Key, Valve Spring Retainer			1				4	4					l			
-12	35971	. Retainer, Valve Spring, Outer							2	2								ı

Г	.	8.5-	<u> </u>	\top			D 1 -		· · ·	_	ED		<u></u>				
	FIG.	PART	A C O A E DECODURTION	-		UA					ER				IBL	Y	\perp
L	NDEX	NUMBER	12345 DESCRIPTION		IR	E	6	J			M P	IK	5	U	4	-	\sqcup
	17-13	520105	. Spring, Valve, Outer								2						
	-14	637836	. Spring, Valve, Inner							2	2						
	-15	625393	. Retainer, Valve Spring, Inner							2	2				ļ		
	-16	532129	. Valve, Intake							1	1						
	-17	626540	. Valve, Exhaust							6	6						
	-18	625142	Shaft, Valve Rocker								6					1	
	·19	535666	Screw, 5/16 x 25/32 Inch Long								6						
	-20 -21	MS35338-45	Washer, Lock								6						
	-21	2473 A24814	Washer, Plain								6						
	-23	530367	. Bushing, Valve Rocker							1	1						
	-23 -24	21007	. Screw, Round Head Drive							2	2						
	-25	A24815	Rocker Assembly, Exhaust Valve			Ì				6	6				-		
	-26	530367	. Bushing, Valve Rocker							1	1					-	
	-27	21007	. Screw, Round Head Drive							1	1						
	-28	532450	Cover, Valve Rocker							6	6						
	20	302430	•									1					
	20	F2F110	ATTACHING PARTS							12	42					ŀ	
	-29 -30	535118 MS35338-44	Screw, Fillister Head	.						+2 42							
	-30 -31		Washer, Lock							12	i 1						
	-31	20522	washer, ridin	.	1					14	72						
	-32	532451	& Gasket, Valve Rocker Cover	1						6	6						
	-32 -33	22022	Nut, Hex								12						
	-33 -34	21493	& Gasket, Exhaust Flange							6	''						
	-34	632837	& Gasket, Exhaust Flange						- 1	٦	6						
	-34	627429	& Gasket, Exhaust Flange						ŀ	op	-						
	-35	534609	Washer, Pushrod Housing							36					- 1		1
	-36	534610	Packing, Pushrod Housing		İ					12					- 1		
	-37	536410	Packing, Pushrod Housing							12						1	
	-38	537296	Housing, Pushrod			1				12						1	
	-39	626147	Spring, Pushrod Housing						h	12	12						
	-40	538305	Pushrod						1	12	12						
	-41	532200	& Packing Ring, Cylinder-to-Crankcase							6	6						
							ļ										
				i													
				-													
				İ											-		
)				-													
									-								
						li				Ì							
					1												
										j							
)											ŀ						
															}		
														- 1			
_	NOTE	:															
	<u> </u>	Optional chrome	cylinders.														
	_	- p	-,····					- 1		- 1				- 1	1	ŀ	

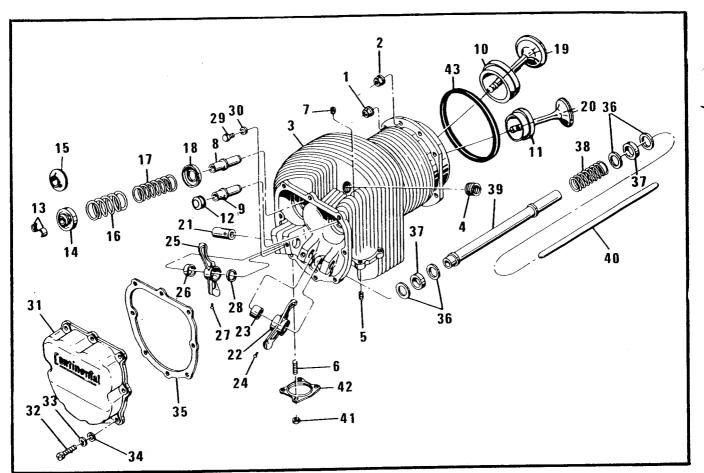


FIGURE 18 - CYLINDER ASSEMBLY MODELS O-470-B,G,K,L,M,P,R,S,U

FIG.	PART			Q	U	λN	TI	ΤY	' I	PΕ	R	Α	SS	EN	BI	_Y		I	•
INDEX	NUMBER	12345 DESCRIPTION	A	В	E	G	IJ	K	L	M	Р	R	S	٦		_	4	4	
18-	539492A1 642068A3 642068A1 642068CP-A1 641962A1	Cylinder and Valve Assembly		6		or 6					6 op	6	6 op	6					
		ATTACHING PARTS					1					1						-	
-1	634505	Nut, Flanged		12	2	12	2							12			- 1	- 1	a 1910
-2	531001	Nut, Flanged		36	3	3€	3	36	38	36	36	36	36	36				- 1	. 450 8 8 1
		* * *			-														್ಷಾ
-3	539492	. Cylinder Assembly		1						١.		١.							
-3	642068	. Cylinder Assembly				1		•		•	1							-	
-3	642068CP	① . Cylinder Assembly				ot	D	ot	ot	ot	op	ot	op	1.					
-3	641962	. Cylinder Assembly												'					
-4	520112	Insert, Spark Plug, 18mm		2		2		2	2	12	2	Z	2				- 1		
-4	520112-1	Insert, Spark Plug, 18mm		١.		1.		1.	١.	١.	١.	١.	١.	14				ľ	ورو ادار زار
-5	MS122121	Insert, 1/4 - 20		4		4	1	4	4	4	4	4	4	4					
-6	401804	† Stud, 1/4 x 1-1/16 Inch Long		4		١.		١,	١.	١,	١.						- 1		
-6	401893	† Stud, 1/4 x 1-1/4 Inch Long		١.		4	1	4	4	4	4			4				- 1	
-7	629518-1H	Plug, 1/8 Inch NPTF		1 2				1	1 -		;	;	1	1;				.	
-8	631496	† Guide, Valve	.	2				1		1	1	1	1	1			. !		1
-9	641960	† Guide, Valve, Intake	٠	1		'	1	1	'		'	'	'						1
-10	35966	† Insert, Intake Valve Seat, 45 Degrees		'		١,		1	1	1	1	1	1	1			Г	_	
-10	630591	† Insert, Intake Valve Seat, 30 Degrees	.	}			1		11	'	1	'	1	1 '	1	1	ŀ	i	

FIC	DADT	-			\cap	HΛ	NIT	ITY	, b)FF		۸۹	122	= N/1	BL)
FIG.	PART Number		12345 DESCRIPTION	A		E							S			_ _		ł
				А	<u>Б</u>		<u> </u>	1	1	1	1	<u>n</u>	1	뷔	+	+	+	ł
18 -11	35967		Insert, Exhaust Valve Seat		•		1	1		1	- 1		1	- 1				
-12	641952A1	6	. Seal Assembly, Valve Guide Intake		4	- 1	4	4	4	4	4	4		4				
-13	24802		. Key, Valve Spring Retainer		1		1	1		1			,	1				
-14	629117		. Rotocap, Exhaust Valve Spring Outer		1		1			1 1	1							
-15	35971		. Retainer, Intake Valve Spring Outer		2		2	2	2				2		-			
-16	520105		Spring, Valve Outer		2		2	2			2	2	2	2				١
-17	637836		Retainer, Valve Spring, Inner		2		2		2	2	2	2	2	5				
-18	625393		Valve, Intake, 45 Degrees		1		-	-	-	-	_			^				
-19	625821		. Valve, Intake, 45 Degrees		'		1	1	1	1	1		Ì	1				l
-19 10	539988		Valve, Intake, 30 Degrees				١.		•	•		1	1					l
-19 -20	625782 626540		Valve, Intake, 30 Degrees		1	.	1	1	1	1	1		- 1	-	-			ı
-20 -20	637781		Valve, Exhaust											1		1		ı
-20 -21	539740		Shaft, Valve Rocker		12	1	2	12	12	12	12	12	12	12	1			l
-21	539742		Rocker Assembly, Intake Valve		6		6						6					۱
-23	639629		Bushing, Valve Rocker		1		1						1					
-23 -24	21007		Screw, Round Head Drive		1	- 1	1	1		1		1				1		l
-24 -25	641682		Rocker Assembly, Exhaust Valve		6	4	6						6					
-25	639629		Bushing, Valve Rocker		1	1	1	1		1			1					l
-27	21007		Screw, Round Head Drive		1		1	1	1	1	1	1	, ,					ı
-28	639573	ŧ	Washer, Thrust		24	2	4	24	24	24	24	24	24	24				١
-29	537019	•	Screw, Hex Head, 5/16 x 17/32 Inch Long		12	1	2						12					ı
-30	2473		Washer, Plain		12		2						12					
-31	625615		Cover, Rocker Valve		6	ŀ	6	6	6	6	6	6	6	6				l
J,	023013		ATTACHING PARTS															ļ
00	F0F110				48	4	8	48	ΔR	ИΩ	48	48	48	48				l
-32	535118		Screw, Fillister Head, 5/16 x 17/32 Inch Long		48		8						48					
-33	MS35338-44		Washer, Lock		48		8						48					
-34	20522		* * * *				٦	.0										1
-35	534857	R.	Gasket, Rocker Valve Cover		6		6						6					
-36	534609	~	Washer, Pushrod Housing		48		18						48		ıİ	-		
-37	534610	Ą.	Packing, Pushrod Housing		24		24						24				1	ı
-38	626147		Spring, Pushrod Housing		12		12						12					١
-39	537296		Housing, Pushrod	l	12		12						12					ı
-40	538304		Pushrod		12		12						12	12				l
-41	21247		Nut, Hex		24	1	24			24		f						l
-41	536038		Nut, Hex		ор		pp		op	op	op	op	24	24				ı
-42	631544	&	Gasket, Exhaust Flange		6	- 1	6	6	1 -			į.	6			ł		
-42	628260		Gasket, Exhaust Flange, Spirotallic		op		pp	op	op	ob	ob	op.	op	op				l
-43	532200	&	Packing Ring Cylinder-to-Crankcase		6		6	Ь	Ь	b	b	b	6	ь		-		l
																		1
										Ì								١
															il	1		ŀ
)																		
																1		
																		1
NOTE	S :																	
<u> </u>	Optional chrome	e cyl	inders.															
	This assembly co	ontai	ns six seals and one installation tool.															

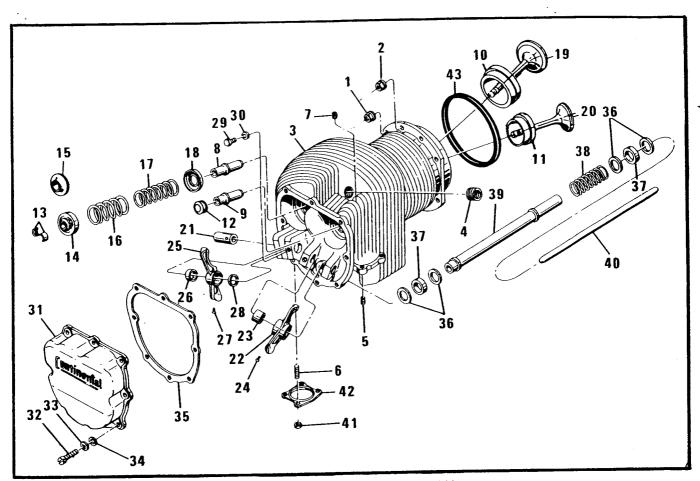


FIGURE 19 - CYLINDER ASSEMBLY MODELS 10-470-C,D,E,F,G,H,L,M,N,P,R,S,U,V

		MODELO TO THE OFFICE OFFICE OF THE OFFICE OFFICE OFFICE OFFICE OF THE OFFICE OFFICE OFFICE OFFICE OFFICE OFFICE OFFICE OFFICE OF	1												<u> </u>			-	-
FIG.	PART						TI							EM					
INDEX	NUMBER	12345 DESCRIPTION	C	D	E	F	G	Н	J	K	L	M	2	Р	R	S	U	٧	
19-	642068A3 642068CP-A1 626820A8 626820CP-A2	Cylinder and Valve Assembly	Ор	6	6 op	6		6 op	1			6 op	6	оp		6 op	6 op		
		ATTACHING PARTS	l	١. ـ								1.0	4.5	1.2	12	12	12	12	
-1	634505	Nut, Flanged	112	12	12	12	12	12						12					
-2	531001	Nut, Flanged	36	36	36	36	36	36	1		36	36	36	36	3b	30	36	Sb	30
		* * * *	1	1			Į.		ļ						^	1			1
-3	642068	Cylinder Assembly	6				6								6	1		!	Ì `
-3	642068CP	O. Cylinder Assembly	loh	4		t t	op	ī				1		op	op		6	6	l
-3	626820	. Cylinder Assembly	1	1	6			6			1	6	ŀ						1
-3	626820CP	①. Cylinder Assembly	١.		op	op	1	op	1		op	op	op		٦	ор	op	op	
-4	520112	Insert, Spark Plug, 18mm	2	1				2						2	14	_	1	,	
-4	520112-1	Insert, Spark Plug, 18mm		2			2	١.			4	2	2	4	2	12	2	4	Sec.
-5	MS122121	Insert, 1/4 - 20	4	1	4	4	4	4		1	1 '	1					1.	4	12.46
-6	401893	† Stud, 1/4 x 1-1/4 Inch Long	4	4	4	4	4	4	{		4	4	4	4	4	4	4	4	
-7	629518-1H	Plug 1/8 Inch NPTF]	1	1	1	1	1			1		1				1		1
-8	631496	T., Guide, Valve	١,	12	2	2	1	2			2	2	2	1		2	2	2	
-9	641960	t Guide Valve Intake	11	1	1		1 1	1				١.		1	!		١.	١,	١.
-10	630591	† Incort Intako Valve Seat	- []	11	1	1	1	1			1					1	1		
-11	35967	T Insert Exhaust Valve Seat	11	3	1	1	1	1			1	1	1	1	!	11	1		13
-12	641952A1	②. Seal Assembly, Valve Guide, Intake	1				1			}	1	1	1	[1	1	}	1	-	*

FIG.	PART		·	Q	U.A	N.	TI	ΓY	P	ER		AS	 SSE	 EM	ВІ	 .Y		٦
INDEX	NUMBER	12345 DESCRIPTION	С					Н	_	κĮι						SI		\forall
19-13	24802	. Key, Valve Spring Retainer	4	4	4	4	4	4	T	- 1	1	4	4	4	_	_	_	4
-14	629117	. Rotocap, Exhaust Valve Spring Outer	1				1	1		- 1	*	1	1	1	1			1
-15	35971	. Retainer, Intake Valve Spring Outer	1 1	1	1	1	1	1		1		1	1	1	1		- 1	1
-16	520105	. Spring, Valve Outer	2.	2	2	2	2	2			2	2	2	2				2
-17	637836	. Spring, Valve, Inner			2	2	2	2			2	2	2		2			2
-18	625393	. Retainer, Valve Spring, Inner	2	2	2	2	2	2	- 1		2	2	2		2			2
-19	539988	. Valve, Intake	1 -	1	1	1	1	1			1	1	1	1	1	1	1	1
-20	626540	. Valve, Exhaust	1				1		-		.	,		1	1		.	.
-20	637781	. Valve, Exhaust	١	1	1		10	12			1						2	
-21	539740	Offart, value freezes and a second	12	12					- 1	,		6			6	12 1 6 1		
-22	539742			6			-	6		1		0 1			1			6
-23	639629	. Bushing, Valve Rocker	1	!	L	1	ł .	1			- 1	1	- 1		1		1	!
-24	21007	. Screw, Round Head Drive		1	16		1 6	1 6				6			6	· 1	٠ ١	6
-25	641682	Rocker Assembly, Exhaust Valve				6	0	1	-	- 1		- 1			1	,	1	3
-26	639629	. Bushing, Valve Rocker	1	1	1	1	1				1	1	1	1	1	:	;	;
-27	21007	. Screw, Round Head Drive	24	h	1) I	1	1 ' 1		h	<u>,</u>	,	24	24	24	24 2	,	ا ,'
-28	639573	† Washer, Thrust	12													12 1		
-29	537019	Screw, Hex Head, 5/16 x 17/32 Inch Long	12													12 1		
-30	2473	Washer, Plain	6						ı	- 1			6		6			6
-31	625615	Cover, Rocker Valve	Ь	Ь	D	О	D	В				0	٥	D	0	0	0	١
		ATTACHING PARTS	١,٥	10	10	10	10	JΩ			ı	4Ω	лQ	ΛQ	40	48	ופו	اور
-32	535118	Screw, Fillister, 5/16 x 17/32 Inch Long	40	40 40	40	40	hΩ	NΩ								48		
-33	MS35338-44	Washer, Lock	40	40	10	10	NO ON	ИΩ								48		
-34	20522	Washer, Plain	10	10	10	10	70	70			10	70	10	Ŧυ			ru	
-35	534857	& Gasket, Rocker Valve Cover	6	6	6	6	6	6			6					6		
-36	534609	Washer Pushrod Housing	48	48	48	48	48	48								48		
-37	534610	& Packing Pushrod Housing	24	24	24	24	24	24								24		
-38	626147	Spring Pushrod Housing	112	12	112	112	112	IZ								12		
-39	537296	Housing Pushrod	112	12	12	IZ	12	12		ľ	12	12	12	12	12	12	12	12
-40	538304	Pushrod	112	112	112	112	112	12			12	12	12	12	12	12	12	12
-41	21247	Nut, Hex						24					1 1			24		
-41	536038	Nut, Hex	or	or	op	op				1	24	op	op	ob	op	op	οb	ob
-42	631544															6		
-42	628260	Gasket, Exhaust Flange, Spirotallic	op	op	op	op	op	op			op	ob	op	op	op	op	op)PI
-43	532200	& Packing Ring, Cylinder-to-Crankcase	6	6	6	6	Ь	b			b	b	b	b	b	6	b	٥
)																		
,																		
													-			1		
				1														
t.								1										
į																		
									'									
Noze																		
NOTE:																		
_ 0 0	ptional chrome c	ylinders.																
	•	rtains six (6) seals and one installation tool.																
	4000111019 0011	Training and 10) again and one materialists to an	ı	i	I	1	į	1	Į.	ıt		i	ŧ	ŀ		ı l		,

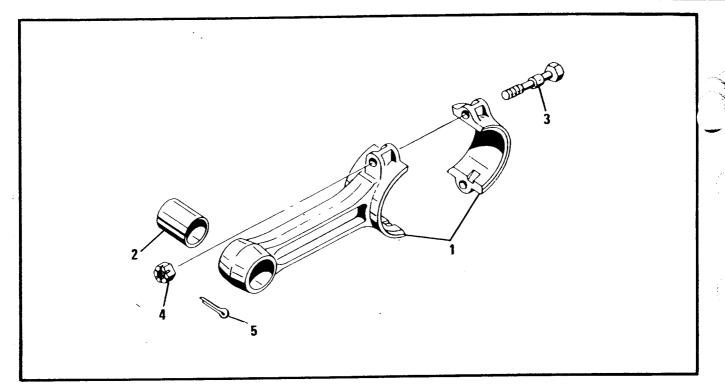


FIGURE 20 - CONNECTING ROD ASSEMBLY ALL MODELS

FIG.	PART			Q	UA	N.	TIT	ГΥ	P	EF	₹	A	SS	EM	IBL'	Υ
INDEX	NUMBER	12345 DESCRIPTION			Į		_					_		ב		
20-1	A36121	Rod Assembly, Connecting Rod Assembly, Connecting Bushing, Piston Pin Bolt	6	6	6	6	6	6	6	6	6	6				
-1	628752	Rod Assembly, Connecting	6	6	6	6	6	6	6	6	6	6	6	6		
-2	530658	. Bushing, Piston Pin	1	1	1	1	1	1	1	1	1	1	1	1		-
-3	35972	. Bolt	2	2	2	2	2	2	2	2	2	2	2	2		
-4	626140	Nut. Slotted, Hex. 3/8	2	2	2	2	2	2	2	2	2	2	2	2	.	
-5	639292	. Nut, Slotted, Hex, 3/8	2	2	2	2	2	2	2	2	2	2	2	2		

FIG.	PART			Q	U/	/N	TI	ΤY	F	EF	3	A	SS	ΕN	1BI	LY		
INDEX	NUMBER	12345 DESCRIPTION	C	D	E	F	G	Н	J	K	L	M	N	ᅀ	R	S	U,	V]
20-1	A36121	O Rod Assembly, Connecting Rod Assembly, Connecting Bushing, Piston Pin Bolt	6				6		6	6				6	6			
-1	628752	Rod Assembly, Connecting	6	6	6	6		6	6	6	6	6	6			6	6	6
-2	530658	. Bushing, Piston Pin	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
-3	35972	. Bolt	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
-4	626140	. Nut, Slotted, Hex, 3/8	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
-5	639292	. Nut, Slotted, Hex, 3/8	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2

① Engines not having the serial number prefixed by "CS" will use A36121 rods.

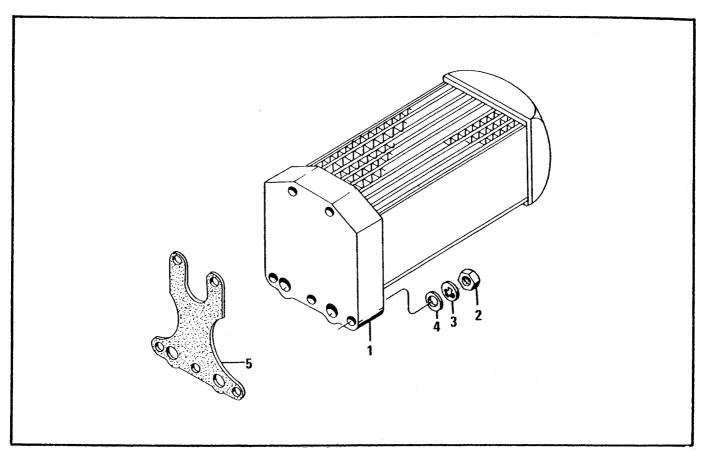


FIGURE 21 - OIL COOLER

MODELS 0-470-A,E,J,K

FIG.	PART			Q	UΔ	N	TI	ΓY	Р	ΕF	₹	A	SS	ΕN	1BI	LY		
INDEX	NUMBER	12345 DESCRIPTION	Α	В	E	G	7	K		М	Ρ	R	S	U				
21-1	534503	① Cooler, Engine Oil	1		1		1	1										
		ATTACHING PARTS																
-2	2437	Nut, Plain Hex	5		5		5	5										-
-3	MS35338-44	Washer, Lock			5		5	5		- 1								
-4	20522	Washer, Plain			5		5	5										
		* * * *															1	İ
-5	625303	& Gasket, Oil Cooler-to-Crankcase	1		1		1	1										

MODEL 10-470-F

FIG.	PART			Q	UA	N.	ГІТ	Υ	P	EF	3	A	SS	ΕN	1BI	LΥ		
INDEX	NUMBER	12345 DESCRIPTION	C	D	E	F	G	H	J	K	L	М	N	P	R	S	U	٧
21-1	534503	① Cooler, Engine Oil				1												
		ATTACHING PARTS																
-2	2437	Nut, Plain Hex				5											, 1	
-3	MS35338-44	Washer, Lock				5			- 1									
-4	20522	Washer, Plain				5	Ì			l								
_		* * * *			1		- 1											
-5	625303	& Gasket, Oil Cooler-to-Crankcase				1	Ì							,				

NOTE:

① See Section VI for Specification Applications.

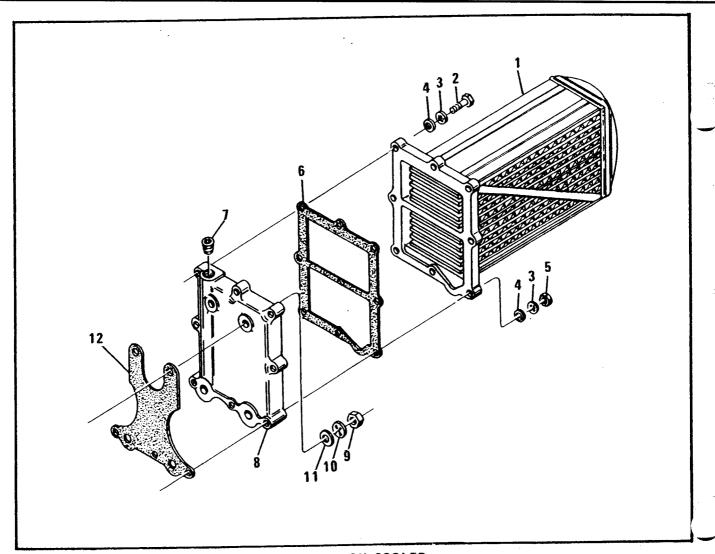


FIGURE 22 - OIL COOLER MODELS 0-470-G,L,P,R,S,U

FIG.	PART			C	U/	٩N	Ti	ΤY		PEI	R	Α	SS	E١	ΛB	LY	,	
INDEX	NUMBER	12345 DESCRIPTION	A	B	Ē	G	J	K	L	M	Р	R	S	U	L		П	_
22-1	627392	① Cooler, Engine Oil				1			1		1	1	1	1				1
		ATTACHING PARTS		١										Ì				
-2	535631	Screw, 1/4 x 1 Inch Long	ł			5			5					5				
-3	MS35338-44	Washer, Lock				8			8			8		8				- J
-4	20522	Washer, Plain				8			8					8				
-5	2437	Nut, Plain Hex		1		3	1		3		3	3	3	3			1 1	
•		* * * *								1			ŀ					- [
-6	632372	& Gasket, Oil Cooler-to-Plate			1	1			1		1	1	1	1				- 1
-7	2026	Plug, Pipe, 1/4 Inch				1			1		1	1	1	1				
-8	625016	Plate, Oil Cooler Adapter		1		1			1		1	1	1	1				
		ATTACHING PARTS																200
-9	2437	Nut, Plain Hex		1		2	1		2		2		2	2				
-10	MS35338-44	Washer, Lock				2	1		2		2	2		2		l		
-11	20522	Washer, Plain		1		2			2		2	2	2	2				
.,	LUULL	* * *																1 1
-12	625303	& Gasket, Plate-to-Crankcase				1			1		1	1	1	1				1
	NOTE:																	۷ ۵۰ ســــ

① See Section VI for Specification Applications.

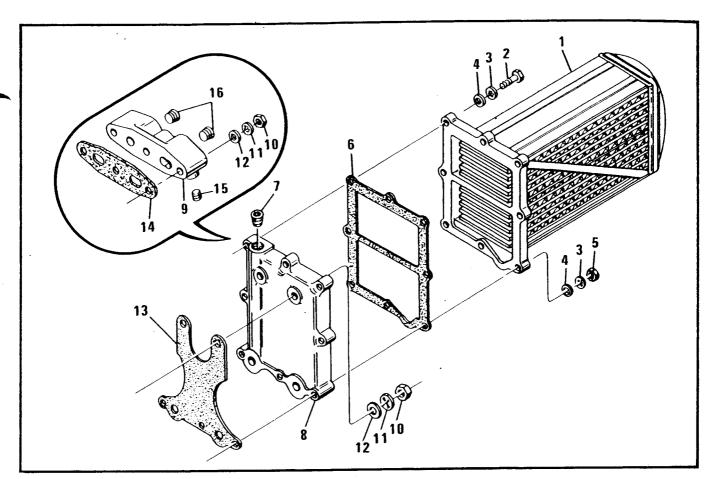


FIGURE 23 - OIL COOLER MODELS 10-470-C,E,G,H,J,K,N,R,S

FIG.	PART		T	Q	U/	١N	T I	ΤY	F	PEI	R	A	SSI	ΕN	IBI	_Y		
INDEX	NUMBER	12345 DESCRIPTION	C	D	E	F	G	H	J	K	L	М	N	Р	R	S	U	V
23-1	627392	① Cooler, Engine Oil	1		1		1	1	1	1			1		1	1		
		ATTACHING PARTS																
-2	535631	Screw, 1/4 x 1 Inch Long	5		5		5						5			5		
-3	MS35338-44	Washer, Lock			8		8			8			8		8	8		1
-4	20522	Washer, Plain	8		8		8.			8			8		8	8		
-5	2437	Nut, Plain Hex	3		3		3	3	3	3			3		3	3		
		* * *	1.															
-6	625017	& Gasket, Oil Cooler-to-Plate			1		1	1	!				!		1	1		
.7	2026	Plug, Pipe, 1/4 Inch	1		1		1	1	1	1			1		1	1	- }	- 1
-8	625016	Plate, Oil Cooler Adapter	1	1	1	ĺ	1	1	1	1			1		1	1		
-9	535958	Adapter, Oil Cooler Pad												1				
		ATTACHING PARTS	1													ı		- 1
-10	2437	Nut, Plain, Hex	2		2 2		2	2	2	2					2	2		- 1
-11	MS35338-44	Washer, Lock			2		2		2	2			2		2	2		
-12	20522	Washer, Plain		1	2		2	2	2	2			2	3	2	2		- 1
,		* * * *					ł						- 1					
-13	625303	& Gasket, Plate-to-Crankcase	1		1		1	1	1	1			1		1	1		
-14	535756	& Gasket, Adapter-to-Crankcase												1		ļ		
-15	401763	Plug, Pipe, 1/4 Inch NPT												1				١
-16	629518-4H	Plug, Pipe, 1/2 Inch NPT												2				- 1

① See Section VI for Specification Applications.

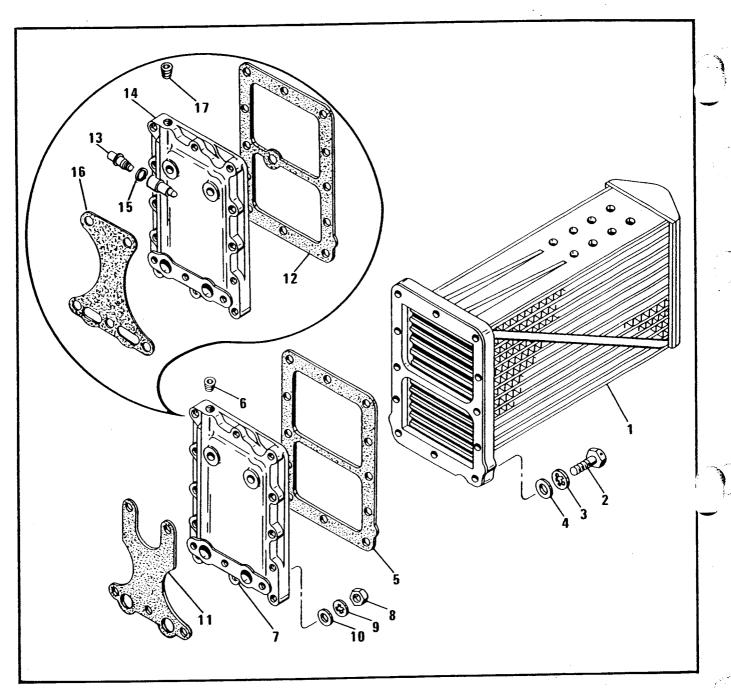


FIGURE 24 - OIL COOLER

MODELS 0-470-B,M

FIG.	PART	QUANTITY PER ASSEMBLY	
INDEX	NUMBER	12345 DESCRIPTION ABEGJKLMPRSU	
24-1	626189	Cooler, Engine Oil	
-1	639152	Cooler, Engine Oil	ديعة
		ATTACHING PARTS	
-2	535631	Screw, 1/4 x 1 Inch Long	
-2	535668	Screw, 1/4 x 1-3/8 Inch Long	
-3	MS35338-44	Washer, Lock	<u>k</u>
-4	20522	Washer, Plain	
		* * * * *) محند
-5	537282	& Gasket, Oil Cooler-to-Plate	

FIG.	PART	QUANTITY PER ASSEMBLY
INDEX	NUMBER	12345 DESCRIPTION ABEGJKLMPRSU
24 -6	2026 537312	Plug, Pipe, 1/4 Inch
.8 .9	2437 MS35338-44	ATTACHING PARTS Nut, Plain, Hex
-10	20522	Washer, Plain
-11	625303	& Gasket, Plate-to-Crankcase
-12	626342	② Gasket, Oil Cooler-to-Plate
-13	626332	② Plate, Oil Cooler Adapter
-14	639305	② Oil Temperature Control Valve
-15	627496	② . Gasket
-16 -17	626341 2026	② Gasket, Plate-to-Crankcase 1 ② Plug, Pipe, 1/4 Inch 1

MODELS 10-470-D, L, M, U, V

Γ	FIG.	PART	Т				OI	JΔ	N"		ΓY	P	ER			SEI	ME	BLY		
l l	NDEX	NUMBER		12345 DESCRIPTION	j	C	_											S		V
L.	24-1	626189	0	Cooler, Engine Oil			1							1 1	1					
	-1	639152 ②	1	Cooler, Engine Oil	, 		1					ĺ				1			1	1
	-1			Cooler, Engine Oil										1						ı
				ATTACHIN	I I															1
	-2	535631		Screw, 1/4 x 1 Inch Long			12			l				2 1	2					
	-2	535668	②	Screw, 1/4 x 1-3/8 Inch Long			12				1	-		2					12	
	-3	MS35338-44		Washer, Lock			12							2 1					12	
	-4	20522		Washer, Plain			12						П	2 1	2				12	12
				* * *										,	.					!
	-5	537282	&	Gasket, Oil Cooler-to-Plate			1						- 1	1 ·	<u>'</u>					[
	-6	2026		Plug, Pipe, 1/4 Inch			1						- 1	1	,					ĺ
	-7	537312		Plate, Oil Cooler Adapter			1						ŀ	'	'	- 1				
				ATTACHIN								1	- 1.	_	_				-	-
	-8	2437		Nut, Plain, Hex			5								5				5	5
	-9	MS35338-44		Washer, Lock			5			.		ļ			5				5 5	5 5
	-10	20522		Washer, Plain			5						- [5 :	9			ļ	3	Э
)			_	* * *			1						l	1	1					i
	-11	625303		Gasket, Plate-to-Crankcase			1							1	'			Ì	1	1
	-12	626342	② ②	Gasket, Oil Cooler-to-Plate		İ	1							1					i	1
	-13	ULUUUL	<u>③</u>	Plate, Oil Cooler Adapter Temperature Control Assembly .			1				Ì			1		1		ļ	1	1
	-14	639305 627496	<u>3</u>	Gasket			1					١		1					1	1
	-15 -16		<u>3</u>	Gasket, Plate-to-Crankcase			1						ļ	1		-			1	1
	-10	020011	<u>③</u>	Plug, Pipe, 1/4 Inch			1						- 1	1						1
,	-17	2020		ing, tipe, the mone	,															
															-		-			
				· ·		ł	l l	į	i i		1 1		- 1	- 1	- 1	1	1	Ť	l	í

See Section VI for Specification Applications.

Denotes optional non-congealing oil cooler and associated parts. Standard on 10-470-U & V.

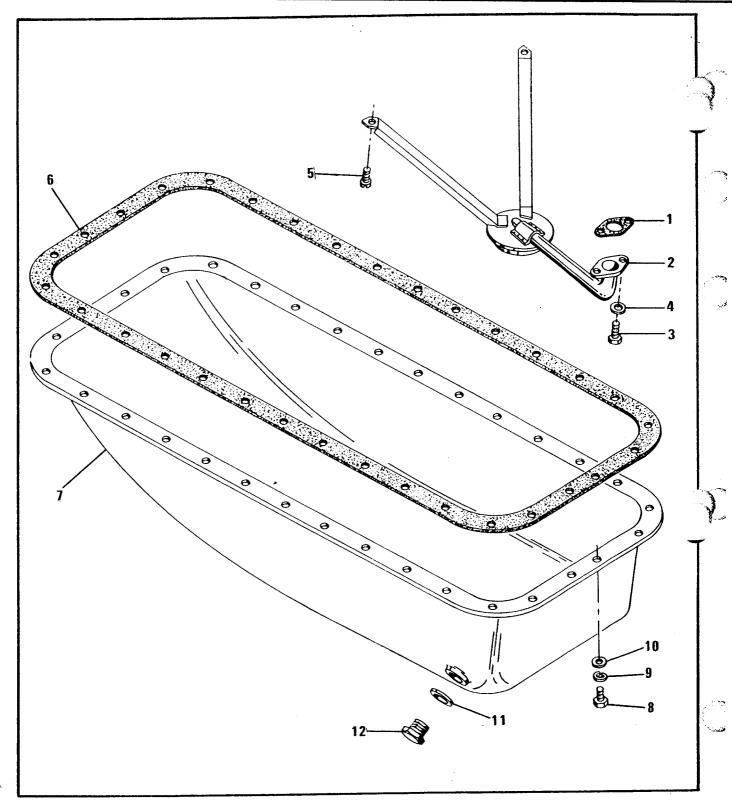


FIGURE 25 - OIL SUMP

MODELS 0-470-A,B,E,J,K,L,M,R,S,U

FIG.	PART			Q	U/	۱N,	LI.	ΤY	F	E	R	AS	SSI	Ε I V	BL	Υ.		
NDEX	NUMBER	12345 DESCRIPTION	A	В	E	G	J	K	L	М	P	R	S	U	Ц		\perp]
25-1	534940	Gasket, Suction Tube	. 1	1	1			1		1		1	1	1				
-2	625207	Tube Assembly, Oil Pump Suction	. 1	1	1		1	1	1	1		1	1	1		-		۱
		ATTACHING PARTS	1.				_											-
-3	MS20074-04-04	Bolt, Drilled Head	. 2	2			2	2	2	2		2		2				
-4	20522	Washer, Plain	. 2	12	2		2	2 2	2	2		2	4			- 1		
-5	MS20074-04-03	Bolt, Drilled Head	. 2	2	2		2	2	2	2		2	2	2			İ	١
		* * *	1.		١.					١.								
-6	534743	Gasket, Oil Sump	. []		1		1	1	J	1		1	1	1		ı		-
-7	537650	Sump Assembly, Oil	. [1	1	1		1	1		1				4				-
-7	539937	Sump Assembly, Oil							1			1	ľ	1				
		ATTACHING PARTS																-
-8	530346	Screw, Hex Head, 5/16 x 7/8 Inch Long	. 2	8 26	28		28	28	28	26			28					ł
-9	13XX202B	Washer, Lock, 5/16 Inch	. 2	424	128		28	28	28	26	1 1		28) ·	1		١
-10	2473	Washer, Plain	. 2	426	28	4	28	28	28	26	1	28	28	28				
10		* * * *				1												١
-11	AN900-10	Gasket, Annular	. 2	2	2		2	2	2	2 2		2	2	2				1
-12	532432	Plug, Oil Drain, 5/8	. 2	2	2		2	2	2	2		2	2	2				1

MODELS 10-470-D,E,F,G,L,M,P,R,S,U,V

F,	FIG.	PART	Γ			Q	U/	N	TI	ΤY	<u> </u>	PE	R	A	SSE	M	Bl	Υ.	
	IDEX	NUMBER		12345 DESCRIPTION	C	D	E	F	G	Н	J	K	L	М	N	1	R	S	U V
	25-1	534940	&	Gasket, Suction Tube				1					1	1			1		
	-2	625207		Tube Assembly, Oil Pump Suction		1	1	1	1				1	1			1	1	1 1
				ATTACHING PARTS								1			۱,		۱		؍ ا
	-3	MS20074-04-04		Bolt, Drilled Head		2	2	2	2					2			2	2	2 2 2 2 2 2
	-4	20522		Washer, Plain		2	2	2	2				2	2			2	2	2 2
	-5	MS20074-04-03		Bolt, Drilled Head		2	2	2	2				1	2			۷	۷	² ²
	-6	534743	O .	* * * * * Gasket, Oil Sump		1	1	1	1				1	1		ı	1	1	1 1
	-0 -7	537650	α	Sump Assembly, Oil		1		1					1			ı	1		1 1
	-7	628698		Sump Assembly, Oil										1					
	-7	633412		Sump Assembly, Oil	1													1	
				ATTACHING PARTS															
-	-8	530346		Screw, Hex Head, 5/16 x 7/8 Inch Long		26							28	28	2				30 B
	-9	13XX202B		Washer, Lock, 5/16 Inch	l	26						l		28					30 ß
	-10	2473		Washer, Plain		26	26	28	26				28	28		8	26	26	30 ß
				* * *		2		2	,				2		,	,	2	,	2 2
	-11	AN900-10	&	Gasket, Annular		Z	12	2	1				2	2	'	۱ '	4	4	۲ ۲
;	-11		Ö	Gasket, Annular		l								2		١			
	-12 -12	20274 532432 (ก	Plug, Oil Drain, 3/4		2	2	2	2				2	-		2	2	1	2 2
	-12	332432		riug, Oii Diani, 3/0			Γ												
				-															
	3:																		
	ne 63	6376 magnetic dr	air	plug may be used as an option to 532432 drain plug.						1						-			

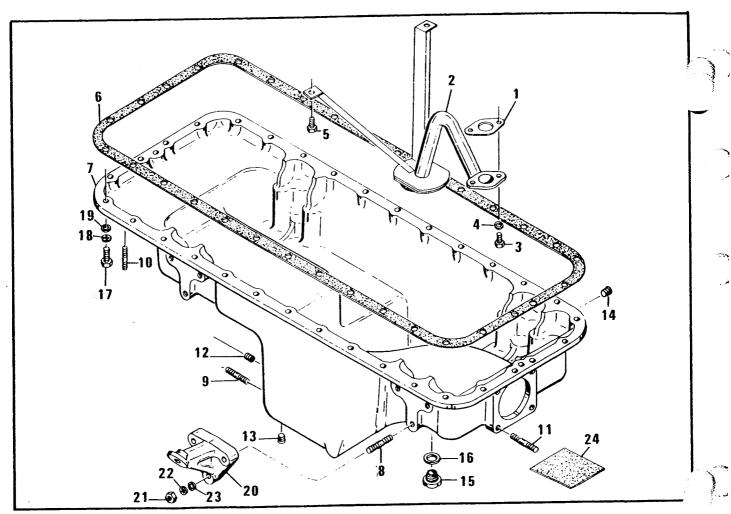


FIGURE 26 - OIL SUMP

MODELS 0-470-G,P

FIG.	PART					Q	UA	N,	TI	ΓY	P	EF	₹	A	SS	EN	ΛB	LY	,	
INDEX	NUMBER		12345	DESCRIPTION	Α	В	Ε	G	J	Κ	L	М	Р	R	S	U	L		\sqcup	4
26-1	534940 8	<u>.</u>		Tube				1					1							
-2	538937		Tube Assembly,	Oil Pump Suction				1					1				ļ			
				ATTACHING PARTS																
-3	MS20074-04-04		Bolt					2		<u> </u>			2					İ		
-4	20522		Washer, Plain		 ŀ	İ		2					2					1		4
-5	MS20074-04-03							2					2							`` ``*
				* * * *				١.												
-6	534743	ķ	Gasket, Oil Sum	ip				1					1			1				- [
-7	538814A1			Assembly				1					1							ŀ
-8				9/16 Inch Long		1		12					12			1		1		
-9			,	I-5/16 Inch Long			l	2					2							3
-10	401804 t	Ì	. Stud, 1/4 x 1-	1/16 Inch Long		1		4		1		l	4							:
-11	401885	t	. Stud, 5/16 x 1	1-5/16 Inch Long				4					4			1				ſ
-12	MS122122		. Insert, 5/16					2			l		Z	l			1	1		
-13	2024		. Plug, Pipe, 1/8	3 <i></i>]							ı
-14	401753		. Plug, Pipe, 1/4	1	 ļ			1			l	'	1			1				1
-15	2265			n, 5/8	1			1					1						'	्र्
-16	AN900-10 8	દ્ર	. Gasket, Annu	lar				1					1						I	V
				ATTACHING PARTS																1
-17	537750		Bolt, 5/16 x 1-1	/8 Inch Long				32				1	32	2						l

FIG.	PART			QI	JA	NT	IT	Υ	PE	R	Α	SS	ΕN	1BI	-Υ		
INDEX	NUMBER	12345 DESCRIPTION	Α	В	E	G.	J	K	LI	ΛP	R	S	U		\Box	\Box	\Box
26-18	13XX202B	Washer, Lock				32	1			32					-		
-19	2473	Washer, Plain			F	32	-									- 1	
-19	22533	Washer, Plain			- 1	Ì		ı		32							ı
		* * * *			- 1			١		1					1		١
-20	625383	Bracket, Engine Mount		ļ		.	-	1		4							
-20	626089	Bracket, Engine Mount	Ιİ			4	-								- 1	- 1	
		ATTACHING PARTS				- 1	-	-	ŀ						- 1		
-21	2441	Nut, Hex			ľ	12	1	١		12						Į	
-22	MS35338-46	Washer, Lock				12				12			1		١		
-23	2474	Washer, Plain			ĺ	12				12							

MODELS 10-470-C,H,J,N

f			_			Г				-	, ,		. ^	CCF		D1.		1
	1G.	PART				L			NT					SSE				-
IN	DEX	NUMBER	L	12345 DE	SCRIPTION	1	1	ᄇ	F G	_	\Box	K	L M		۲ ا	KT 2	UV	1
	26-1	534940	&	Gasket, Suction Tul	be	1	1 1			1	1	1		1				١
	-2	538937		Tube Assembly, Oil	Pump Suction	1		- [1	1							ı
	-2	628409		Tube Assembly, Oil	Pump Suction			- 1				1		1				١
					ATTACHING PARTS						ŀ							l
	-3	MS20074-04-04				2		}		2	2			2				ı
	-4	20522		Washer, Plain		2				2	2	2	1	2				l
	-5	MS20074-04-03		Bolt		2	ŀ			2	2	2	-	2	1	1		ı
à					* * * *			1		١.								ı
	-6		&	Gasket, Oil Sump .		1					1	1		1				
	-7	538814A1			embly	1				'	1							ı
	-7	628372A2			embly					1,,	12	12		12				l
	-8				6 Inch Long	12				1	12 2	12		2				۱
	-9				16 Inch Long	2				2	4	1		4				l
	-10				6 Inch Long	4			1	4	4	4		4				١
	-10				Inch Long	۱					4	4	Ì	"			1	ı
	-11		t		16 Inch Long	4		-		4	2							l
	-12	MS122122				2				2	1			H				١
	-13	2024		. Plug, Pipe, 1/8		1				;		1						ĺ
	-14	401753		. Plug, Pipe, 1/4							1			1				١
`\	-15	2265		. Plug, Oil Drain, 5/	/8					1					1			١
1	-16	AN900-10	&	. Gasket, Annular		['				'	'			1'1		1		١
-					ATTACHING PARTS			-	ı									١
	-17	537750		Bolt, 5/16 x 1-1/8 I	nch Long	32						30		32		1		ı
	-18	13XX202B		Washer, Lock		32	1					30		32 32	-			l
	-19	AN960-516L		Washer, Plain		32				32	32	30		32				
					* * *					4								۱
:	-20	625383		Bracket, Engine Mo	unt	4		ı		"	4	4		4	-			l
	-20	626089		Bracket, Engine Mo	unt	*					•							I
					ATTACHING PARTS	١.,		- 1									1	١
	-21	2441		Nut, Hex		12						12		12 12				
	-22	MS35338-46		Washer, Lock		12						12		12			11	
	-23	2474		Washer, Plain		12	1			112	12	'4		14				
				'	* * * *					ŀ					- 1			1
	-24	534625		Felt, 3-1/16 x 4-1/1	16 Inch									"				

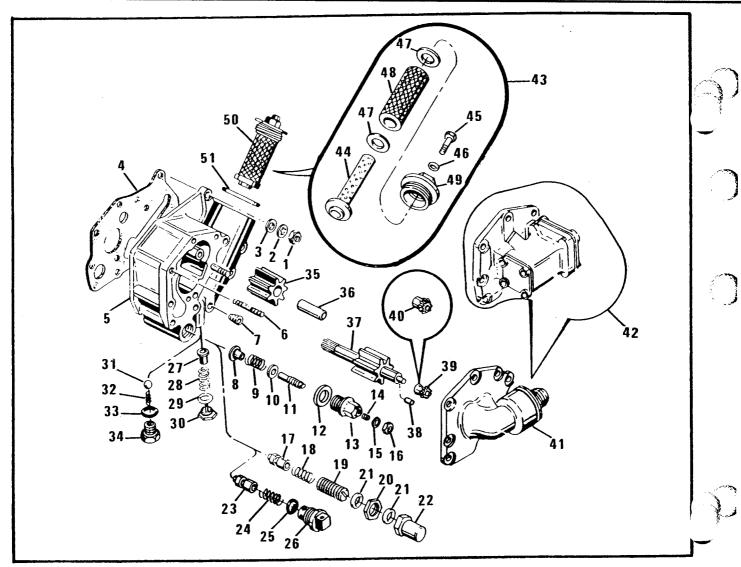


FIGURE 27 - OIL PUMP ASSEMBLY MODELS 0-470-A,B,E,G,J,K,L,M,P,R,S,U

FIG.	PART	QUANTITY PER ASSEMBLY	
INDEX	NUMBER	12345 DESCRIPTION ABEGJKLMPRSU	
27-	632563A31 632563A2	Housing Assembly, Oil Pump Complete	
	632563A4 632563A7 632563A16	Housing Assembly, Oil Pump, Complete	
		ATTACHING PARTS	
-1	2437	Nut, Plain Hex	
-2	MS35338-44	Washer Lock [17] [17] [17] [17] [17] [17] [17] [17]	
-3	20522	Washer, Plain	, - 17
		* * * *	
-4	538185	of gasker' Lamb Loggith	ئىن.
-5	632563	① . Housing and Shaft Assembly, Oil Pump 1 1 1 1 1 1	
-6	401963	t Stud, 1/4 x 1 Inch Long	
-7	AN932-2	. Plug, Pipe, 1/8 Inch NPT	
-8	642336	② Plunger, Oil Pressure Relief Valve	
-9	634150	. Spring, Oil Pressure Relief Valve	S
-9	632478	. Spring, Oil Pressure Relief Valve	ž
-10	631653	. Washer, Special, Oil Pressure Relief Valve 1 1 1 1 1 1 1	

FIG.	PART					_		ΤY			•				IBL	Υ	_
INDEX	NUMBER	12345 DESCRIPTION						K						$ \mathbf{u} $	4		L
27-11	642335	. Screw, Adjusting, Oil Pressure Relief Valve	1	1	1	1	1	1	1	1	1	1	1	1			
-12	AN900-18	Carlot Appular	11	1 I	1 1			1 1	1 .		1	1	1	1			
-13	642224	Housing Oil Pressure Reliet Valve	11	11	11	1 1		11		1	1	1	1	1			
-14	MS124657	Insert Helical Coil		1 1		1 1	11	1	[]	1	1	1	1	1			
-15	X 1473	Gacket Conner	11	1 1		1 1	11		11		1	1	1	1			
-16	632762	. Nut, Lock	11	1	1	1	1	1	1	1	1	1	1	1			
-17	627494	. Plunger, Oil Pressure Relief Valve				1					1						
-18	627495	. Spring, Oil Pressure Relief Valve				1					1						
-19	627651	. Screw, Adjusting				1					1						
-20	627652 3	Nut, Adjusting Screw			İ	1					1						
-21	AN900-14 3 8	. Gasket, Annular				2					2						
-22	627650	. Cap, Oil Pressure Relief Valve				1					1						
-23	537229	. Plunger, Oil Pressure Relief Valve	1			1											
-23		Plunger, Oil Pressure Relief Valve		1	1	l	1	1	1	1		1					
-24	537589 3	. Spring, Oil Pressure Relief Valve	1		1												
-24	538735 ③	Spring, Oil Pressure Relief Valve		1	1		1	1	1	1		1					
-25	AN900-10 3 8	. Gasket, Annular	1					l				ļ					
-25	AN900-14	. Gasket, Annular	ł	1	1		1	1	1	1		1					
-26	537235	. Cap, Oil Pressure Relief Valve	1							1							
-26	538736 3	Can Oil Pressure Relief Valve	ı	1	1		1	1	1	1		1					
-27	631638	. Valve, By-Pass	1	1	1	1	1	1	1	1		1		1			
-28	631478	. Spring. By-Pass Valve	[]	1	1	1	1	1	1	1	1	1		1			
-29	AN900-14 8	Gasket, Annular	[]	1		1		1	1	1	1	1	1	1			
-30	63 1995	. Pin and Plug Assembly	1	1		1		1	1	1	1	1					
-31	2849 ③	. Ball, Filter By-Pass	ı	1		1		1	1	1	1	1					
-32	2848	. Spring, Filter By-Pass		1		1		1	1	1	1	1					
-33	AN900-10 3 8	. Gasket, Annular		1		1		1		1 .	1	1					
-34	532432	. Plug, Filter By-Pass		1				1			1	1					
-35	539525	. Cour and Buoning theorems , ,	1			1		1			1		1			-	
-36	539523		2	2	2	2	2	2	2	2	2	2	2	2	į		
-37	538516	. Gear Assembly, Oil Pump and Tachometer Drive .		1	1					1	1					1	
-37	538609		1					1				1					
-38	535634	· · Bollor I · · · · · · · · · · · · · · · · · ·						1									
-39	535008	. Gear, Bevel, Tachometer Drive	1			1	2	2	2	E -	1	1	1	1			
-40	535900	. Gear, Bevel, Tachometer Drive		1	1					1							
-41	***	. Cover, Oil Pump, Mechanical Tach		1	1					1		1	l . i	ii			
-42	***	. Cover, Oil Pump, Electric Tach	1			1		1			1	ı	1	1			
-43	538727	. Filter, Oil	!	1			•	1	1.	Ι.			1	1			
-44	Q9T116-218	Tube Assembly, Perforated	1	1	1		1	1	1	"		1		11			
-45	MS20073-04-10	Bolt, Drilled, Hex Head	11	1	1		1	1	1	1		1	Ι.	1	- 1		
-46	Q9S552-06	. Washer, Annular, 1/4 Inch		1	1		1	1	1	1		1	1	1			
-47	535933	Gasket, Felt, 5/8 Inch ID	2	2	2		2	2		2		2		2			
-48	Q9T116-07	Element, Filter			1		1	1		1		1		1			
-49	628129	i i body odding, i iii i i i i i i i i i i i i i i i i	1		1			1				1	1				
-50	534862	. Screen Assembly, Oil				1					1	1	1				
-51	AN900-28 &	. Gasket, Annular	1	1	1	1		1				1		1			
NOTES:			1	1	}							İ			-	ļ	

^{***} See Figure 28 for detail parts.

① If replacing old style pump body, service with 632563A11.

① If replacing 631618 plunger or 632761 screw, it will be necessary to order both 642761 and 642335 or 642335A1 service kit. (See Service Bulletin M79-2 Rev. 1.)

³ Existence of these parts indicates early style pump. If pump is serviceable, these parts must be used to replace worn parts.

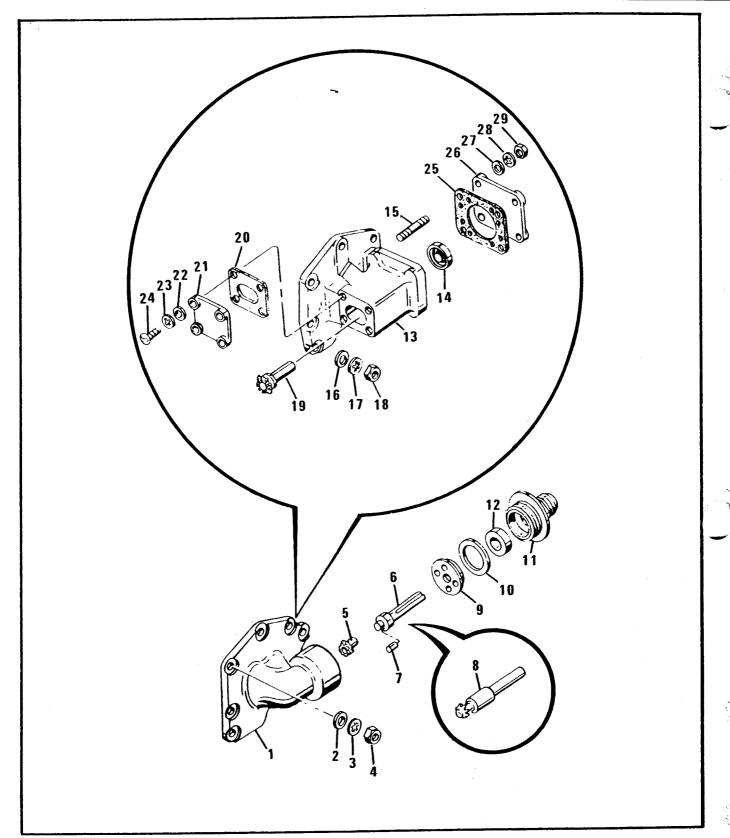


FIGURE 28 - OIL PUMP COVER AND TACHOMETER DRIVE MODELS 0-470-A,B,E,G,J,K,L,M,P,R,S,U

FIG.	PART				QI	JΑ	W.	TI	TY	· I	PE	R	Α	SS	EN	1BL	Υ.	
INDEX	NUMBER	12345 DESCRIPTION		Α	В	Ε	G	J	K	L	М	P	R	S	U		\Box	I
28-1	625886	Cover, Oil Pump	.]	1			1	1	1	1		1	1	1	1			
20.	02000	ATTACHING PARTS	- 1															1
-2	20522	Washer, Plain		2			2	2	2	2		2	2	2	2			
-3	MS35338-44	Washer, Lock		2			2	2	2			2 2	2	2	2			
-4	2437	Nut, Plain Hex	.	2			2	2	2	2		2	2	2	2			
-4	2437	* * * *	I															
-5	535008	Gear, Bevel, Tach Drive		1				1	1	1 -		1	1	1	1			-
-6	535010	Shaft Assembly, Tach Drive	٠. ا	1				1	1	1								
-7	535634	. Dowel	٠. ا	1				1	1	1			١.	١.				
-8	631650	Shaft and Gear Assembly		1			1					1	1	1	1			
-9	534873	Washer, Thrust		1				1	1	1			1			li	-	
-10	AN900-15	& Gasket, Annular						1	1	1			١,					
-10	632085	& Gasket, Annular	.	1			1			1		l'i	;	1	1			
-11	21208A2	Housing Assembly, Tach Drive	•	1			1	1	1	4 -		li	1.	1	1			
-12	642714	& . Seal, Oil		•	1	1		'	["	'	1	'	1	1	1			
-13	538789A1	Cover Assembly, Oil Pump			1	1					1		1	1	l'i			
-14	531378	& . Seal Oil	•		1	1					1		i	1	ľ			١
-15	401963	† . Stud, 1/4 x 1-1/4 Inch Long			'	•					١.		'	Ι΄	'			١
		ATTACHING PARTS			1	1					1		1	1	1		- 1	-
-16	20522	Washer, Plain			1	1		ļ			1		2	2	2	li		-
-16	25164	Washer, Special	•		2	2					2		2		2			
-17	MS35338-44	Washer, Lock			2	2					2		2		t .			
-18	2437	Nut, Plain, Hex	٠ .		2	2		1			-		1	12	1		- 1	
		* * * *			1	1					1		1	1	1			
-19	535908	Gear, Bevel, Tach Drive	•		1	1					li		1	1	1		Ī	
-20	535885	& Gasket			1	ľ					li	1	1	1	1			
-21	535887	Cover, Tach Gear Box	•			'					ľ		'	Ι΄	Ι΄		l	
		ATTACHING PARTS							İ					4	4	H	l	
-22	2471	Washer, Plain	• •		4	4					4		4		4			
-23	22910	Washer, Lock	• •		4	4					4	}	1	4	1 '			ļ
-24	20655	Screw	• •		4	7					7		"	7	7			
٥٣	1400104-01	* * * *			1	1					1		1	1	1			
-25	MS9134-01	& Gasket				1					1		1		1		-	-
-26	640380	•	•			١.												
		ATTACHING PARTS				,				ļ			1	4	4			- 1
-27	2472	Washer, Plain	• •		4	4					4		4		4			
-28	MS35338-44	Washer, Lock	•		4	4					4		4					١
-29	2437	Nut, Plain, Hex	•		7	7							1	['			-
					ŀ													
							ļ							1				
					ŀ													
					ł													
								١										
						l												
																		1
														-		1	1	

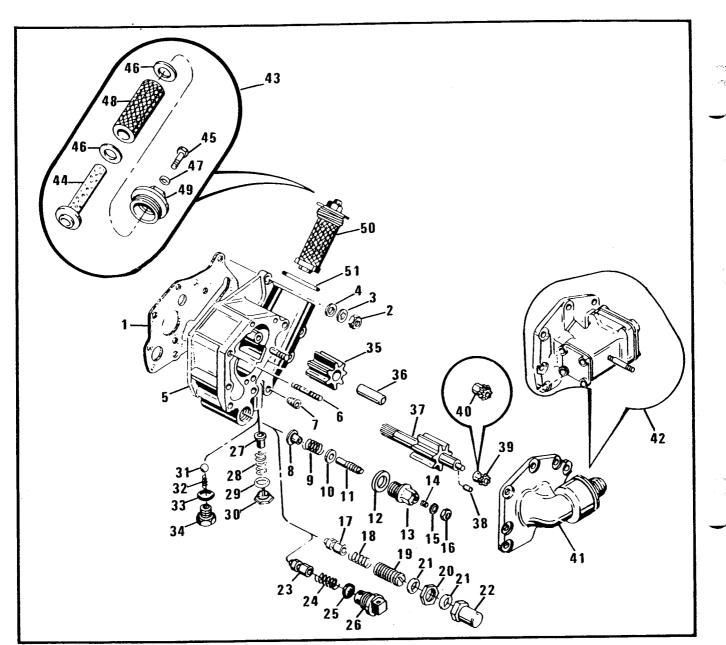


FIGURE 29 - OIL PUMP ASSEMBLY
MODELS 10-470-C,D,E,F,G,H,J,K,L,M,N,P,R,S,U,V

FIG.	PART			Q	U/	٩N	TI	ΤY	'	PE	R	Α	SS	E١	ΛB	LY	,		
INDEX	NUMBER	12345 DESCRIPTION	C	D	E	F	G	Н	J	K	L	M	N	P	R	S	U	V	1
29-1	538185 632563A4 632563A7 632563A16 632563A17 632563A29 632563A20	& Gasket, Oil Pump Housing Housing Assembly, Oil Pump, Complete Housing Assembly, Oil Pump Complete Housing Assembly, Oil Pump Complete Housing Assembly, Oil Pump Complete Housing Assembly, Oil Pump Complete Housing Assembly, Oil Pump Complete Housing Assembly, Oil Pump Complete	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	· come Are
		ATTACHING PARTS	1																
-2 -3 -4	2437 MS35338-44 20522	Nut, Plain, Hex	- 11				23 1	11 1		.,		10.0	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,		1, ,	1	1.	1	
-5 -6	632563 401963	① . Housing and Shaft Assembly, Oil Pump	1 2	1 2	1 2	1 2	1 2	1 2	1 2	1 2	1 2	1 2	1 2	1 2	1 2	1 2	1 2	2	T .

FIG.	PART									ΤY				_			/BI		
INDEX	NUMBER		•	45 DESCRIPTION	 C	D	E	F	G	H	J	K	L	М					UV
-7	2024			ug, Pipe, 1/8 Inch NPT	 1	1	1	1	1	1	1	1	1	1		1	1	1	1 1
-8	642336	2		nger, Oil Pressure Relief Valve	 11			1	11	1	1	1	1	1	1		1	1	1 1
9	634150			ng, Oil Pressure Relief Valve	 μ		1	1	11		1	1	1	1	1	1	1	1	1 1
-10	631653			her, Special, Oil Pressure Relief Valve .	 1	t	1	1	1 '	1	1	l l	1	1	1	1	1	1	1 1
-11	642335	2		ew, Adjusting, Oil Pressure Relief Valve	 1	ì	1	1	1.	1	1	1 -	1		1	1	1	1	1 1
-12				ket, Annular	 1	1	1	1	١.	1	1	1	1	1	1	1	1	1	1 1
-13	642224			sing, Oil Pressure Relief Valve	 1	1	1	1	1	1	1	1	1	1	1	1	1	1	1 1
-14	MS214657		٠	sert Helical Coil	 1	1	1	1	1	1	1	1	1	1	1	1	1	1	1 1
-15	X1473 8	<u>B</u>		ket, Copper	 1	1 '	1	1	1	1	1	1	1	1	1	1	1	1	1 1
-16	632762			, Lock	 1	1	1	1	1	1	1	1	1	1	1	1	1	1	1 1
-17	627494	3		nger, Oil Pressure Relief Valve	 1				1	1	1	1	1	1	1		1		Ì
-18	627495 (3		ng, Oil Pressure Relief Valve	 1				1	1	1	1	1	1	1		1		.
-19	627651	3		ew, Adjusting	 1				1	1	1	1	1	1	1		1		
-20	627652			, Adjusting Screw	 1		1		1	1	1	1	1	1	1		1		
-21	AN900-14 3	&		ket, Annular	 2			1	2	2	2	2	2	2	2		2		
-22	627650	3		, Oil Pressure Relief Valve	 1				1	1	1	1	1	1	1		1		1
-23	537229	3		nger, Oil Pressure Relief Valve	 1				1	1	1	1	1	1	1		1		
-23				nger, Oil Pressure Relief Valve		1	1	1								1		1	1 1
-24				ng, Oil Pressure Relief Valve	1	1	1	1								1		1	1 1
-25				ket, Annular		1	1	1				Ì	ļ			1		1	1 1
-26	538736			, Oil Pressure Relief Valve		1	1	1								1		1	1 1
-27	631638			ve, By-Pass	 1	1	1	1		1		1.	1	1	1]	11		
-28	631478		-	ng, By-Pass Valve	 11	1	1	1	1 -	1	1	1	1	1	1 -	1	1	1	1 1
-29		&		ket, Annular	 1		1	1	1					1	1	1	1		
-30	631995	_		and Plug Assembly	1		1	1	1		1		1	1	1	1			
-31	2849	3)		, Filter By-Pass	 1	1	1]	1		1	1	1	1	1	1]	1	
-32	2848	3)		ng, Filter By-Pass	 1	1	1	1	1	1		1	1		1	1		!	
-33		Š.		ket, Annular	 1	1 -	!	1	1		!	'		1	1	!		!	
-34	532432			, Filter By-Pass	 1		1	1	1				!		1	1		!	
-35	539525		•	r and Bushing Assembly, Oil Pump	 1			1	1	1	1	1		1	1	1		,	
-36	539523		-	ishing, Oil Pump Gear	 2	2	2	2	2	2	2	2	2	2	2	2	2	2	2 2
-37	538516			r Assembly, Oil Pump and Tach Drive.		1		1					1	1	4	ı			1 1
-37	538609			Assembly, Oil Pump and Tach Drive.	 1					1			,	,	1	1		1	1 1
-38	535634			owel	 ¦								'	1	1	1		1	1 1
-39	535008			r, Bevel, Tachometer Drive	1	1	1	'	'	'	'	'	1	1	'	1	'	- 1	1 1
-40	535900			r, Bevel, Tachometer Drive	1	1	1	1	1	1	1	1	'	'	1	•	1		. 11
-41	***			er, Oil Pump, Mechanical Tach	'	1	'	'	'	'		'	1	1		1	'	'	1 1
-42				er, Oil Pump, Electric Tach		1	1	1					'	1		1		1	1 1
-43	538727			er, Oil		1	1	1						1		1		1	1 1
-44	Q9T116-218		٠	be Assembly, Perforated		ľ	1	'						1		1		1	1 1
-45	MS20073-04-10		•	olt, Drilled, Hex Head		1	1	1						1		1		1	1 1
-46	Q9S552-06		٠	asher, Annular, 1/4 Inch		2	2	2						2		2		2	2 2
-47	535933		•	sket, Felt, 5/8 Inch ID		1	1	1						1		1		1	1 1
-48	Q9T116-07		•	ement Filter		1	i	1.						1		1			$i \mid i$
-49	628129		٠	en Assembly, Oil	1	'	'	'	1	1	1	1	1		1	•	1		
-50	534862		•	en Assembly, UII	 li	1	1	1		i	•	i	t	1	1	1	1	1	1 1
-51	AN900-28	\$	٠	et, Amudi	 Ι΄	'	'	'	'	'	'					ĺ		-	
NOTEC:					ı		f	,	,	•	•	•	•	•	•	•	. ,	,	•

- *** See Figure 30 for detail parts.
- ① If replacing old style pump body, service with 632563A11.
- ② If replacing 631618 plunger or 632761 screw, it will be necessary to order both 642336 and 642335 or 642335A1 service kit. (See Service Bulletin M78-2 Rev. 1.)
- 3 Existence of these parts indicates early style pump. If pump is serviceable, these parts must be used to replace worn parts.

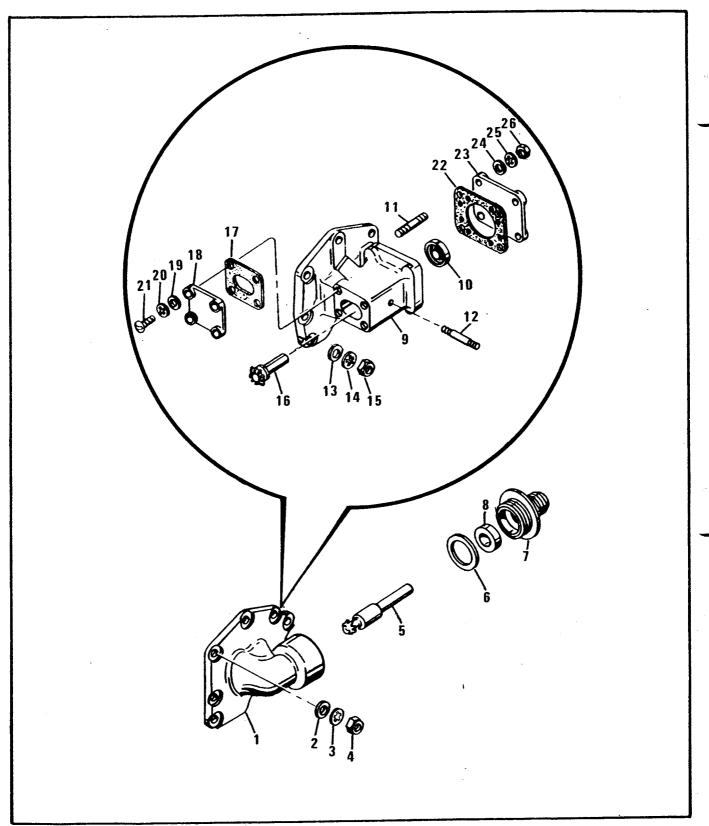


FIGURE 30 - OIL PUMP COVER AND TACHOMETER DRIVE MODELS 10-470-C,D,E,F,G,H,J,K,L,M,N,P,R,S,U,V

Γ	FIG.	PART				0	U/	٦N	TI	TY	·	PE	R	A	SS	E۸	1B	LY	,	
- [i	NDEX	NUMBER		12345 DESCRIPTION	C	D								M						٧
_	30-1	625886		Cover, Oil Pump	1		1	1	1	1	1	1	}		1		1	1		
		020000		ATTACHING PARTS																
	-2	20522			,		2	2	2	2	2	2			2		2	2		
	-2	MS35338-44		Washer, Lock	2		2	2	2	2	2	2			2		2	2		
	-3 -4	2437		Nut, Plain Hex	2		2	2	2	2	2	2			2		2	2		
	-4	243)		* * * *	[-	-			Γ		ļ	-		-	Γ		
	-5	631650		Shaft and Gear Assembly	1		1	1		1		1			1		1	1		
	-6	632085	&	Gasket, Annular	1		1	1		1		1		İ	1		1	1		
	-7	21208A2		Housing Assembly, Tach Drive	1					1		1			1		1	1		
	-8	642714	&	. Seal, Oil	1		1	1	1	1	1	1			1	ļ	1	1		
	-9	538789A1		Cover Assembly, Oil Pump		1						l	1			1			1	1
	-9	628859		Cover Assembly, Oil Pump										1						
	-10	531378		. Seal, Oil		1						1	1	1		1			Ι.	1
	-11	401963		. Stud, 1/4 x 1-1/4 Inch Long	1	4					l		4	4		4	ļ		4	4
	-12	401816	†	. Stud, 1/4 x 1-11/16 Inch Long							Ì			1						
				ATTACHING PARTS									ł							
	-13	20522		Washer, Plain		2		ļ					2	2		2			2	2
	-14	MS35338-44		Washer, Lock		2							2	2		2			2	2
	-15	2437		Nut, Plain Hex		2							2	2		2			2	2
				* * * *																
	-16	535908	_	Gear, Bevel, Tach Drive		1							1	1		1			1	1
	-17	535885	&	Gasket		1	ĺ			1			1	ľ		1			1	1
	-18	535887		Cover, Tach Gear Box		'								ļ'		'	ŀ		•	
				ATTACHING PARTS													1			
	-19	2471		Washer, Plain		4							ı	4		4		1		4
	-20	22910		Washer, Lock		4							4	4		4				4
	-21	20655		Screw	l	4						1	4	4		4			4	4
	22	M00104.01	0	* * * *		1							1	1		1			1	1
	-22 -23	MS9134-01 640380	Ċ	Gasket		1						ŀ		1	1	ľ			1	
	-23	040300		·		'								ľ		'			ľ	•
				ATTACHING PARTS															A	A
	-24	531547		Washer, Plain		4				ŀ				4		4			ł	4
	-25	MS35338-44		Washer, Lock		4 4	Ì							4 4		4	Ì			4 4
	-26	2437		Nut, Plain Hex		7							7	[]			7	7
																İ				
				•																
Ì																				
/																				
						ļ											ĺ			
					l	1		ł				1				ŀ	i			
								ŀ								İ				
ì						ĺ														
				!																
																	1			
	•																1			
					1	1	ı	1	ı	1	ĺ	1	1	1	1	I	ı			

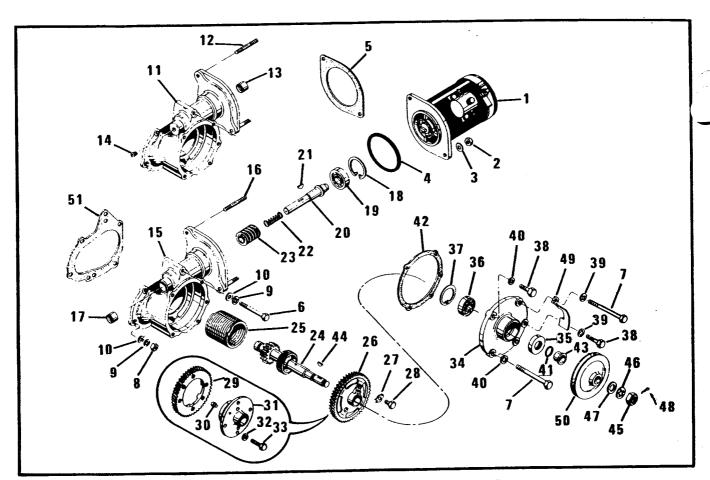


FIGURE 31 - STARTER AND STARTER ADAPTER MODELS 0-470-A,B,E,G,J,K,L,M,P,R,S,U

FIG.	PART					Γ	_	2U.	ΑL	.IT	Y	PE	R	Α	SS	EM	BL	Υ.	_	1
INDEX	NUMBER		12345	DESCRIPTION		A	В	E	G	J	ΚĮ	_ M	P	R	S	U	\Box		L	
31-1	626960	1	Starter, 12 Volt			1					1		1				İ			
-1	627841	1	Starter, 12 Volt				1					ון								
-1	631261	1	Starter, 12 Volt					1				.		1						
-1	628482	Ū	Starter, 12 Volt						1.	1	1	'		1			- 1			
-1	634592	1	Starter, 12 Volt									-			'					
				ATTACILING	OA DTC															
-2	2441		Nut Hex	ATTACHING		2	2	2	2	2	2	2 2	2	2	2	2				l
-3	539058		Washer Plain		<i></i>	2	2	2	2	2	2	2 2	2	2	2	2				
3	303030		***************************************	* * * 1	.	1	1	1		!!		- 1	- 1	1	i					Name
-4	MS9021-038	&	O-Rina				1	1	1	1	1	1 1		1	1	1		1		
-5	534316	<u>&</u>	Gasket, Starter			11	Ì						1							1
-6	537742	_	Bolt. 5/16 - 18	x 2-13/16 Inch Long		11							1		1	1			1	1
-7	538999		Bolt. 5/16 - 18	x 3-5/8 Inch Long .		3	3	3	3	3	3	3 3	3 3	3	3	2				1
-7	537750		D 1.									_				1				2775
-8	2439		Nut, Hex			2	2	2	2	2	2	2 2	2	2	12	2		ŀ		(
-9	MS35338-45		Washer, Lock .			4	4	4	4	4	4	4 4	4	4	5	5				-
-10	2473		Washer, Plain .			4	4	4	4	4	4	4 4	1 4	4	5	5				1
	537743A2		Adapter Assemb	bly, Starter, Complet	B <i>.</i>	1							١.		1					1
	635050A4		Adapter Assemb	bly, Starter, Complet	e	1.	1	1	1	1]	1 1	1 1	1	11					
-11	537743		. Adapter Asser	mbly, Starter		1													1	Ų,
-12	401965	†	Stud, 3/8 x	1-13/32 Inch Lung		2		1				1								1
-13	534969		Bearing, Ne	edle		1														-
-14	AN932-2		Plug, Pipe, 1	1/8 NPT		1			1			Ì						1	_	1

FIG.	PART	QUANTITY PER ASSEMBLY	
INDEX	NUMBER	12345 DESCRIPTION ABEGJKLMPRSU	\dashv
31-15	635050A1	Adapter Assembly Starter	7
31-15 16	402127	t Stud 3/8 x 1-17/32 Inch ong	-
-17	641368	Bearing, Needle	
-18	502287	. Ring, Internal Retaining	
-16 -19	X13041	. Bearing, Ball	
-20	631252	Shaft, Worm Drive	-
-20	534982	. Shaft, Worm Drive	
-20 -21	MS35756-8	Key Woodruff 1 1 1 1 1 1 1 1 1	
-21	536552	Spring, Starter	
-22	539805	. Gear, Starter Worm	١
-23 -23	534916	Gear, Starter Worm	- 1
-23 -24	539568	Shaftgear, Starter	-
-24 -24	534976A1	Shaftgear, Starter	
-25	539800	† Spring, Clutch	
-25	537341	† . Spring, Clutch	1
-25 -26	539785	Goar Starter Worm Wheel	
-20 -27	501867	. Washer, Tab	
-27 -28	536566	Screw, 1/4 - 20 x 11/32 Inch Long	
-28	633845	Screw, 1/4 - 20 x 13/32 Inch Long	- 1
-29	534934	Gear, Starter Worm Wheel	
-30	534900	Dowel, Stepped	
-31	535425	Drum, Starter Clutch	
-32	20522	. Washer, Plain	- 1
-32	22537	. Screw, Hex Head, 1/4 - 20 x 5/8 Inch Long 4	
-33 -34	537738A1	Cover Accomply Starter Adapter	
-35	534938	8. Seal, Oil	
-36	534685	. Bearing, Ball	
-37	534715	. Ring, Internal Retaining	
-31	554715	ATTACHING PARTS	
00	E077E0		
-38	537750	. Doit, 0/10 10 X 1.70 mon 20.9	
-38	535651	. Bolt, 1/4 - 20 x 1 Inch Long	
-39	MS35338-45	. Washer, Lock	
-39	MS35338-44	. Washer, Lock	
-40	2473	* * * * *	
A 1	AN123862	8 . Seal, O-Ring	
-41 -42	537749	8. Gasket, Cover	
-42 -43	534980	. Sleeve, Bearing Retaining	
-43	MS35756-8	. Key, Woodruff	
-45	· ·	Nut, Check	
-45 -45	AN320-9	. Nut, Check	
-45 -46	13XX299	Washer Lock	
-40 -47	AN960C916	. Washer, Plain	
-4 <i>1</i> -48	AN381-3-18	Pin, Cotter	
-40 -49	628760	Indicator Engine Timing	
-49	534775	(1) Shaya Caparatar Drive	
-50 -51	537745	& Gasket, Adapter	
-01	337773	G. Guarrett, Flumpton 1771	
NOT	- _		
NOTI			
O	See Section VI	for Specification Applications.	1

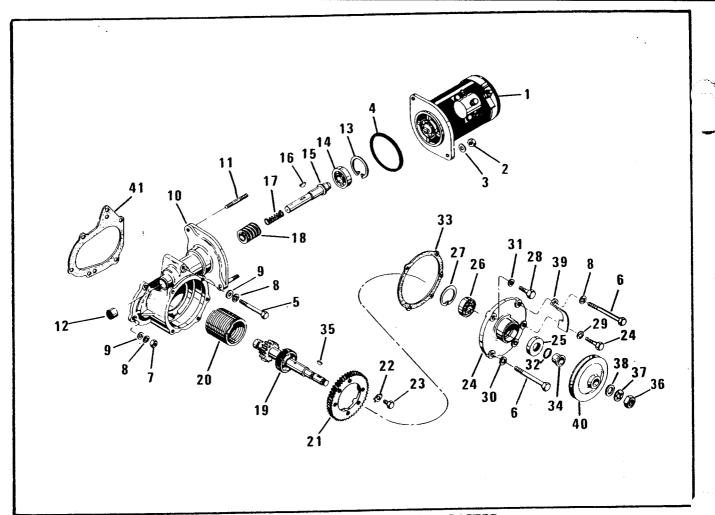


FIGURE 32 - STARTER AND STARTER ADAPTER MODELS 10-470-C,D,E,F,G,H,J,K,L,M,N,P,R,S,U,V

FIG.	PART		T	Q	U/	N	TI	ΓY	F	EF	3	A	SS	ΕN	ΛBI	LY		
INDEX	NUMBER	12345 DESCRIPTION	C	D	Ε	F	G	H	J	K	L	3	7	Р	R	S	U	4
32-1	637847	① Starter, 24 Volt	.	1							1	1		1			1	1
-1	631261	① Starter, 12 Volt	.				1								1			١
-1	634592	① Starter, 12 Volt	. 1	1	1	1				1			1			1		
- 1	628482	① Starter, 12 Volt	.					1	1		ĺ			1				
•	020.02	ATTACUING DARTS	- 1.															
2	2441	Nut, Hex	. 2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
-2		Washer, Plain	. 2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
-3	539058	* * * *																ľ
-4	MS9021-038	& O-Ring	. 1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
- -5	537742	Bolt, 5/16 - 18 x 2-13/16 Inch Long	. 1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
-5 -6	538999	Bolt, 5/16 - 18 x 3-5/8 Inch Long		3	3	3	3	3	3	3	3		ı		3	3	3	3
-0 -7	2439	Nut, Hex	. 2	2	2	2	2	2	2	2					2	2	2	2
-8	MS35338-45	Washer, Lock	. 4	4	4			4				3			4	4	4	4
0	2473	Washer, Plain	. 4	4	4	4	4	4	4	4	4	3	3	4	4	4	4	4
-9 -9	2473	Washer, Plain	.	1	Ì							1	İ					
-3	635050A4	Adapter Assembly, Starter, Complete	. 1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
-10	635050A4	Adapter Assembly Starter	. [1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
-11	402127	1 Stud, 3/8 x 1-17/32 Inch Long	. 2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
-12	641368	Bearing, Needle	. 1	1	1	1	1	1	1	1	1	1	1	1	1	1	1 1	~ .
-13	502287	. Ring, Internal Retaining	. 1	1	1	1	1	1	1	1	1	1	1	1	1	1	1 3	1

	FIG.	PART		Γ	Q	U/	N/	TI	TY	·	PE	R	A	SS	ΕN	1B	LY		\neg
	INDEX	NUMBER	12345 DESCRIPTION	C	D				Н		K		_			R		u l	\forall
	32-14 -15 -16 -17 -18 -19 -20 -21 -22 -23 -24 -25 -26	X13041 631252 MS35756-8 536552 539805 539568 539800 539785 501867 633845 537738A1 534938 534685	. Key, Woodruff . Spring, Starter . Gear, Starter Worm . Shaftgear, Starter † Spring, Clutch . Gear, Starter Worm Wheel . Washer, Tab . Screw, 1/4 - 20 x 13/32 Inch Long . Cover Assembly, Starter Adapter & Seal, Oil . Bearing, Ball	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1			1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	11111111111	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1
	-27	534715	Ring, Internal Retaining	'	'	'	'	'	'	'	'	'	'	'	'	'	'	'	'
	-28 -29 -30 -31	537750 MS35338-45 2473 501868	ATTACHING PARTS . Bolt, 5/16 - 18 x 1-1/8 Inch Long	2	2 2 2 1	2 2 2 1	2 2 2 1	2 2 1	2	2 2 2 1	2	2 2 1	2	2 2 1	2	2	2 2	2	2 2 2 1
	-32 -33 -34 -35 -36 -37 -38 -39 -40 -40 -41		& . Seal-O-Ring & . Gasket, Cover . Sleeve, Bearing Retaining . Key, Woodruff . Nut, Check . Washer, Lock . Washer, Plain Indicator, Engine Timing Sheave, Generator Drive Sheave, Generator Drive & Gasket, Adapter	1 1 1 1 1 1	1 1 1 1 1 1 1	1 1 1 1 1	1 1 1 1	1 1 1 1 1 1	1 1 1	1 1 1 1 1	1 1 1 1 1 1	1 1 1	1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1	1 1 1		1 1 1 1 1 1 1	1 1 1 1	1
)																		
\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\			-							·									
	NOT!	E.																	
			for Specification Applications.																
					1	ı	•				!			1	ı	i	ŀ	ł	1

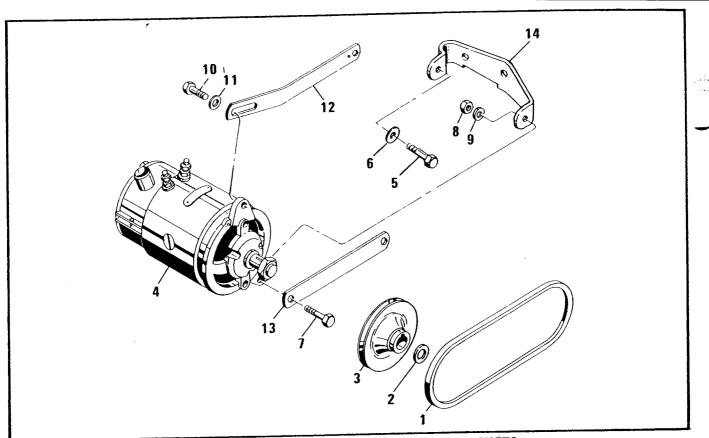


FIGURE 33 - GENERATOR AND MOUNTING BRACKETS MODELS 0-470-A,B,E,G,J,K,M,P,R

FIG. PART NUMBER	F10	DADT								 Τ	QI	UA	N.	 [17	Υ	PI	ER		45	SE	MB	LY	,		فد
2 535541 Spacer, Sheave Spacer, Spacer, Sheave Spacer, Sheave Spacer, Sheave Spacer, Spacer, Sheave Spacer, Spacer				12345	DESC	CRIPT	ION			 A			_		1	L	1 F	F	13	1	J_		\Box		1
2 535541 Spacer, Sheave Spacer, Spacer, Sheave Spacer, Sheave Spacer, Sheave Spacer, Spacer, Sheave Spacer, Spacer	33-1	539547-31.19		Belt, Generato	r Drive					 1	1	1	1	1	1	1	1						r	_	
-2 536213				Spacer, Sheave								1	1	וו	1	1	. [1	ין י		1	-	'		-	
-3 534787		536213		Spacer, Sheave						 1]					.	Ι.	.							
-4 535928		534787	1	Sheave, Genera	itor Driv	/e			• • • •	 1	1	1	ı	1	1	•	:	' '						١	
-4 627274		535928	_	Generator, 24	Volt							1					' ,			1				ı	
-4 627274	-4	627272	(1)	Generator, 12	Volt, 50	Amp.							1					'						- 1	
ATTACHING PARTS -5 AN5-10A Bolt		627274		Generator, 24	Volt, 25	Amp.				 Ι.	1			١. ا		.		١,						۱	
-5 AN5-10A Bolt	-4	627273	1	Generator, 12	Volt, 35	Amp				 լյ		1		1	•	•	1		1						
-5 AN5-10A						ATTAC	HING	PAR	TS	1								1						1	
-6 2473	-5	ΔΝ5.1ΩΔ		Rolt						 1	,						1	1	1	1				١	
-7 AN101218 Bolt	_	,		Washer Plain.	5/16 Inc	ch				 [1	1						1	1						Į	~
-7 AN101217 -8 2439 -9 401506 -10 AN75A6 -11 537539 -12 538346 -13 538070 -13 538069 -14 539579 -18 Dolt				Bolt						 1	1	1	1	1	1	1	1	1	1	-				- \$ - ¥	4
-8 2439	-			Bolt						 1				1											
-9 401506 Washer, Plain, 21/64 Inch				Nut Plain, He	κ					 2		2	2	2	2	2		2	2	- 1		Ì			
-10 AN75A6 -11 537539 Bolt	=			Washer Plain.	21/64 1	nch .	<i></i>			 12	2	2	2	2	2	2	2	2	2						
-11 537539 Washer, Plain				Bolt						 - 11	11				1	1	1	1	1						
-12 538346				Washer, Plain						 1	2	2	2	2	2	2	2	2	2					. 1	, .
-12 538346 -13 538070 -14 539579 O Arm, Generator Belt Adjusting		00,000		,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,		*	* *	*											١		-			9	
-13 538070	-12	538346	1	Arm, Generato	or Belt A	Adjustin	ıg						1					1	.	- 1				Ì	مس
-13 538069 ① Bracket, Generator Support			Õ	Arm, Generate	or Belt A	Adjustin	ng			 11	1	1			1	1	1		!	- [
-14 539579		* *	Œ	Bracket, Gene	rator Su	pport				 - 11					1	1	1	1	1						
			Ũ	Bracket, Gene	rator Mo	ounting				 1	1	1	1	1	1	1	1	1	П					1 1	ii
NOTE:				ŕ																					
NUIC.	N) (nte.																					1	·	
					A 15 -																				الإد الثانية:
① See Section VI for Specification Applications.	((1) See Section	V١	tor Specification	Applic	ations.				1													.		ĺ

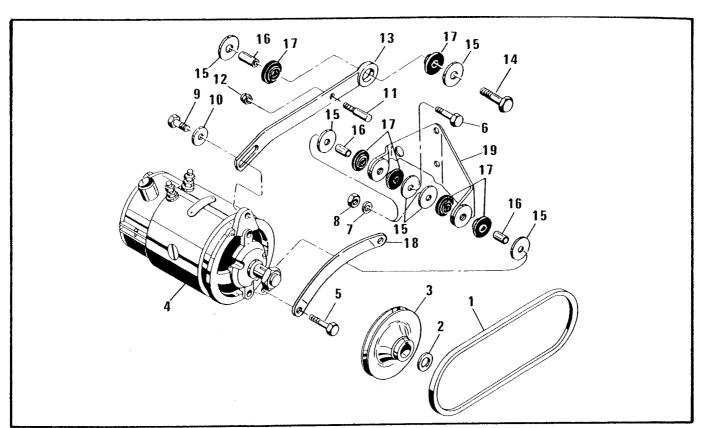


FIGURE 34 - GENERATOR AND MOUNTING BRACKETS MODELS 10-470-C,D,E,F,G,H,J,K,L,N,P,R,S

FIG.	PART	T			Q	UA	١N	TI	ΤY	F	PΕΙ	R	A	SSI	ΕN	1BI	LY	
INDEX	NUMBER		12345 DESCRIPTION	C	D	E	F	G	Н	J	K	L	М	N	P	R	S	UV
34-1	539547-31.19		Belt, Generator Drive	1	1	1	1	1	1	1	1	1		1	1	1	1	
-2	536213		Washer	1	1	1		1	1	1	1	1		1	1	1	1	
-3	627377	1	Sheave, Generator Drive	1	1	1	1	1	1	1	1	1		1	1	1	1	
-4	627272	1	Generator, 12 Volt, 50 Amp	1			1		1					1			1	
-4	627273	1	Generator, 12 Volt, 35 Amp			1		1		1	1					1		
-4	627274	1	Generator, 24 Volt, 25 Amp	1	1													
-4	630686	1	Generator, 24 Volt, 25 Amp									1						
			ATTACHING PARTS															
-5	AN5-16A		Bolt	1	1	1	1		1	1	1	1		٠,	'		1	
-6	AN5-15A		Bolt	1	1	1		1	1	1	1	1		1	1	1	1	
-7	2473		Washer, Plain	1	1	1		1	1	1	1	1		1	1	1.	1	
-8	2439		Nut, Plain, Hex	2	2	2	2	2	2	2	2	2		2	2	2	2	
-9	AN75A6		Bolt	1	1	1	ž.	1	1	1	1	1		1	1	1	1	
-10	537539		Washer, Special	1	1	1	1	1	1	1	1	1		1	1	1	1	
			* * * *	١.		١.												
-11	627673		fulci, Niss	1	1 -	1	1	1	1	1		1		1	1	1	1	
-12	22661	_	Nut, Elastic Stop	1	1	1	1	1	1	1	1	1		1	1	1	1	
-13	627276	\odot	Arm, Generator Belt Adjusting	1	1	1	1	1		1	1	1		1	1	1		
-14	AN75A15		Bolt	1	1	1	1	1	1	1		1		1	1	1	1	
-15	627279		riadio, openia	6		6		6	6			6			-	6	6	
-16	627181		Daving	3	3	3	3	3	3	3		3		3	3	3	3	
-17	627282		Bushing, Rubber		6	6		6		6	6	6			6	6		
-17	630519	\sim		6			6		6			1		6			6	
-18	627068		Bracket, Generator Support	1	1	1	1		1	1	1	1		1	1	1	1	
-19	627277	0	Bracket, Generator Mounting		1												1	
-19	627690	(1)	Bracket, Generator Mounting	1		1	1							ı			1	}
	NOTE:																	

① See Section VI for Specification Applications.

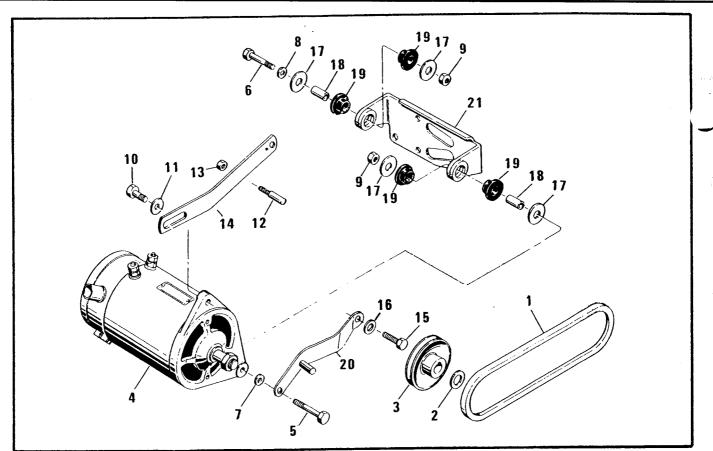


FIGURE 35 - GENERATOR AND MOUNTING BRACKETS
MODEL 10-470-M

				L	MODE	L 1U-4/U-M																		٠,
FIG.	PART							L	_			TI					AS	-						
INDEX	NUMBER		12345	DES	CRIPTION	J		C	D	E	F	G	H	J	K	L	М	N	Р	R	S	<u>U</u> '	a de la companya de l	
35-1	539547-32.00		Belt, Generate	or Drive													1				١	1	7	
-2	536213							1	1								1			Ì	f	1	1	
-3	627377	1	Sheave, Gener	ator Dri	ve				ĺ								1				l			
-4	629417																1							
					ATTACHIN	G PARTS																	-	
-5	AN5-17A		Bolt														1							
-6	AN5-15A		Bolt					l		ļ					ŀ	ĺ	1						-	
-7	2555																11					ŀ	1	
-8	2473																1					ŀ	1	
-9	2439		Nut, Plain, He	x, 5/16				l			İ						2							٠.,
-10	AN75A6							l						1			1						\$	
-11	537539		Washer, Plain,	11/32]									1						\\\-\ <u>\</u>	أنف
					* *				l														l.	
-12	627673-2							1						1			!							
-13	22661	•																					1	
-14	629825	$\mathbf{\Theta}$!							
-15	AN75A10								l								!							
-16	MS35338-45											ŀ					!							مَنك
-17	627279															İ	4							
-18	627281																							
-19	630519								1								4							
-20	630039					port											!							
-21	628004	(I)	Bracket, Gene	rator M	ounting		• • •		-														1	
	NOTE:																						Y.	ند،
	① See Sec	ction	VI for Specifi	ication A	Applications 4	•		ļ	ì	ŀ	1	İ	ļ	f	I	,			l	ľ	İ	,		

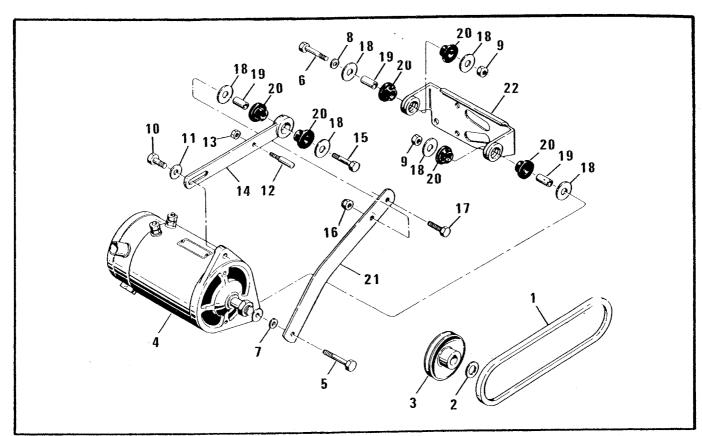


FIGURE 36 - GENERATOR AND MOUNTING BRACKETS MODELS 10-470-U,V

FIG.	PART	QUANTITY PER ASSEMBLY
INDEX	NUMBER	12345 DESCRIPTION CDEFGHJKLMNPRSUV
36-1	539547-30.00	Belt, Generator Drive
-2	536213	Washer
-3	628005	① Sheave, Generator Drive
-4	629417	① Generator, 24 Volt, 50 Amp
		ATTACHING PARTS
-5	AN5-17A	Bolt
-6	AN75-16	Bolt
-7	2555	Washer, Plain, 5/16
-8	2473	Washer, Plain, 5/16
-9	2439	Nut, Plain, Hex
-10	AN75A6	Bolt
-11	537539	Washer, Plain, 11/32
		* * * *
-12	627673	Idler, Kiss
-13	22661	Nut, Elastic Stop, 1/4
-14	628580	① Arm, Generator Belt Adjusting
-15	538607	Bolt, 5/16 x 1-15/32 Inch Long
-16	21213	Nut, Elastic Stop
-17	AN75A10	Bolt
-18	627279	Washer Special 21/64
-19	627281	Bushing
-20	630519	Bushing Rubber
-21	628583	Bracket, Generator Support
-22	628004	O Bracket, Generator Mounting
1	NOTE:	

① See Section VI for Specification Applications.

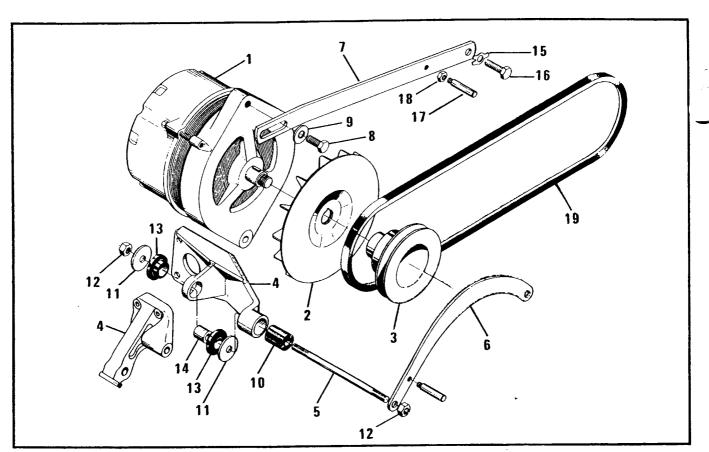


FIGURE 37 - ALTERNATOR (OPTIONAL EQUIPMENT)
ALL MODELS

FIG.	PART		C	2U,	ΑN	TI	ΤY	PI	ER	A	SS	EN	ИΒ	LY	_
INDEX	NUMBER	12345 DESCRIPTION	\perp	I	A	L	L	_ 1	N C	D	E	L	S	П	_
37- 1	631111	Alternator						1)						
-2	631094	Fan, Alternator						1					1		
-3	630985	Sheave, Alternator Driven	- [ļ				1	1			1			
-4	631000	Bracket Assembly				ļ		1		i					
-4	634673	Bracket, Engine Mount and Alternator							1	ļ					
-5	630989	Shaft, Alternator Mount		İ	1						1		1		
-6	631200	Bracket Assembly, Alternator Support, Lower						'	1	}		1	1		
-7	632312	Bracket, Alternator Adjusting Arm, Upper				1									
-8	628730	Screw, Bracket at Alternator						1	1						
-9	537539	Washer, Bracket at Alternator						'	1				1		
-10	630988	Bushing, Rubber, Lower Support						-	l		1		1		
-11	633062	Washer, Lower Support						12	2	1			İ		
-12	2439	Nut, Plain						2	2				1		
-13	630519	Bushing, Rubber	-						2		1		1		
-14	627281	Bushing				1			1						
-15	501868	Washer, Tab						-	1				1		
-16	537750	Screw							1				1		
-17	627673-2	Idler, Kiss							١ .		1		1		
-18	22661	Nut, Elastic Stop	-						1						11
-19	539547-31.19	Belt			l			[1						
NO	TES:														
	Optional for all	0-470/10-470 Models.													
	See Section VI	for customer specification.													

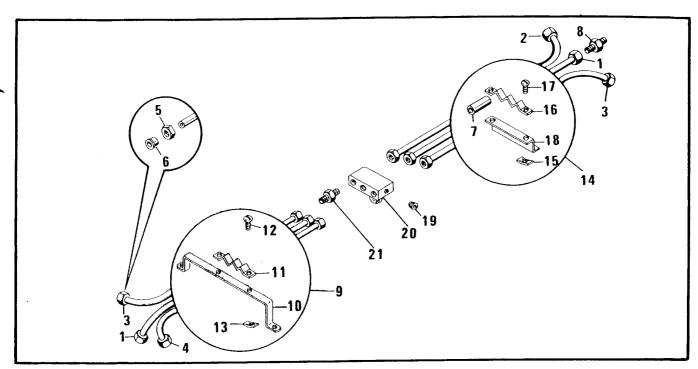


FIGURE 38 - PRIMING SYSTEM MODELS 0-470-A,B,E,G,J,K,L,M,P

FIG.	PART		ASSEMBLY
INDEX	NUMBER	12345 DESCRIPTION ABEGJKLMP	RSU
38-	536486	Priming System Assembly	
	EQ5880	① Priming System Assembly	
-1	532685	. Tube Assembly, Primer No. 3, 4	
-2	532686	. Tube Assembly, Primer, No. 5	
-3	532687	. Tube Assembly, Primer, No. 1, 6	
-4	536485	. Tube Assembly, Primer, No. 2	
-5	AN805-2	Nut, Union	
-6	20720	Cone, Union	
-7	21512	. Nut, Union	
-8	AN4022-1	Nipple, Priming System	
.9	532943	. Clamp Assembly, 2-4-6 Side	
-10	532944	Reserved Primor Lines 3 1 1 1 1 1 1 1 1 1	
-11	532945	. Clamp, Primer Lines	
		ATTACHING PARTS	
-12	AN530-10-6	Screw, Tapping	
-13	532362	Screw, Tapping	
-14	532946	. Clamp, Assembly, 1-3-5 Side	
-15	532947	Bracket, Primer Lines	
-16	532945	. Clamp, Primer Lines	
		ATTACHING PARTS	
-17	AN530-10-6	Screw, Tapping	
-18	532362	Nut Speed	

-19	2024	Plug, Pipe	
-20	AN780-2	Nipple, Union, Primer Distributor 6 6 6 6	
-21	539520	Distributor, Primer	
-21	532676	Distributor, Primer	
	TE:		

① This priming system is optional on these models.

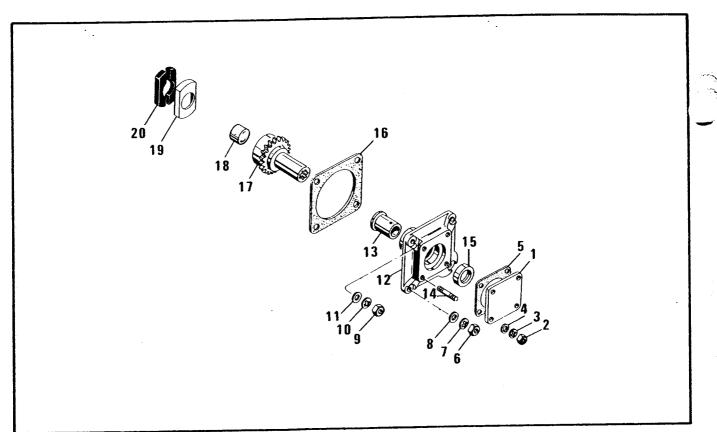


FIGURE 39 - MAGNETO AND ACCESSORY DRIVES MODELS 0-47-A,B,C,E,G,J,K,L,M,P,R,S,U

FIG. INDEX	PART															Tľ								BLY		. ,
	NUMBER		1234	5	D	ESCR	RIPT	ION				_	В	j	ļ					. 1	1		U		\square	7
39-1	640380		Cover, A	ccess	ory C) rive						2	2	2	2	2	2	2	2	2	2	2	2		-	7
												1				İ	• !								'	
-2	2437		Nut, Plair Washer, I Washer, F	n Hex	х							8	8	8	8	8	8	8	8	8	8	8	8			
	MS35338-44		Washer, I	_ock								8	8	8	8	8	8	8	8	8	8	8	8			1
-4	2472		Washer, F	Plain								8	8	8	8	8	8	8	8	8	8	8	B			
			·				*	* *	*							<u>ا</u> ا		_	_				ا ا		1	ı
-5	MS9134-01	&	Gasket, C	Cover	٠							2	2	2	2	2	2	2	2	2	2	2	2			1
-6	2439		Nut, Plai	n Hex	х							6	6	6	6	6	6	6	6	6	6	Ь	6			
-7	MS35338-45		Gasket, (Nut, Plai Washer, I	Lock								6	6	6	6	6	6	6	6	6	6	6	6			
-8	2473		Washer, F	Plain								6	6	6	6	6	6	6	6	Б	6	ייו	6			-
-9	2441		Nut, Plai	n Hex	х							2	2	2	2	2	2	2	2	2	2	Z	2		11	
-10	MS35338-46		Washer, I Washer, I Nut, Plai Washer, I Washer, I Adapter	Lock								2	2	2	2	2	2	2	2	2	2 2	Z	2			
-11	401507		Washer, F	Plain			.,					2	2	2	2	2	2	2	2	2	12		2			
-12	534861A1		Adapter	Asser	mbly	, Magn	neto 8	§ Ассі	essory	Drive		2	2	2	2	2	2	2	2	2	2	Z				
-12	632653A1																						2			
-13	534742		. Bushin	g, Ad	lapte	r						2	2	2	2	2	2	2	2	2	Z	Z				
-13	632330		DLin	_ ^ ~											,		1				١.	١.	Z			
-14	401852	†	. Stud, 1 . Seal, 0	/4 x	1-13	/32 In	ich Lo	ong .				4	4	4	4	4	4	4	4	4	4	4	4			
-15	25102	&	. Seal, O	il, Ad	dapte	er						1	1	1	1	1	1	1	1	1	1		1			1
	534863	&	Gasket, A	Adapi	ter .							2	2	2	2	2	2	2	2	2	2	2	2			1
-17	629076		Gear Ass	embl	ly, Ma	agneto	8 A	ccesso	ry Dr	ive .		2	2	2	2	2	2	2	2	2	2	2	Z			1
	629077		. Seal, O Gasket, A Gear Ass . Sleeve,	Gear	r							[1	1	1	1	1	1	1	1	1	1	1	1			-
	531178		Retainer	, Mag	neto	Drive	Cou	pling			<i>.</i>	2	2	2	2	2	2	2	2	2	2	2	2			
	638172		Retainer Coupling	, Mag	gneto							4	4	4	4	4	4	4	4	4	4	4	4		1'	

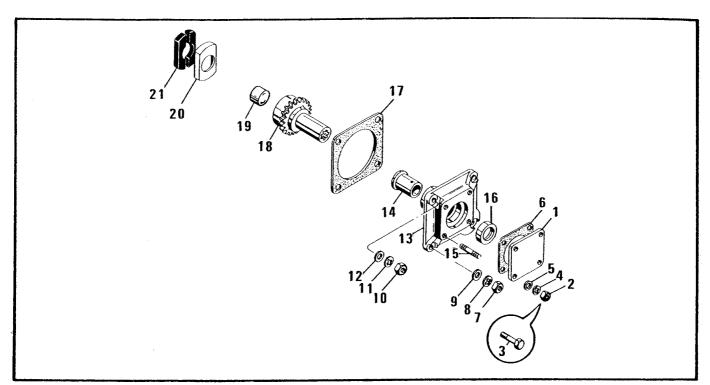


FIGURE 40 - MAGNETO AND ACCESSORY DRIVES MODELS 10-470-C,D,E,F,G,H,J,K,L,M,N,P,R,S,U,V

FIG.	PART	QUANTITY PER ASSEMBLY
INDEX	NUMBER	12345 DESCRIPTION CDEFGHJKLMNPRSU
40-1	640380	Cover, Accessory Drive
-2	2437	ATTACHING PARTS
-3	537629	Nut, Plain, Hex
-4	MS35338-44	Washer, Lock
-5	2472	Washer, Plain
-3	2412	* * * *
-6	MS9134-01	8 Gasket Cover 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2
-7	2439	8 Gasket, Cover
-8	MS35338-45	Washer Lock [6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6
-9	2473	Washer Disin [6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6
-10	2441	Washer, Plain 0 <
-11	MS35338-46	Washer, Lock
-12	401507	Washer, Plain
-13	632077	Adapter Assembly, Magneto & Accessory Drive
-13	534861A1	Adapter Assembly, Magneto & Accessory Drive 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2
-14	534742	. Bushing, Adapter
-15	25008	t Stud. 1/4 x 1-13/32 Inch Long
-16	25102	† . Stud, 1/4 x 1-13/32 Inch Long
-17	534863	& Gasket, Adapter
-18	629076	Gear, Assembly, Magneto & Accessory Drive 2 2 2 2 2 2 2 2
-19	629077	& Gasket, Adapter 2
-20	531178	Retainer Magneto Drive Counting
-21	638172	Coupling, Magneto

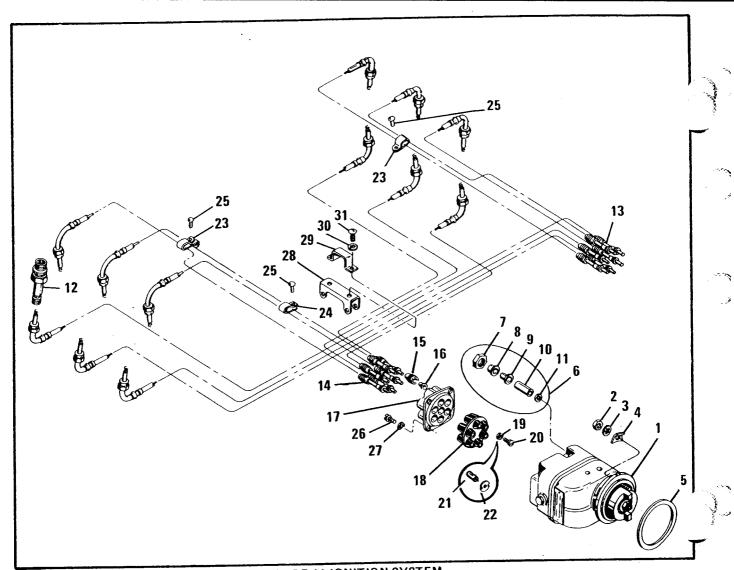


FIGURE 41-IGNITION SYSTEM MODELS 0-470-A,B,E,G,J,K,L,M,P,R

FIG.	PART			Q	U/	λN	TI	ΤY	F	E	R	Α	SS	ΕN	18	LY		
INDEX	NUMBER	12345 DESCRIPTION	A	В	E	G	J	K	L	М	Р	R	S	U		П	\exists	7
41-1	631237	Magneto Assembly	2	2	2	2	2	2	2	2	2	2						
		ATTACHING PARTS																J.,.
-2	2439	Mut, 116A	4	4	4	4	4	4	4	4	4	4	İ					
-3	MS35338-45	Washer, Lock	4	4	4	4	4	4	4	4	4	4						1,000
-4	535847	Washer, Magneto Holding	4	4	4	4	4	4	4	4	4	4						
		* * * *	2		1	2	2	2	2	2	2	1,						
-5	534750	& Gasket, Magneto	Z						2	2	12	12			l			
-6	352024	Kit, Ground Terminal	Z	Z	12	2	Z	Z	14	14	4	14					. [1.5
-7	25318	. Nut, Coupling	ון	1	1	1	1		1	!		!			1			1
-8	25317	. Ferrule, Ground Wire, Outer	1	1	1	1	1	1	1	1	1	1						Visit
. <u>.</u> 9	25316	. Ferrule, Ground Wire, Inner	1	1	1	1	1	1	1	1	1	11			Ì			ı
-10	530455	. Sleeve, Insulating	1	1	1	1	1	1	1	1	1	1						1
-11	25314	. Washer, Plain	1	1	1	1	1	1	1	1	1	1	1					-
-12	630863	Spark Plug, 18mm	12	2	12	2	12							ŀ				
-12	539433	Spark Plug, 18mm						12	12			12	2				Ι.	1 -
-12	627643	Spark Plug, 18mm		12	2	12	2		-		12	?		1			i	3
* -12	627978	Spark Plug, 18mm								12	[]				İ			<u> </u>

FIG.	PART							ΓY	_						BL	Υ	
INDEX	NUMBER	12345 DESCRIPTION	Α	В	E	G	J	K	L	М	Р	R	S	U		\perp	
41-13	625298 ①②	3 Harness Assembly, Shielded Ignition,															
		Left Magneto	1	1	1		1	1	1								-
-14	625299 ①②	3 Harness Assembly, Shielded Ignition,	1.						,								
		Right Magneto	'		1		1	1								-	1
-13	625982 ①②	Harness Assembly, Shielded Ignition,				1					1						-
		Left Magneto				'					'						
-14	625983 ①②	Harness Assembly, Shielded Ignition, Right Magnete				1					1						
10	627805 ①②	Right Magneto									'						
-13	02/000 00	Left Magneto								1							
-14	627804 ①②	3 Harness Assembly, Shielded Ignition,															1
14	027004	Right Magneto								1							
-13	633113 (1)(2)	4 Harness Assembly, Shielded Ignition,															
		Left Magneto										1					
-14	633114 ① ②	4 Harness Assembly, Shielded Ignition,															
		Right Magneto										1					
-15	25302	3) Nut	12	12	12	12	12	12	12	12	12	12					
-16	20087	3 . Ferrule	12	12	112	12	112	112	12	112	12	12					
-17	25312	. Plate, Cable Outlet		2	2	2	2	2	2	2	2	2					
-18	36219	. Grommet, Plate	2		2	2	2	2	2	Z	2	2					
-19	25388	. Washer, Cable Contact			ľ												
-20	25387	. Screw, Cable Contact	12		12	12	12	12	12	12	12	12					
-21	627001	Sleeve, Distributor Cable										12					
-22	627002 535042	. Washer, Magneto Block	2	1,5	12	12	12	12	12	'	12	1.2					
-23 -24	627921	. Clamp, Ignition Leads	۲							2							
-24	02/321	ATTACHING PARTS		ŀ													
-25	627759	Bolt								2							
-25 -26	627756	. Nut, Stop								2							
·20 ·27	21264	. Rivet	2														
2,	21201	* * * *	1													-	
-28	25320	Screw, Machine	8	8	8	8	8	8	8	8	8	8					
-29	25321	Washer, Lock	8	8	8	8	8	8	8	8	8	8					
-30	628271	Band, Clamp		ı	1	t		1	İ	Z	1	1					
	539140	Bracket Assembly, Ignition Harness	1.	1		1	1	1	1			'				-	
	535559	Bracket Assembly, Ignition Harness	1		1	1	1	1	,	1	1	1					ſ
-31	630093	. Bracket & Nut Assembly, Ignition Harness	1	1	'	['	'	'	'	'					- 1
-31 22	538480	Bracket, Ignition Harness	1	ł	1	1	1	1	1	1	1	1					
-32 -33	535557 20527	. Unp, Bracket		ł	2							1					Ì
-34	AN515-8-6	Screw, Machine	12	2	2	2	2	2	2	2	2						
-94	VIA010-0-0	. Outew, machine	1	_		1	-	-			-	-					
									1								
NOTES	2.																
_																İ	
(1) S	See Section VI fo	Specification Applications.															
② S	ee Figure No. 46	for individual cable assemblies.								1							
3 S	ee Figure No. 48	for detail parts of ignition cable spark plug end.															
		for detail parts of ignition cable spark plug end.				1											
ভ ১	ee rigure NO. 47	ioi nerali hariz or idilition canie shark hind eng.	•	,	•	•	•	•	•	•	•	•	•	•	. ,	•	

3 Applicable to all cable assemblies.

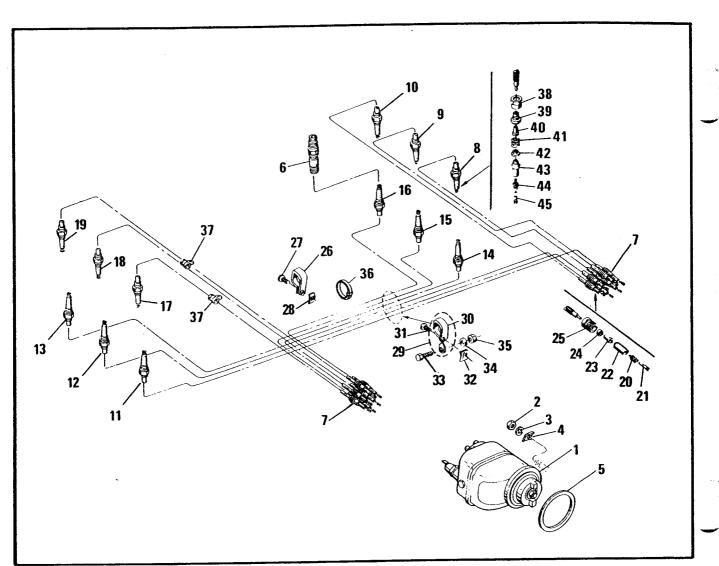


FIGURE 42 - IGNITION SYSTEM MODELS 0-470-S,U

FIG.	PART			Q	U/	۸N	TI	ΤY	P	EF	₹	AS	SS	EN	1B	LY	•	
INDEX	NUMBER	12345 DESCRIPTION	A	В	E	G	J	K		М	Р	R	S	U	\Box	F		П
42-1	625765	① Magneto Assembly											2	2				
		ATTACHING PARTS																
-2	2439	Nut, Hex	'									1 1	-	4		1		
-3	MS35338-45	Washer, Lock			1	l						ΙI	4	4				
-4	535847	Washer, Magneto Holding											4	4			1	1 1
	•	* * * *			1								_					
-5	534750	Gasket, Magneto		l	1								2	Z				
-6	631277	Spark Plug											12					-
-6	634675	Spark Plug		l			1							12				
-7	633311	Harness Assembly		ļ									ı	1				1
-8	633580	② . Cable Assembly, No. 1 Upper, 19 Inches Long			1								1			1		
-9	633580	② . Cable Assembly, No. 3 Upper, 21 Inches Long	1			1							I	!!				
-10	633579	2 . Cable Assembly, No. 5 Upper, 28 Inches Long									1		1			1		
-11	633579	② . Cable Assembly, No. 2 Lower, 43 Inches Long	1		1	1		1					1	1		1		
-12	633579	② . Cable Assembly, No. 4 Lower, 39 Inches Long											1			1		
-13	633579	② . Cable Assembly, No. 6 Lower, 42 Inches Long											1					*
-14	633579	② Cable Assembly, No. 1 Lower, 38 Inches Long			l		1	1	l	l	ł		ı	1	ı	İ	i	

FIG.	PART	QUALITY PER ASSEMBLY
INDEX	NUMBER	12345 DESCRIPTION ABEGJKLMPRSU
42-15	633579	Cable Assembly, No. 3 Lower, 42 Inches Long
-16	633579	
-17	633580	
- 18	633580	
-19	633580	
-20	633586	. Spring
-21	633585	. Screw
-22	633584	. Sleeve, Insulating
-23	633583	. Ferrule
-24	633582	. Washer
-25	633581	. Nut, Magneto End
-26	636692	Clamp Assembly
-27	632105	. Screw
-28	629837	. Nut
-29	636922	. Clamp Assembly
-30	626919	Clamp
-31	636687	Screw
-32	633927	Nut
-33	AN501-10-8	. Screw
-34	22910	. Washer, Lock
-35	MS20365-1032A	. Nut, Elastic Stop
-36	633926	. Ty-Rap
-37	633925	. Clamp
-38	633593	. Nut
-39	633589	. Ferrule
-40	633583	. Ferrule
-41	633590	. Spring
-42	633592	. Washer
-43	633591	. Sleeve
-44	633586	. Spring
-45	633585	. Screw
`		
)		
*		
1		
,'		

① See Section VI for Specification Applications.

② Service leads furnished in two lengths only and terminated at both ends. 633580 for leads up to 28 inches long. 633579 for leads up to 50 inches long. Disassemble lead assemblies at magneto end. Cut lead to length specified and reassemble per instructions in overhaul manual or Slick Electro Form No. 1007.

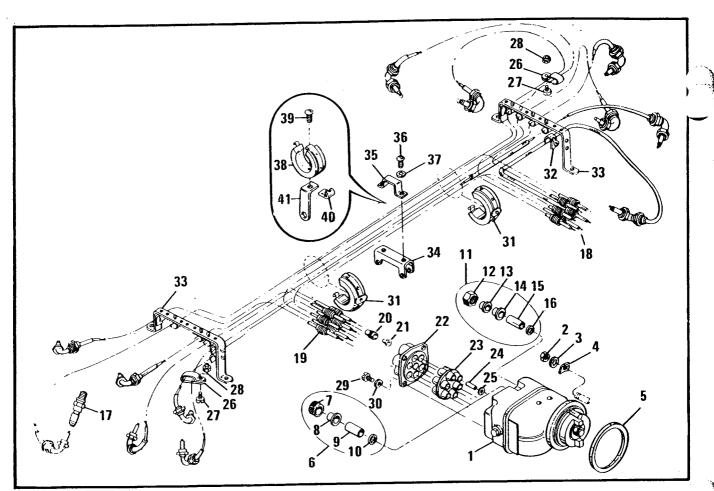


FIGURE 43 - IGNITION SYSTEM MODELS 10-470-C,E,F,G,H,L,M,N,P,R

FIG.	PART	QUANTITY PER ASSEMBLY
INDEX	NUMBER	12345 DESCRIPTION CDEFGHJKLMNPRSUV
43-1	631237	① Magneto Assembly
-1	628472	① Magneto Assembly, Left Hand
-1	628473	① Magneto Assembly, Right Hand
		ATTACHING PARTS
-2	2439	Nut, Hex
-3	MS35338-45	Washer, Lock
-4	535847	Washer, Magneto Holding
-5	534750	& Gasket, Magneto
-6	628739	Kit, Ground Terminal, Left Magneto
-7	629007	. Nut, Coupling
-8	629008	Bushing, Shouldered
-9	629009	. Bushing, Insulating
-10	629010	. Washer, Plain
	628740	Kit, Ground Terminal and Right Magneto
-7	629011	. Nut, Coupling
-8	629008	. Bushing, Shouldered
-9	629009	. Bushing, Insulating
-10	629010	. Washer, Plain
-11	352024	Kit, Ground Terminal and Right Magneto
-12	25318	. Nut. Coupling
-13	25317	Ferrule, Ground Wire, Outer ' ' ' ' ' '
-14	25316	Ferrule, Ground Wire, Inner

FIG.	PART			QI	UΑ	N	Γ <u>Ι</u> Ί	ΓY	F	EF	}	A	SSI	ΕN	1BI	LY		
INDEX	NUMBER	12345 DESCRIPTION	C	D	Ε	F	G	Н	J	К		М	N	Р	R	s	U	V
43-15	530455	. Sleeve, Insulating	1	1	1	1	1	1						1		П		\neg
-16	25314	. Washer, Plain	1	1	1	1	1	1			Ì			1	1			
-17	630533	Spark Plug, 18mm		•		12					- 1				i			
-17	627449	Spark Plug, 18mm	12									1	١		i			
-17	627450	Spark Plug, 18mm					12				Ì			12	12			
-17	634675	Spark Plug		12	12			12			12	12	12					
-18		Harness Assembly, Shielded Ignition, Left Magneto		1		1					1	1	1	1	1			
-19		Harness Assembly, Shielded Ignition, Right Magneto		1		1							1		1			
-18	627863 00	Harness Assembly, Shielded Ignition, Left Magneto	1		•	-		ľ						İ				. 1
- 18 - 19	627862 000	Harness Assembly, Shielded Ignition, Right Magneto	1	Ì														
	02/002	Nut	12	12	12	12	12	12			12	12	12	12	12			
-20	25302	D. Ferrule											12					
-21		7. Ferrule	2	2	2	2	2	2					2				i	.
-22	25312	. Plate, Cable Outlet	12	2	2	2	2	2			2	2	2	2	2			
-23	36219	Grommet, Plate	12	12	12	12	12	12					12					
-24	627001	. Sleeve, Distributor Cable	112	12	12	12	12	12					12					
-25	627002	. Washer, Magneto Block	12	12	12	12	12	12			2	12	2	12	12			
-26	627921	Clamp, Ignition Harness	2	2	2	2	2	12			2	2		2	Z			
		ATTACHING PARTS																
-27	627759	Bolt	2	2	2	2	2	2			2	2	2	2	2			
-28	627756	. Nut, Stop	2	2	2	2	2	2			2	2	2	2	2			1
		* * * *	1				l		1									
-29	25320	Screw, Machine	8	8	8	8	8	8			8	8.	8	8	8			
-30	25321	Washer Lock	18	8	18	8	18	8	1		8	8	8 8 2	8	8			
-31	628271	Rand Clamp	12	12	12	12	12	12			2	2	2	2	2			
-32	626577-2R	Clamp Ignition Cable	112	112	112	112	172	12	İ		12	12	12	12	12			
-33	626486	Bracket Fuel Discharge Tube	12	12	12	IZ.	Z	2			2	2	2	2	2			
	539140	Bracket Assembly Innition Harness	1]]	[]		1						1	1			1
-34	630093	. Bracket and Nut Assembly, Ignition Harness	11	1		1		1	İ					1	1			
-35	535557	. Clip, Bracket	1	1	1	1	1	1						1	1			
00	-	ATTACHING PARTS			1	İ		l										
00	A NIE 4 E O O	ATTACHING PARTS	2	2	2	2	2	2						2	2			
-36	AN515-8-6	Screw, Machine	12	2	2	2	2	2	1					2	2			
-37	MS35338-42		14	-	-	~	-	1	1					2	1			
20	000074	* * * *	İ		2						1	1	1					Ιl
-38	628271	Band, Clamp			12	1	l				•	'	' '					lÌ
		ATTACHING PARTS																
-39	535213	Screw, Sheet Metal				1			l		1	1	1					
-40	537911	Nut, Speed									1	1	1					
		* * * *				1			1									ı
-41	626524	Bracket, Ignition Harness									1	1	1					
j								İ							1			
									1									
						[
				1			ŀ			, 1								
`.																		
ИO	TES:		1									ł						
Œ	D See Section VI	for Specification Applications.	1															
(See Figure No.	46 for individual cable assemblies.											l					
	_																	

³ See Figure No. 49 for detail parts of ignition cable spark plug end.

⁴ Applicable to all cable assemblies.

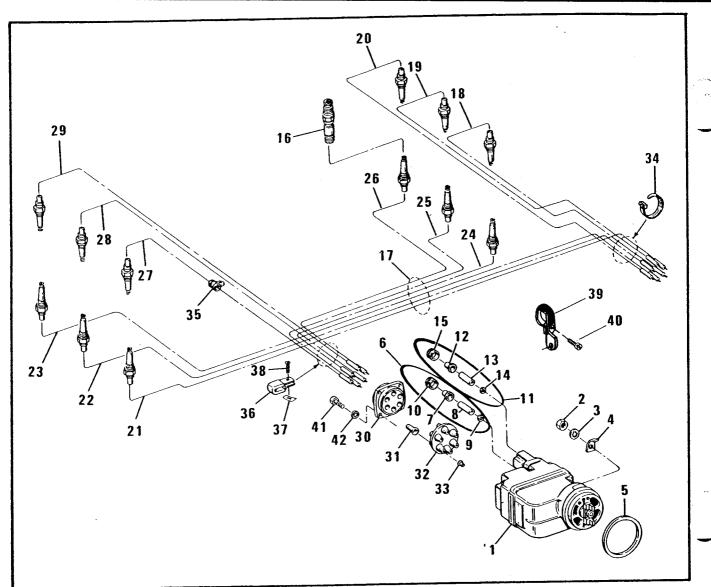


FIGURE 44 - IGNITION SYSTEM MODELS 10-470-S,U,V

FIG.	PART			Q	U/	١N	TI	ΤY	' I	PE	R	Α	SS	E٨	ΛΒI	LY			
INDE		12345 DESCRIPTION	C	D	E	F	G	Н	J	K	L	M	N	Р	R	S	U	ᅬ	
44-1	628472	1 Magneto Assembly, Left Hand														1	1	1	
-1	628473	① Magneto Assembly, Right Hand					ļ									1	1	1)	
		ATTACHING PARTS																Ì	فغديرا
-2	2439	Nut, Hex	1													4			
-3		Washer, Lock						1								4			
-4	535847	Washer, Magneto Holding											1			4	4	4	
		* * * *		İ													١,	ړ	ĺ
-5	534750	& Gasket, Magneto				ļ										2	2	2	P
- -	628739	Kit, Ground Terminal, Left Magneto		1	1							ŀ			'		1] 	
-7	629008	. Bushing, Shouldered																. .	
-8	629009	. Bushing, Insulating															1	,	ĺ
-9	629010	. Washer, Plain				1										1:	1	1	1
-10	629007	. Nut, Coupling		١													1		ĺ
-11	628740	Kit, Ground Terminal, L & R Magneto											1				1	3.	Y
-12	629008	. Bushing, Shouldered																	1
-13	629009	. Bushing, Insulating					1	1		i				1	İ	1			عدّ.

FIG.	PART		T	Q	U/	N,		 ГҮ	F	PE	R	 A	SS	EN	IBL'	 /	\neg
INDEX	NUMBER	12345 DESCRIPTION	C				•								RS		M
44-14	629010	. Washer, Plain	T									Π				1	
15	629011	. Nut, Coupling													1		ı ı
-16	634675	Spark Plug, 18mm														12	
-17	636954 Q)② . Harness Assembly, Complete Shielded Ignition		Ì											1	1	1
-18	637409-48	3 Cable Assembly, No. 1 Upper 15.25 Inch Long .													1	1	1
-19	637409-48	3 Cable Assembly, No. 3, Upper 20.06 Inch Long													1	1	1
-20	637409-48	3 Cable Assembly, No. 5, Upper 28.06 Inch Long													1	1	1
-21	637409-48	3 Cable Assembly, No. 2, Lower 39.06 Inch Long	l	ļ											'		
-22	637409-48	3 Cable Assembly, No. 4, Lower 35.69 Inch Long							ļ						'	;	
-23	637409-48	3 Cable Assembly, No. 6, Lower 42.06 Inch Long													1	1	
-24	647409-48	3 Cable Assembly, No. 1, Lower 35.69 Inch Long3 Cable Assembly, No. 3, Lower 40.56 Inch Long													1	1	l : I
-25 -26	637409-48 647409-48	3 Cable Assembly, No. 3, Lower 40.56 Inch Long3 Cable Assembly, No. 5, Lower 47.56 Inch Long													i	i	i
-20 -27	647409-48	3 Cable Assembly, No. 2, Upper 20.00 Inch Long													ĺ	li	i
-28	637409-48	3 Cable Assembly, No. 4, Upper 17.19 Inch Long													1	1	l i l
-29	637409-48	3 Cable Assembly, No. 6, Upper 23.06 Inch Long													1	1	1
-30	633009	① . Plate, Cable Outlet													1	1	1
-31	629498	① Ferrule, Cable													6		6
-32	629496	① Grommet, Plate													1	1	1 1
-33	629495	① Eyelet, Cable Contact							1						6	6	
-34	629494	. Strap, Ignition Harness													I F	10	
-35	632106	. Clamp, Ignition Cable													1 1	12	
-36	631739	. Clamp, Ignition Harness													2	2 2	
-37	629837	. Nut, Speed					Ì								2	2	
-38 -39	632105 635363	. Screw													1	1	
-39	635360	. Screw													li	1	
-41	25320	Screw													8	8	
-42	25321	Washer, Lock													8	8	
1	2002	, 255															
Ì																	
									ĺ								
								ļ									
						-							1.			144	
j																	
1																	
					-												
					-												
				1												1	
NOTEO			Ī	j	1	i	ı	ı	i	1	1	J	ı	f	, ,	ı	, ,

- ① See Section VI for Specification Applications.
- ② See Figure No. 50 for detail parts of ignition cable spark plug end.
- 3 Service leads furnished in two (2) lengths only. 637409-48 cable assembly for leads up to 48" long. 637409-72 cable assembly for leads up to 72" long.
- Applicable to all cables assemblies.

Service sleeves - Use Thomas and Betts crimping tool No. WT-217.

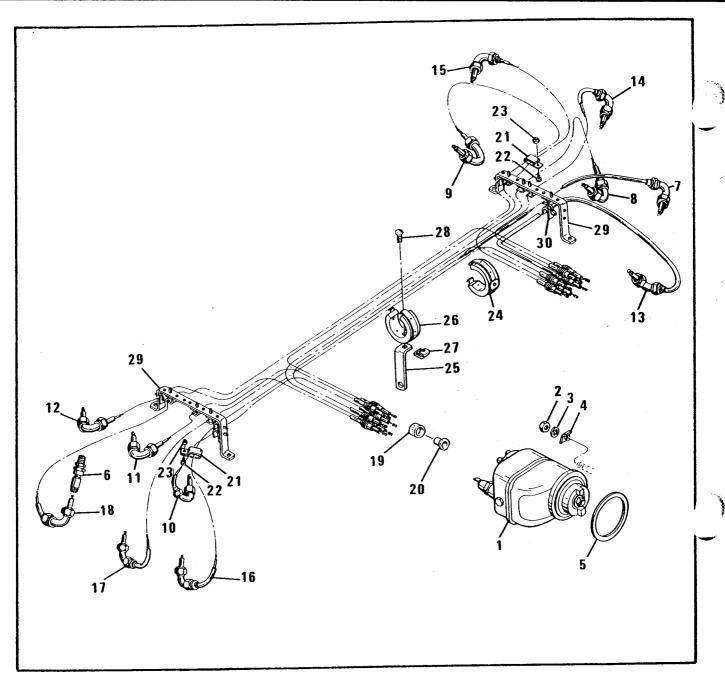


FIGURE 45 - IGNITION SYSTEM MODELS 10-470-J,K

2-72

FIC	DADT		Γ	O	UΔ	/N	TI.	ΓY	ŀ	PEF	₹	AS	SE	M	BL'	 Y	
FIG.	PART NUMBER	12345 DESCRIPTION	r												RIS		V
			1	, <u>, , , , , , , , , , , , , , , , , , </u>		<u> </u>				2		7	7	7	Т	"	1
45-1	625765	1 Magneto Assembly							2	2							
•		ATTACHING PARTS							,								
-2	2439	Nut, Hex							4	4							
-3	MS35338-45	Washer, Lock	1						4	4					-		1 /
-4	535847	Washer, Magneto Holding							4	4			1			1	
-	F0.47F0	* * * *							2	2	Ì	- }			ļ		
-5		& Gasket, Magneto								12							
-6	539433	Spark Plug, 18mm							1	1		I	ŀ	ŀ			
7	628379 ① 628391-31.75	. Cable Assembly, No. 1, Lower	ı						1	1							
-7 -8	628391-32.00	Cable Assembly, No. 3, Lower							1	1		- [1	1	
-o -9	628391-37.50	Cable Assembly, No. 5, Lower							1	1		- 1					
-9 -10	628320-16.25	Cable Assembly, No. 2, Upper							1	1							
-10	628320-12.75	Cable Assembly, No. 4, Upper	Ì						1	1							1
-11	628320-16.00	Cable Assembly, No. 6, Upper							1	1			1				
12	628380	2 Harness Assembly, Shielded Ignition, Right Magnet	þ						1	1							
-13	628320-11.00	. Cable Assembly, No. 1, Upper							1	1							
-14	628320-14.25	. Cable Assembly, No. 3, Upper							1	1					1		1
-15	628320-17.50	Cable Assembly, No. 5, Upper	1						1	1				-			
-16	628391-32.50	. Cable Assembly, No. 2, Lower	1						1	1				-			
-17	628391-32.50	. Cable Assembly, No. 4, Lower							1	1							
-18	628391-36.50	. Cable Assembly, No. 6, Lower							1	1		-					
-19	20002	③ Nut		į						12			l				İ
-20	2000.	3 . Ferrule								12				-	Ì		
-21	627921	. Clamp, Ignition Harness							2	2			- 1			1	
		ATTACHING PARTS											ŀ	١			
-22	627759	. Bolt, No. 6-32 x 5/16 Inch Long							2	2							
-23	627756	. Nut, Stop, No. 6-32							2	2			ļ	-			
		* * *							1	1			١		1		
-24	628271	Band, Clamp	ı						2	2							
-25	628474	Bracket, Ignition Cable Support							1	1							
-26	628271	Band, Clamp							'	'					Ì		
		ATTACHING PARTS								1							
-27	537911	Nut, Speed							1	1							
-28	AN526-1024-4	Screw, Sheet Metal							'	'							
20	000400	* * * *							2	2							
-29 20	626486	Bracket, Fuel Discharge Tubes								12							
-30	626577-2R	Clamp, withing matriess			l				'						1	1	
			-							1			-				
													1				
										1						1	1
						1								ı			
														- }			
												1 1				-	-
NOT	ES:																
_	*	or Specification Applications									1						
_		·															
_				-													
3	Applicable to all	cable assemblies.	1											1		1	l
① ②	See Section VI f See Figure No. 5	or Specification Applications. O for detail parts of ignition cable spark plug end. cable assemblies.															

ENGINE	HARNESS ASSY.	CABLE ASSY.		UPPER	PLUG L	EAD LE	NGTHS			LOWER	PLUG L	EAD LE	NGTHS	···
MODEL	P/N	P/N	No. 1	No. 2	No. 3	No. 4	No. 5	No. 6	No. 1	No. 2	No. 3	No. 4	No. 5	No. 6
A, B, E, J, K, L	Left Mag 625298	626359		19.44		17.44		21.19	33.44		33.69		39.69	
	Right Mag 625299	626359	16.19		19.44		22.69			34.69		32.44		39.69
G, P	Left Mag	626831							39.65		33.31	ļ	39.31	
ŕ	625983	626832		19.44		18.94		21.19					<u> </u>	
	Right Mag	626831						<u></u>		34.31		33.06	ļ	39.31
	625983	626832	16.19		19.14		22.69							
M	Left Mag 627805①	627040		19.44		18.94		23.19	36.94		37.19		42.19	
	Right Mag 627804 ¹	627040	16.19		19.44		22.69			39.19		35.69		41.69
R	Left Mag	633580@		21.00		18.00	ļ	25.00			ļ		ļ	ļ
	633113	633579@				<u> </u>		ļ	38.00		42.00	ļ	50.00	
	Right Mag	633580@	19.00	 	21.00				<u> </u>				ļ	
	633114	633579@		1			28.00		l	43.00		39.00		42.00

ENGINE	HARNESS ASSY.	CABLE ASSY.		UPPER	PLUG L	EAD LE	NGTHS				T	EAD LE		
MODEL	P/N	P/N	No. 1	No. 2	No. 3	No. 4	No. 5	No. 6	No. 1	No. 2	No. 3	No. 4	No. 5	No. 6
С	Left Mag	626831							36.94		37.19		41.19	
i	627863	626832		19.44		17.94		21.19						
	Right Mag	626831								37.69		35.69		41.69
	627862	626832	16.19		19.44		22.69		ļ					
D, E, F, G, H, L,	Left Mag 627805	627040		19.44		18.94		23.19	36.94		37.19		42.19	
M, N, P, R	Right Mag 627804	627040	16.19		19.44		22.69			39.19		35.69	-	41.69

FIGURE 46 - IGNITION CABLE LEAD LENGTHS MODELS 0-470-A,B,E,G,J,K,L,M,P AND IO-470-C,D,E,F,G,H,L,M,N,P,R

- ① These harness assemblies replace 627039 and 627038 respectively which had the lower leads routed between the cylinders. However, the leads for the 627805 and 627804 assemblies have longer leads which are routed over and anchor to the rocker box cover.
- ② Service leads furnished in two lengths only. 633580 for leads up to 28 inches, long, 633578 for leads up to 50 inches long.

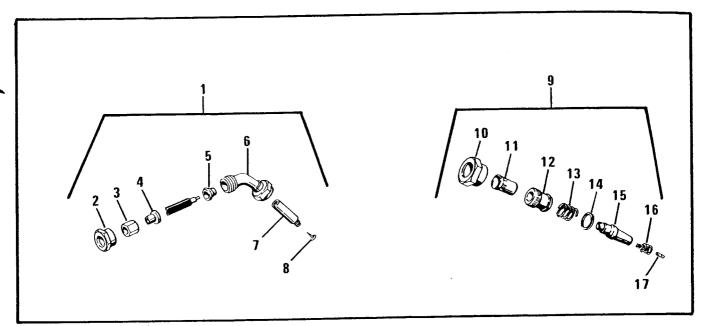


FIGURE 47 - IGNITION CABLE, SPARK PLUG END MODELS 0-470-G-P-R

FIG.	PART		Γ	<u> </u>	U.A	N.		ΓY	F	PEI	 R	A	SSI	EM	BL	Υ	
INDEX	NUMBER	12345 DESCRIPTION	A	В	E	G	J	K	L	М	Р	R		_	Ţ	Ŧ	Ŧ
47-1	626831	Cable Assembly (See Figure 46)				rf			-		rf					1	
-1	626832	Cable Assembly (See Figure 46)	1			rf					rf			1			
-2	636675	. Nut, Spark Plug End									1			-	İ		
-3	636676	. Ferrule, Cable, Outer	١			1					1			- 1			
-4	636677	. Ferrule, Cable, Inner				1					1					-	
-5	636678	. Grommet			•	1					1			-	-		
-6	WE365	. Elbow Assembly (626831 Cable)				1					1				-		
-6	WE1017	. Elbow Assembly (626832 Cable)	1			1					1	l		- 1			
-7	628986	. Sleeve, Spark Plug Terminal	1	ŀ		1	İ	1	Ì		1	1		- [
-8	626718	Nail				1					1			- 1	İ	-	
-9	633580	Cable Assembly (See Figure 46)										rf				1	
-9	633579	Cable Assembly (See Figure 46)										rf					
-10	633593	. Nut, Spark Plug End			1						1	1				-	
-11	633589	. Ferrule			•												
-12	633583	. Ferrule		l	1		1	1									
-13	633590	. Spring										1			ı		
-14	633592	. Washer														- [
-15	633591	. Sleeve	1				1	İ		1						ł	
-16	633586	. Spring								1		!			-	1	
-17	633585	. Terminal								1		1				-	
				1								ĺ			ı		
					1												
	,														-		
											1				1		

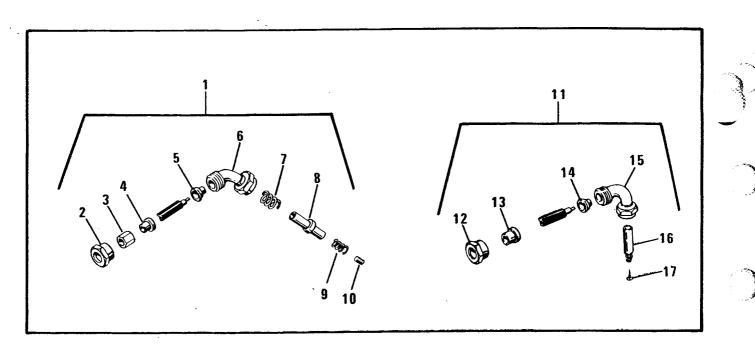


FIGURE 48 - IGNITION CABLE, SPARK PLUG END MODELS 0-470-A,B,E,J,K,L,M

FIG.	PART			Q	UA	١N	TI	T١	1	PE	ER	!	A	SS	ΕN	181	LY		
INDEX	NUMBER	12345 DESCRIPTION	A	В	E	G	J	K	L	N	1	P	R	S	٦				
48-1	627040	Cable Assembly (See Figure 46)								r	f								
-2	636675	. Nut, Spark Plug End								1	1	1						- 1	1-<
-3	636676	. Ferrule, Cable Outer	1							1	1							- 1	્ર્
-4	636677	. Ferrule, Cable Inner	-							1	1							- [, 2
-5	636678	. Grommet								1	1								
-6	WE630	. Elbow Assembly								1	1								
-7	WE626	. Spring, Compression								1	1	ł							
-8	WE565	. Grommet	-							1	1	ļ						- 1	
-9	626714	. Spring, Terminal	١							1	1								
-10	626713	. Stud, Terminal Spring								1	1							-	
-11	626359	Cable Assembly (See Figure 46)	rf	rf	гf				rf			İ							
-12	636675	. Nut, Spark Plug End	1	1	1	ŀ	1	1	1	1		İ						-	
-13	WE502	. Ferrule, Cable	1	1	1		1	1	1		-	ŀ							
-14	636678	. Grommet	1	- 1	1		1	1	1		-				1				
-15	WE1017	. Elbow Assembly	1	1	1		1	1	1									١	
-16	628986	. Sleeve, Spark Plug Terminal	1	1	1		1	1	1 -	l									1
-17	626718	. Nail	1	1	1		1	1	1										1.3
																		-	
											1							1	
											-							- }	
								ļ			1					H			
											1								
										ļ									749
												- }							-
																			1
								ŀ		Ì								- 1	- I. **
										l									, some
										1		- 1			1				

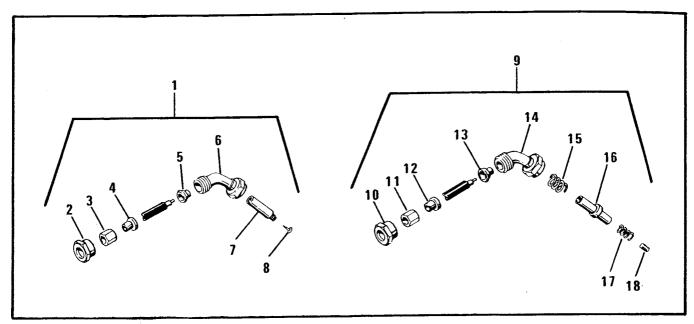


FIGURE 49 - IGNITION CABLE, SPARK PLUG END MODELS 10-470-C,D,E,F,G,H,L,M,N,P,R

FIG.	PART			Q	U	AN	TI	ΤY	' F	PΕ	R	Α	SS	ΕN	1BI	Y	
INDEX	NUMBER	12345 DESCRIPTION	C	D	E	F	G	Н	J	K	L	М	N	Р	R	S	U '
49-1	626831	Cable Assembly (See Figure 46)	rf														
-1	626832	Cable Assembly (See Figure 46)	rf													l	1
-2	636675	. Nut, Spark Plug End	1														
-3	636676	. Ferrule, Cable Outer	1														
-4	636677	. Ferrule, Cable Inner	1						ļ								
-5	636678	. Grommet	1													-	
-6	WE365	. Elbow Assembly (626831 Cable)	1						ì								
-6	WE1017	. Elbow Assembly (626832 Cable)	1														
-7	628986	. Sleeve, Spark Plug Terminal	1		1				Ì								
-8	626718	. Nail	1		١.	١.	١.	١.			١.			ا ا	ا ا		
-9	627040	Cable Assembly (See Figure 46)			•			rf	ļ		1		1	rf	1.1		
-10	636675	. Nut, Spark Plug		1	1	1	1	1			1]	1	1	1		
-11	636676	. Ferrule, Cable Outer		1	1	1	١.	1	1		1	1		1	1		
-12	636677	. Ferrule, Cable Inner		1	1	1	1	1			1	1]	1	1		
-13	636678	. Grommet		1	1	1	1	1			1	1	1	1			
-14	WE630	. Elbow Assembly		1	1	1	1	1	l		1		!	1	!		
-15	WE626	. Spring, Compression		1	1	1	i '	1			1	1	I	1			
-16	WE565	. Grommet		1	1	1	1 '	1			1	1	1	1			
-17	626714	. Spring, Terminal		1	1	1	1 -	1 '			1	1		1		1	1
-18	626713	. Stud, Terminal Spring		1	1	1	1	1			1	1	1	1	1		
										Ì							
			ŀ														
		_										İ					
																	- 1
		!		1								ł	1			ı	

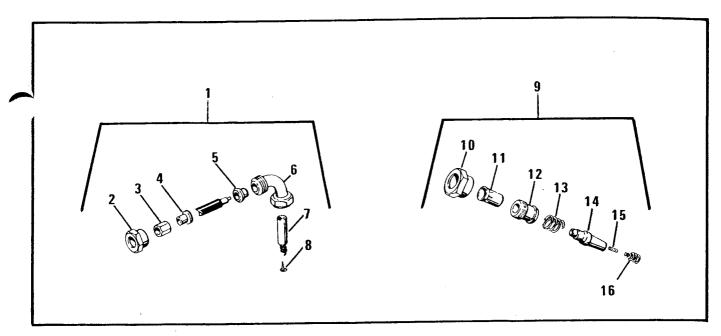


FIGURE 50 - IGNITION CABLE, SPARK PLUG END MODELS 10-470-J,K,S,U,V

FIG.	PART		Γ	Q	U	AN	TI	TY	F	ER	-	15	SEI	ИΒ	LY		٦
INDE		12345 DESCRIPTION	C	D	E	F	G	Н	J	K	L	I	ĺР	R	S	Ш	У
50-1		Cable Assembly (See Figure 45)	l						rf								
-1	628320	Cable Assembly (See Figure 45)				İ	l		rf	rf			.				ı
-2	636675	. Nut, Spark Plug End	l						1	1							
3	636676	. Ferrule, Cable Outer					1		1	1							١
-4	636677	. Ferrule, Cable Inner				1	ļ		1	1			i				
-5	636678	. Grommet				1			1	1							
-6	636679	. Elbow Assembly (628320 Cable)	l				l		1	1							
-6		Elbow Assembly (626831 Cable)		į	1	ĺ	1		1	1						Ì	
-7		. Sleeve, Spark Plug Terminal			l				1	1							
-8		. Nail	ĺ						1	1							
-9		Cable Assembly (See Figure 44)									ł					rf	rt
-10		. Nut, Spark Plug End				İ									1	1	1
-11		. Ferrule					ļ								1	1	1
-12	633096	. Ferrule					l								1	1	1
-13	629504	. Spring Assembly, Compression			}		l								1	1	1
-14	629505	. Sleeve, Spark Plug Terminal													1	1	1
-15	633099	. Terminal, Crimp Type													1	1	1
-16	629506	. Spring, Spark Plug Terminal	l												1	1	1
																	l
																	١
					1									1			١
																	1
_																	

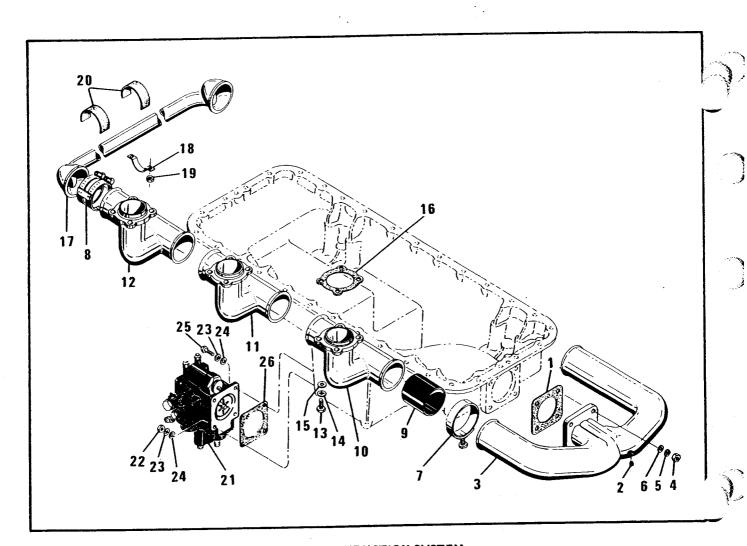


FIGURE 51 - INDUCTION SYSTEM MODELS 0-470-G,P

Γ	FIG.	PART				QI	UA	N	ΓIT	Υ	P	E	3	A:	SS	ΕN	IBL	Y	_	7
ŀ	NDEX	NUMBER		12345 DESCRIPTION	Α	В	E	G	J	K	L	M	Р	R	S	U		I	I	
	51-1 -2 -3	35985 629518-1H 538927	&	Gasket, Manifold				1 1 1					1 1							
	-4 -5	2439 MS35338-45		ATTACHING PART Nut, Hex				4					4							
	-6	22533		Washer, Plain				4					4							
	-7 -8 -9 -10 -11	36151J 539487 639660-13 537874 537875 537873	`&	Clamp, Hose				12 2 8 1 2 3					12 8 1 2 3							
				ATTACHING PARTS															Ì	١
	-13 -14 -15	24835 MS35338-44 20522		Bolt, 1/4 x 7/8 Inch Long				24 24 24					24 24 24							
	-16 -17 -18	536413 538882 625411	&	Gasket, Intake Manifolds				6 1 2					6 1 2							
	-19	22661		ATTACHING PARTS Nut, Self-locking				4					4							
_	-20 -21	53236450 628023	①	Felt, Sump-to-Balance Tube				2					2							
	-22	2439		ATTACHING PARTS Nut, Hex				2					2							
	-23 -24 -25	MS35338-45 22533 537961		Washer, Lock				4 4 2					4 4 2							
	-26	35985	&	* * * * * Gasket, Carburetor				1					1							
)																				
\ \ /				er.					-											
		NOTE:																		
		① See Secti	on V	I for Specification Applications.							-			-						ı

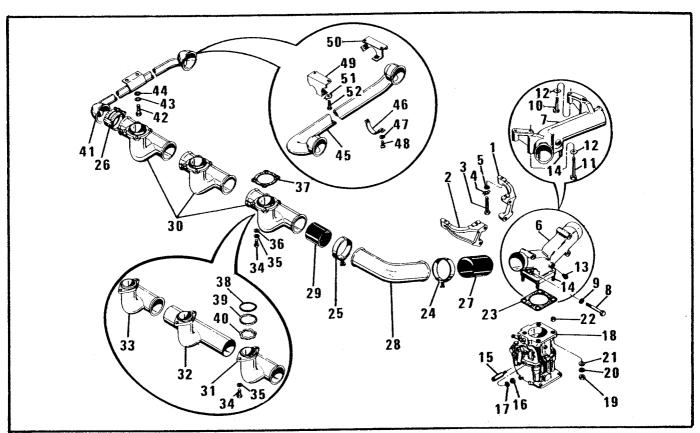


FIGURE 52 - INDUCTION SYSTEM MODELS 0-470-A,J,K,L,R,S,U

FIG.	PART		ΩU.	۸N	ITI	TY	,	PE	R	A	SS	ΕN	IBL	Υ.	
INDEX	NUMBER	12345 DESCRIPTION A B	3 E	0	J	K	L	М	P	R	S	U		\Box	
52-1	536036	Bracket Manifold Riser, Right Side			1	1									
-2	536037	Bracket, Manifold Riser, Left Side			'	'								١	ŀ
		ATTACHING PARTS			١.	١.								ŀ	į
-3	AN75A15	Bolt			4										
-4	501868	Washer, Tab	ł		4										
-5	2473	Washer, Plain			4	4				Į .					
		* * * *			١.	1								1	
-6	538361A1	Riser Assembly, Manifold		1	1						1	1			Ì
-7	627658A1	Riser Assembly, Manifold					'			'	1	'		1	
		ATTACHING PARTS				1									
-8	AN75A26	Bolt	Ì		4				1					١	
-9	2473	Washer, Plain			4	4									
-10	538999	Bolt, 5/16 x 3-5/8 Inch Long					2	ĺ		2	2	2			
-11	AN75A15	Bolt					2			2	2	2		١	
-12	2473	Washer, Plain				-	4			4	4	4			
		* * * *			Ι.	١.									
-13	629518-1H	. Plug, Pipe, 1/8 Inch NPT			1				1		1	1			
-14	401971	† . Stud, 5/16 x 1-5/8 Inch Long			4			ı		1.	4	4			
-15	536432	Extension, Throttle Control		1	1	1	1			1		1			
		ATTACHING PARTS		ı							ŀ				
-16	22661	Nut, Hex			1		- I -			1					
-17	20522	Washer, Plain			1	ı	1			1	ĺ				
-18	538872	① Carburetor, Model MA4-5			1										
-18	633027	① Carburetor, Model			-	1	1								.
-18	641139	O Carburetor, Model MA4-5	1	1						1	1				i

	G.	PART	T									EF					BL	/	
INE)EX	NUMBER		12345 DESCRIPTION	Α	В	E	G	J	K	L	М	P	R	S	비		$\downarrow \downarrow$	Ц
52	-18	641860	<u>(1)</u>	Carburetor, Model MA4-5									-			1			
	-19	2439	•	Nut. Hex	4					4	1				4	- 1			
_	-20	MS35338-45		Washer, Lock	4						4		- 1			4			i I
	-21	2473		Washer, Plain	4				4	4	4		- 1	4	4	4			1
	21	2473		* * * *										ł		-			
	-22	535961		Sleeve, Carburetor Mounting	4				4		4			- 1	4	4			
	-23	35985	ጺ	Gasket, Carburetor	1				1	1	1				1	1			
	-24	631972	ŭ	Clamp, Hose	1					4	4		ŀ	4	4	4			
	-25	36151J		Clamp, Hose	6		•		16							-			
	-25 -25	36151L		Clamp, Hose	1						2			2	2	2			'
	-26	539487		Clamp Assembly, Hose	2				2	2	2			2	2	2			
	-27	535832	ጼ	Hose, Riser-to-Elbow	2				2							-			
	-27	639660-13	u	Hose, Riser-to-Elbow	1	ļ				2	2			2	2	2			
	-28	535681		Tube, Elbow	2				2	2				-			ŀ		
	-28	539758		Tube, Elbow							2				-				
	-28 -28	632323		Tube Assembly, Elbow										2	2	2			
	-28 -29	639660-13	Q.	Hose, Intake Manifold	8				8	8	8			8		8			
		629138	Ol	Tube Assembly, Intake Manifold						6	6			6		5			
	-30	629325		Tube Assembly, Intake Manifold No. 6						Ī						1			
	-30	535484		Tube Assembly, Intake Manifold No. 2	1														
	-31			Tube Assembly, Intake Manifold No. 2	ľ				1									ł	ı
	-31	538554			2				ľ	1									
	-32	535079		Tube Assembly, Intake Manifold No. 3, 4	1				2	l									
	-32	538554		Tube Assembly, Intake Manifold No. 3, 4	12				_							ĺ			
	-33	535076		Tube Assembly, Intake Manifold No. 1, 5, 6	۲				3										
	-33	538554		Tube Assembly, Intake Manifold, No. 1, 5, 6	1				٦										
				ATTACHING PARTS							١.								
•	-34	24835		Bolt, 1/4 x 7/8 Inch Long	12	!					24			24					
	-35	MS35338-44		Washer, Lock	12	2			12		24		1	24					
	-36	20522		Washer Plain	1					24	24			24	24	24		-	1
				* * * *	-					١,	6			,	6	ام			
	-37	536413	&	Gasket, Intake Manifold	1,	.			1,	6	ם וי	'		О	ס	וס			
	-38	536740	&	Seal, Intake Manifold Tube	16				6				ļ					ļ	
	-39	534365		Washer, Intake Manifold Tube					6				1						
	-40	534360		Spring, Intake Manifold Tube					6		١,		1		١.				
	-41	630626		Tube Assembly, Balance					1	1	1				1				
	-41	630628		Tube Assembly, Balance						1						1			
				ATTACHING PARTS				1											
	-42	530346	2	Screw, Hex Head, 5/16 x 7/8 Inch Long			1				F ri			rf		rf			
	-43	13XX202B	②	Washer, Lock						ı	f r1			rf		rf			
¥ .	-44	2473	②	Washer, Plain					ri	f	f	f		rf		rf			
<i>;</i>		2170	_	* * * *		1													
	-45	535912		Tube Assembly, Balance	1														
	-46	535787		Clamp, Balance Tube															
	70	333707		•	1								1						
		1100F000 4:		ATTACHING PARTS	4	ı		-	-	1								1	
	-47	MS35338-44		Washer, Lock	1.														
;	-48	AN520-416-12	!	Screw, Machine	1														
		F0F30F		* * * *	1														
	-49	535785		Bracket, Balance Tube, Left Side															
	-50	535784		Bracket, Balance Tube, Right Side	'	1													
				ATTACHING PARTS			1		1										
	-51	501868		Washer, Tab	4														
	-52	530346		Screw, Hex Head, 5/16 x 7/8 Inch Long	4	1											1		
		OTES:										1		1					
					,														1

① See Section VI for Specification Applications.

² Reference Figure 25.

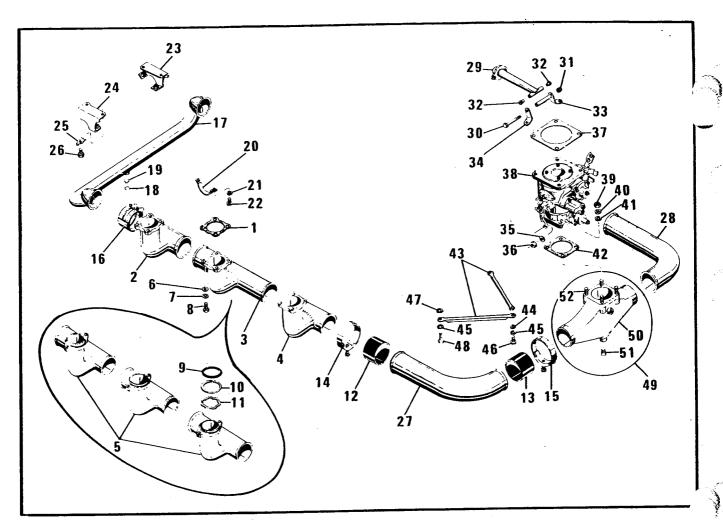


FIGURE 53 - INDUCTION SYSTEM MODELS 0-470-B,E,M

						г				_											٦
FIG.	PART	1											ER				EM		<u>- Y</u>		_
INDEX	NUMBER		12345	DESCRIPTION		Α	В	Ε	G	J	K	L	М	P	R	S	U	_	_	1	4
53-1	536413	&	Gasket, Intake	Manifolds			6					ļ	6								
-2	537873		Tube Assembl	y, Intake Manifold, N	o. 1, 5, 6		3					-	3	-				١	.		
-3	537875		Tube Assembl	y, Intake Manifold, N	lo. 3, 4		2						2							- }	
-4	537874		Tube Assembl	ly, Intake Manifold, N	lo. 2		1						1	١						1	
-5	538554			y, Intake Manifolds				6										1			
	,			ATTACHING									ı								\$.
-6	20522		Washer Plain	5/16 Inch			24						24							- 1	7
-0 -7	MS35338-44		Washer Lock				24	12					24	-							
-8	24835		Rolt 1/4 x 7/	8 Inch Long			24	12					24							-	
-0	24033		Don, 1, 1 x 77	* * *																- 1	
-9	536740	Ą.	Seal, Intake M	lanifold Tube				6												ł	
-10	534365	<u>~</u>	Washer Intak	e Manifold Tube				6													-). 7
-11	534360		Spring Intake	Manifold Tube		1		6											li		i e
-12	639660-13	8.	Hose Intake	Manifold		ľ	8 2	8					8								
-13	639660-13	&	Hose Riser-to	-Elbow		1	2		١.				2				'				1
-14	36151J	_	Clamp Hose			1	4	16	į				8								- [
-15	631972		Clamp Hose			1	4						8						1		
-16	539487		Clamp Assem	bly, Hose		1	2	2					2				1				بارچ
-17	536332A1		Tube and Val	ve Assembly, Balance			1	1					1								*
-18	536326			nal Retaining			1	1					1								j.
-19	538433		Valve Mani	fold Drain			1	1					1								

FIG.	PART			Q	U/	\N	TI	ΤY	, I	PEF	₹	Α	SS	EN	1BI	_Y	
INDEX	NUMBER	12345 DESCRIPTION	A	В	E	G	J	K	TL	М	P	R	S	U			T
L				2				1		2					П	_	\dashv
53-20	535787	Clamp, Balance Tube		[-	~												
•		ATTACHING PARTS				}											
-21	MS35338-44	Washer, Lock		4						4							
-22	AN520-416-12	Screw, Machine		4	4					4							
		* * * *															
-23	535784	Bracket, Balance Tube, Right Side		1	1								1	}			
-24	535785	Bracket, Balance Tube, Left Side	1	1	1		1			1			ŀ				
		ATTACHING PARTS				'	1										
-25	501868	Washer, Tab, 5/16 Inch	١	4	4					4							
-26	AN75A15	Bolt		4				1									.
-26	537961	Bolt, 5/16 x 1 Inch Long		ļ						4							
-26	535960	Bolt, 5/16 x 13/16 Inch Long			4	1											
		* * *															
-27	536871	Tube, Elbow, Left Side			1					1							
-28	536872	Tube, Elbow, Right Side		1						1					'		
-29	538469	Bracket Assembly, Carburetor Support		1	•	1				1							
-30	AN4-26A	Bolt		1						1							
-31	MS21083N4	Nut, Self-locking		1						1							
-32	538468	Bushing, Carburetor Support Bracket		2	2					2							
-33	538470	Bracket, Carburetor Support, Right Hand		1	1					1				-			
-34	539113	Bracket, Carburetor Support, Left Hand		1	1					1							
-35	20522	Washer, Plain		1	1	1	l			1				1			
-36	22661	Nut, Self-locking		1	1					1							
-37	25135	& Gasket, Carburetor Air Scoop		1	1		Ì			1							
-38	536911	Carburetor, Model PSD-5C (Bendix No. 391435)			1												
-38	627178	O Carburetor, Model PSD-5C (Bendix No. 391668-2) .	ı	1						1							
		ATTACHING PARTS	Ì														
-39	2439	Nut, Hex		4	4	1				4			1				
-40	MS35338-45	Washer, Lock		4	4	1				4					İ		
-41	2473	Washer, Plain	l	4	4					4					1		
71	2470	* * * *							ļ						1		
-42	35985	& Gasket, Carburetor		1	1					1							
-43	537939	Bracket, Crankcase-to-Riser		2													
,,,	337000	·	1			1			1						ĺ		
	0.470	ATTACHING PARTS		1						1							
-44	2473	Washer, Plain		3						3	1						
-45	MS35338-45	Washer, Lock		1						1							
-46	536795	Screw, Hex Head, 5/16 x 3/4 Inch Long		2						2							
-47	538996	Spacer, 11/32 Inch x 3/16 Inch Thick		2						2							
-48	537750	Screw, Hex Head, 5/16 x 1-43/64 Inch Long		-						-							
40	E20424 A 1	* * * * Riser Assembly, Manifold		1	1					1							
-49	538434A1			ns	1				1.	ns							
-50	No Number	. Riser, Manifold		2	1					1							
-51	629518-1H	† . Stud, 5/16 x 1-1/2 Inch Long		1	4					4						ĺ	
-52	401824	1 . Stud, 3/10 X 1-1/2 mich cong			Ι΄					•							
											1						
NOTE:																	
^ -			1	1	1	1		1	1	1		1	1		1		

① See Section VI for Specification Applications.

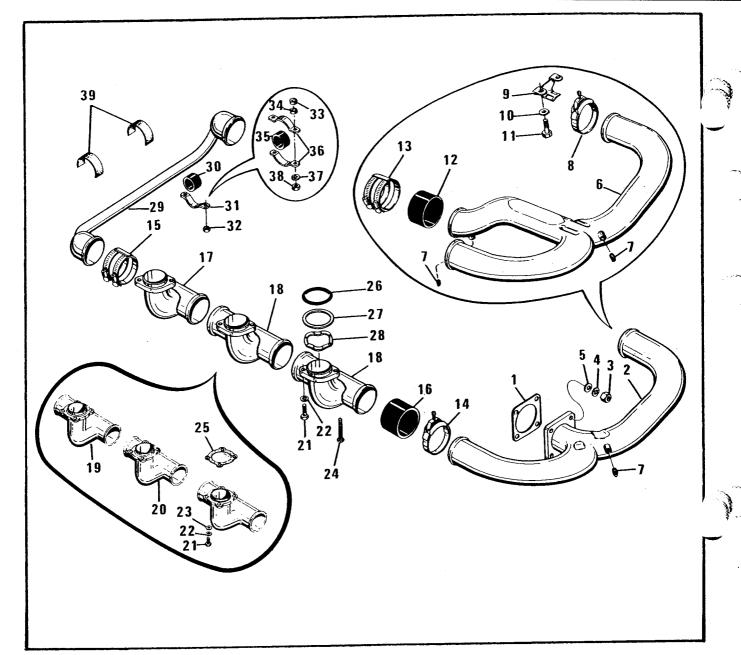


FIGURE 54 - INDUCTION SYSTEM MODELS 10-470-C,H,J,K,N

FIG.	PART			Q	UA	١N	TI	ΤY	' I	PE	R	A	SS	E	ИΒ	LY	,		· · · · >
INDEX	NUMBER	12345 DESCRIPTION	C	D	E	F	G	Н	J	K	L	М	N	P	R	S	U	٧	
54-1	35985	& Gasket, Manifold	1					1	1										
-2	628336	Manifold Assembly, Rear						١.	1			1				l			
-2	629599	Manifold Assembly, Rear	1					1			ŀ								
-15		ATTACHING PARTS																	j Na
-3	2439	Nut, Hex	4					1	4			1							
-4	MS35338-45	Washer, Lock	4					4	1										
-5	22533	Washer, Plain	4					4	4					l					1
		* * * *							l										l
-6	629601	Manifold Assembly, Rear								١.			1			1			\
-6	628383	Manifold Assembly, Rear											,						Y
-7	629518-1H	Plug, Pipe, 1/8 Inch NPT	1	l			ļ	1		2		1	1 1	I	ı	1	J.		•

FIG.	PART		L							ER		SSI			
IDEX	NUMBER	12345 DESCRIPTION	C	D	E	F	G	Н	J	_	LIN	ΛN	PF	₹ĮS	Ū
54-8	AN737TW82	Clamp, Manifold Bracket								1					
-9	628390	Bracket, Sump-to-Manifold Clamp								1					
		ATTACHING PARTS													ŀ
-10	MS35303-36	Bolt		ŀ						2	ŀ				
-10	538949	Washer, Plain								2	ŀ				l
- , ,	030043	* * * *								_				l	
-12	639660-13	& Hose, Throttle Body-to-Manifold	1	ŀ						1					1
-12	539023	& Hose, Throttle Body-to-Manifold	1									1			
-13	539487	Clamp Assembly, Hose	1	l						1					
-13	629163	Clamp Assembly, Hose										1			
-13 -14	36151J	Clamp, Hose	1						16	16					
		Clamp, Hose	12	ļ				12	. 0			8			
-14	36151L	Clamp Assembly, Hose	2	1				2	2	2		4			
-15	539487		1					8	8			8			
-16	639660-13	& Hose, Intake Manifold	١					U	1						
-17	628381	Tube Assembly, Intake Manifold No. 6							5	5					
-18	538554	Tube Assy, Intake Manifold No. 1, 2, 3, 4, 5	1					1	J	3	1	1			
-19	629325	Tube Assembly, Intake Manifold No. 6						5				5			
-20	629138	Tube Assy, Intake Manifold No. 1, 2, 3, 4, 5	3	1				J				3			
		ATTACHING PARTS													
-21	24835	Bolt, 1/4 - 20 x 7/8 Inch Long	24	1						11		24		1	
-22	MS35338-44	Washer, Lock	24	1						12		24		1	
-23	20522	Washer, Plain	24					24				24			
-24	535631	① Screw								1					
		* * *													
-25	536413	& Gasket, Intake Manifold	6					6				6			
-26	536740	& Seal, Intake Manifold Tube							6	6					
-27	534365	Washer, Intake Manifold Tube							6	6	Ì				
-28	534360	Spring, Intake Manifold Tube							6	6					1
-29	626527	Tube Assembly, Balance						1		1		1			
-30	626530	Bushing, Balance Tube	2					2	2			1	- 1		
-31	625411	Clamp, Balance Tube						2	2		İ				
		ATTACHING PARTS												ŀ	
-32	22661	Nut, Self-locking	4					4	4						
02	2200.	* * * *		ļ											
-33	2472	Spacer, Balance Tube	ı							4		4	-		
-34	25164	Spacer, Balance Tube								4		4			
-35	628597	Bushing, Balance Tube								2		2			
-36	628416	Clamp, Balance Tube								4		4			
50	020710	• • •									Ì				
07	MODEOO AA	ATTACHING PARTS								4		4			
-37	MS35338-44	Washer, Lock								4		4			
-38	2437	Nut, Hex	1							4		*			ŀ
20	E22264 E0	* * * * Felt, Sump-to-Balance Tube	2					2	2	2					
-39	53236450	reit, dump-to-damice rube	1					~	-	-					
		•													
NOTE	: •														
	No. 2 Cylinder	0-1.							l	1 1					1

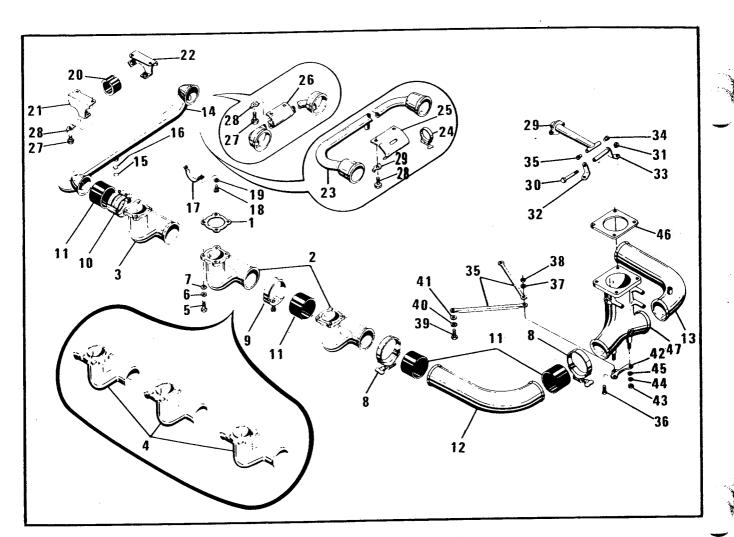


FIGURE 55 - INDUCTION SYSTEM MODELS 10-470-D,E,G,L,P,R,U,V

FIG.	PART			Q	U/	N	TI	ΤY	F	ΡEF	₹	A.	SS	ΕN	1B	LY			
INDEX	NUMBER	12345 DESCRIPTION	C	D	Ε	F	G	Н	J	K	L	М	N	P	R	S	U	٧	1
55-1	536413	& Gasket, Intake Manifold		6			6				6			6	6		6	6	İ
-2	629138	Tube Assy, Intake Manifold, No. 1, 2, 3, 4, 5		5			l				5						5	5	l
-3	629325	Tube Assy, Intake Manifold, No. 6	ŀ	1		l					1	1					1	1	
-4	629138	Tube Assembly, Intake Manifolds			6		6			ļ				6	6				
		ATTACHING PARTS																	77
-5	24835	Bolt, 1/4 - 20 x 7/8 Inch Long			24		24				24			24			24	24	فيزو
-6	MS35338-44	Washer, Lock	1		24		24				24			24		1	24		1
-7	20522	Washer, Plain		24	24	\mathbb{H}	24				24	1		24	24	1	24	24	ŀ
		* * * *			ļ														
-8	631972	Clamp, Hose		8	8		8			l	8			8	8	2	8		
-9	36151L	Clamp, Hose	1	8	_		8				8			8	8			8	
-10	539487	Clamp Assembly, Hose		2	_		2				2			2	2	1		2	
-11	639660-13	Hose, Intake Manifold		10	10)	10	4			10			10	10	1	10	10	
-12	627011	Tube, Elbow, Left Side			1		1				1			1	1	1		١.	
-12	626744	Tube, Elbow, Left Side		1	ł												ŀ	1	
-13	629595	Tube, Elbow, Right Side			1		1				1			1	1				
-13	629597	Tube, Elbow, Right Side		1	١													1	1 3
-14	627250A1	Tube and Valve Assembly, Balance		1			1									Į			V
-15	536326	. Ring, Internal Retaining		1	1												1		قابد) س

FIG	DADT			O	IJΔ	דוא	ΉT	Y	ΡF	ER		\SS	ΕN	1B	LY		
FIG. INDEX	PART Number	12345 DESCRIPTION	C							K L		/ N					V
55 -16	538433	. Valve, Manifold Drain		1			\top		T		Γ	Γ		П		1	_
-17	535787	Clamp, Bracket		2													
-17	300.07	ATTACHING PARTS															
10	A NEOO 410 10			4													
-18	AN520-416-12	Screw, Hex Head	ŀ	4					İ			ŀ					
-19	MS35338-44	* * * *		'												.]	
-20	627254	Tube, Balance Tube Clamp	ļ	2			İ	ŀ									
-20 -21	535785	Bracket, Balance Tube, Left Side		1													
-21	535784	Bracket, Balance Tube, Right Side	1	1									'				
-23	628701	Tube Assembly, Balance	1				- [1						1	1
-23 -24	AN737TW46	Clamp, Balance Tube								1						1	1
-25	632280	Bracket, Balance Tube								1						1	1
-26	630627	Tube Assembly, Balance			1		1		Ì				1	1	}		:
20	000027	ATTACHING PARTS						-									i
27	F270C1	Bolt, 5/16 - 18 x 1 Inch Long		4	4		4						4	4		4	ĺ
-27 -28	537961 501868	Washer, Tab	1	4	4		4		-			Ì	4	4		4	ĺ
-20	201000	* * * *	1	1	1												
-29	538469	Bracket Assembly, Air Throttle		1												1	1
-29	641643	Bracket Assembly, Air Throttle			1		1			1			1	1		ĺ	ĺ
-30	AN4-26A	Bolt	i	1	1		1	ŀ	1				1	1		1	1
-30	AN4-27A	Bolt					1			1							İ
-31	MS21083N8	Nut, Self-locking		1	1		1			1			1	1		1	1
-32	634805	Bracket, Air Throttle Support, Left-hand	1	1	1		1	İ	1	1			1	1		1	1
-33	634807	Bracket Assembly		1	1		1		1	1			1	1		1.	1
-34	538468	Bushing, Air Throttle Support		2	2		2			2			2	2		2	2
-35	627681	Bracket, Crankcase-to-air throttle		2	2		2			2			2	2		2	2
•	02,001	ATTACHING PARTS															
20	F2F000	Screw, Hex Head, 5/16 - 24 x 5/8 Inch Long	1	1	1		1		1	1			1	1		1	1
-36	535666 MC25228 45	Washer, Lock		1	1	1 1	1			1			1	1		1	1
-37 -38	MS35338-45 2439	Nut, Hex	١	1	1		1		- [1		-	1	1		1	1
-38 -39	537750	Screw, Hex Head, 5/16 - 18 x 1-1/8 Inch Long		2	2		2	-		2			2	2	1	2	2
-39 -40	13XX202B	Washer, Lock		2	2		2			2			2	2		2	2
-40 -41	2473	Washer, Plain		2	2		2			2			2	2		2	2
-41	2473	* * * *															
-42	627836	Bracket, Air Throttle Support, Lower			1		1				1		1	1	1	1.	ı
-42	627670	Bracket, Air Throttle Support, Lower		1												1	1
	02.0.0	ATTACHING PARTS	1					1			-			ı			
12	2427	Nut. Hex, 1/4	1	2	2	1	2				2		2	2 2		2	2
-43 -44	2437	Washer, Lock	ı		2		2				2		2			2	2
	MS35338-44 20522	Washer, Plain			2	,	2				2		2	2 2			
-45	20322	* * *															
-46	627368	& Gasket, Air Throttle	-	1	1		1				1		1	1	1	1	. '
-40 -47	027300 ***	Throttle Assembly, Air		rf	rf	i	rf		- [ı	rf		rf	f ri	f	rf	r
*47		find the Assembly, in							ł								
			1														
												- [-			
											-						
												-					
									1						1		
OTE:																	
		Haiardian Figure							Ì		ļ						
^^^ See	e appropriate Hue	l Injection Figure.	İ	J	I	1	1		١	ı	ł	ı	ì	ı	ł	t	t

²⁻⁸⁹

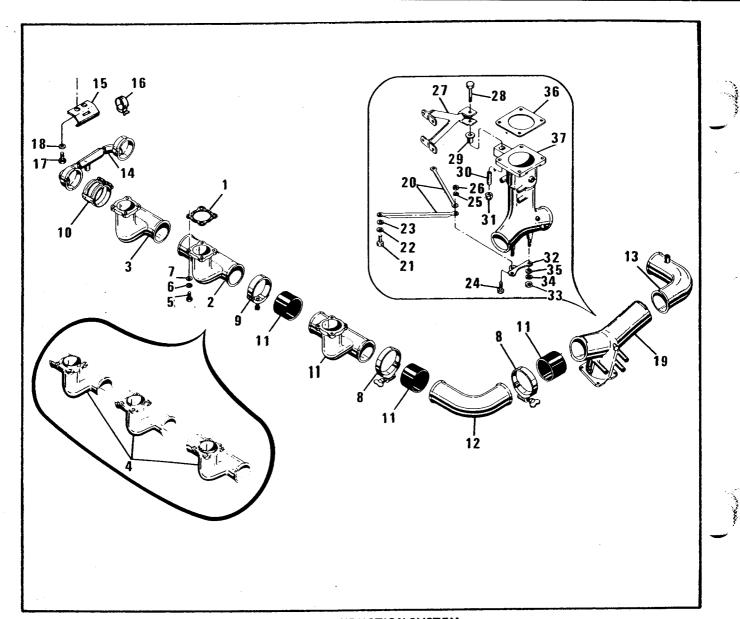


FIGURE 56 - INDUCTION SYSTEM MODELS 10-470-F,S

FIG.	PART			Q	UA	N.	TI.	ΤY		PE	R	Α	SS	E۱	ИB	LY			
INDEX	NUMBER	12345 DESCRIPTION	C	D	Ε	F	G	H	J	K	L	M	N	P	R	S	U	٧	
56-1	536413	& Gasket, Intake Manifold				6						ŀ				6			Ŕ
-2	629138	Tube Assy, Intake Manifold, No. 1, 2, 3, 4, 5			ļ '	5										ŀ			
-3	629325	Tube Assembly, Intake Manifold, No. 6			į	1			ŀ				l.						
-4	629138	Tube Assembly, Intake Manifold].												6			
		ATTACHING PARTS						Ì							1				
-5	24835	Bolt, 1/4 x 7/8 Inch Long				24	H								l	24			
-6	MS35338-44	Washer, Lock				24	ı	ŀ						l		24			3
-7	20522	Washer, Plain				24						İ			1	24			
		* * *		İ				ŀ										i '	
-8	631972	Clamp, Hose				8										8			
-9	36151L	Clamp, Hose				8		1					1		l	8		1	١
-10	539487	Clamp Assembly, Hose				2							1			2		[İ
-11	639660-13	& Hose, Intake Manifold				10	1									10			
-12	535681	Tube, Elbow, Left Side				1					ļ					1	1	Ì	

<u></u>	<u> </u>	1		<u></u>	۱۸	רוא		·v	DI	ER	^	CC 1	MB	11.34		\neg
FIG.	PART	DECODINE	Ļ										P R			\downarrow
INDEX	NUMBER	12345 DESCRIPTION	T	լո	<u> </u>	r	ט		7	1	- 1	IN	PIR	1	U	4
56 - 12	627011	Tube, Elbow, Left Side												1		
-13	627820	Tube, Elbow, Right Side				1			ı							
-13	629595	Tube, Elbow, Right Side					i					1		1		
-14	630628	Tube Assembly, Balance				1										
-14	630627	Tube Assembly, Balance			ļ									1		
-15	630296	Bracket, Balance Tube				1								1		- 1
-16	AN737TW26	Clamp, Balance Tube				1			1				- 1	1		
, •		ATTACHING PARTS														
47	E2024C	Screw, Hex Head, 5/16 x 7/8 Inch Long				2										
-17	530346	Screw, 5/16 - 18 x 1 Inch Long				-								4		
-17	537961	Washer, Lock			1	2										
-18	13XX202B					_			l				-	4		
-18	501868	Washer, Tab	1							- }						
40	***	* * * * The sale Association Air (Con Figure C1)				rf			- 1							
-19	***	Throttle Assembly, Air (See Figure 61)							ı				1	2		. 1
-20	627681	Bracket, Crankcase-to-air throttle		1	ł						1		- 1	1-	1	
		ATTACHING PARTS			ŀ											
-21	537750	Bolt, 5/16 - 18 x 1-1/8 Inch Long												2		1
-22	13XX202B	Washer, Lock			1									2	l	. 1
-23	2473	Washer, Plain												2		il
-24	535666	Screw, Hex Head, 5/16 x 5/8 Inch Long		ļ										1		
-25	MS35338-45	Washer, Lock												1		
-26	2439	Nut, Hex							- 1					1		1
20	2,00	* * * *														
-27	630474	Bracket Assembly, Air Throttle												1		1
-28	537728	Bolt, 1/4 - 28 x 25/32 Inch Long	l						- 1			1		1		
-29	629353	Bushing, Air Throttle Support												2		
-30	629354	Sleeve, Air Throttle Support												1		
-31	22661	Nut, Self-locking								Ì				1		
-32	627836	Bracket, Air Throttle Support, Lower			ŀ			ł	-					1		1
-32	027030	ATTACHING PARTS											1			1
	0.407	*** ***			1	ĺ								2		
-33	2437	Nut, Hex				l							-	2	1	
-34	MS35338-44	Washer, Lock						1 1						2		
-35	20522	Washer, Plain											İ	-		
		* * * *											ļ	1		
-36	627368 ***	& Gasket, Air Throttle					1			-				rf		
-37	***	Throttle Assembly, Air (See Figure 65)														
											ŀ					
			1		ĺ								- 1			
									1				- }			
										I						
														1.		
			l	1												
					.											
														}		
														1		
		•		-												
			1													
•																
						1	1						Į	1		

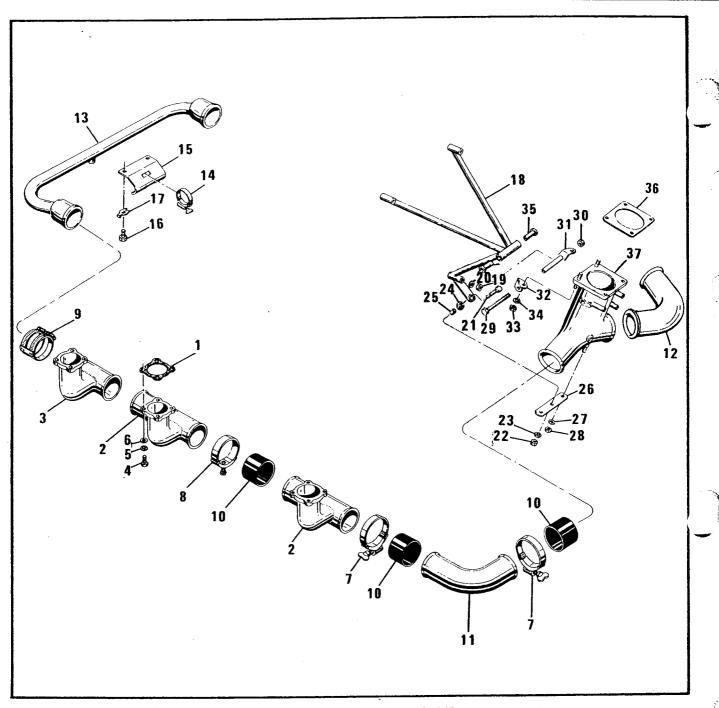


FIGURE 57 - INDUCTION SYSTEM MODEL 10-470-M

Γ	FIG.	PART			C	U/	1N	TI ⁻	ΓY	P	EF	3 ,	AS	SE	М	BL	Y	
	INDEX	NUMBER	12345 DESCRIPTION	c	D	E	F	G	Н	J	K	LI	1	N	1	R S	s Ji	JV
_	57-1 -2 -3	536413 629138 629325	& Gasket, Intake Manifold										5					
			ATTACHING PARTS															
	-4 -5	24835 MS35338-44	Bolt, 1/4 - 20 x 7/8 Inch Long									2 2 2	4					
	-6	20522	Washer, Plain	••					١			ľ	4		1	İ		
	-7	631972	Clamp Hose						1			8	3					
	-8	36151L	Clamp, Hose									1						
	-9	539487	Clamp Assembly, Hose										2					
	-10 -11	639660-13	& Hose, Intake Manifold							- 1		- 1	0		ı			
	-12	628705 628703	Elbow, Intake Manifold, Left Side Elbow, Intake Manifold, Right Side										. 1					
	-13	628766	Tube Assembly, Balance															
	-14	AN737TW46	Clamp, Balance Tube									1	1					
	-15	633435	Bracket, Balance Tube									1	I		1	İ		
			ATTACHING PARTS							ı	İ							
	-16	537961	Bolt, 5/16 - 18 x 1 Inch Long									2						
	-17	501868	Washer, Tab	• •								2	2				ł	
	-18	628822	* * * * Bracket Assembly, Air Throttle									1	.				l	
	-19	2437	Nut, Hex									l						
	-20	MS35338-44	Washer, Lock									1					1	
	-21	AN4-7A	Bolt									1			١			
	-22	22661	Nut, Self-locking, 1/4									1				1	1	
	-23	538100	Washer, Grommet-to-Bracket									1						
	-24 -25	M330S208 628833	Grommet, Air Throttle Bracket										-	-				-
	-26	628816	Bracket, Air Throttle, Lower								1	1						
	20	0200.0	ATTACHING PARTS									ľ				1		
	-27	2437	Nut, Hex						-			2						
	-28	MS35338-44	Washer, Lock								l	2						
	20	A 51 A 00 A	* * * *							İ								
	-29 -30	AN4-26A 22661	Bolt								1							
	-31	538470	Bracket, Air Valve Support, Left Side									li						
Χ.	-32	539113	Bracket, Air Valve Support, Right Side									1					ŀ	
1	-33	23890	Nut, Hex							ŀ		2			1			
	-34	MS35338-44	Washer, Lock									2		Ì			İ	
	-35 -36	538468 627368	Bushing, Air Valve Support									2	1					
	-37	***	& Gasket, Air Throttle				٠			-		rf						
											Ì							
./				İ														
							}											
				Ì			1										1	
							Ì						l					

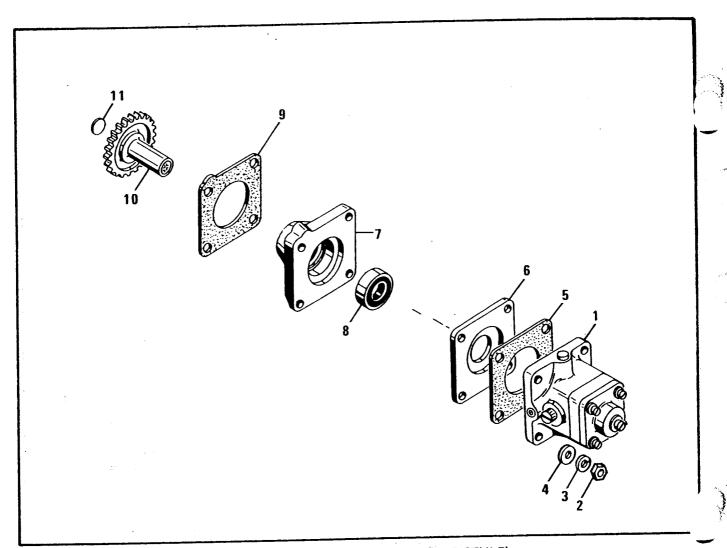


FIGURE 58 - FUEL PUMP ASSEMBLY (OLD STYLE)
MODELS 0-470-B,E,G,M,P

FIG.	PART								C	۱U	ΔN	TI	TY	<u>_</u> F	PEF	}	A	SSE	<u> </u>	BL'	<u>Y</u> _	
INDEX	NUMBER		12345		DESCRIPT	ON		A	В	E	G	3	K	L	M	P	R		\perp	\bot	+	4
 58-1	626845	0	Pump Assem	bly	, Fuel (Romed	No. RG15	980)		1	1	1				1	1						-
	itangga 1 1.		•			IING PAR												1				
-2	2439		Nut. Plain He	ex						4	4	ŀ				4			7			
-3	MS35338-45		Washer, Lock	k.					4	4	4		1	Ì	I . I	4						
-4	2473		Washer, Plain	n.					4	4	4				4	4						
•	2170					* * *							1	ł			1			1		
-5	MS9137-01		Gasket, Fuel	l Pt	ımp				2	2	2		1	1	2	2	1					
-6	537682		Insulator, Fu	uel	Pump				11	1	11					!						
-7	627518		Adapter Asse	em	bly, Fuel Pump				1			l.,								• [1	
-7	534987		Adapter Asse	em	bly, Fuel Pump								1		1						1	
-8	534956	&	. Oil Seal .												1	1						
.9	534941	&	Gasket, Fuel	l Pi	ump Adapter .						11				1	1				-		
-10	534995		Gear Assemb	blv	. Fuel Pump D	ive		.							1	1						
-11	539634		. Plug					.	11	11	1	1.			1	1			.		1	

① This pump no longer available. For replacement order 640643-5 and EQ6537. See Figure 59.

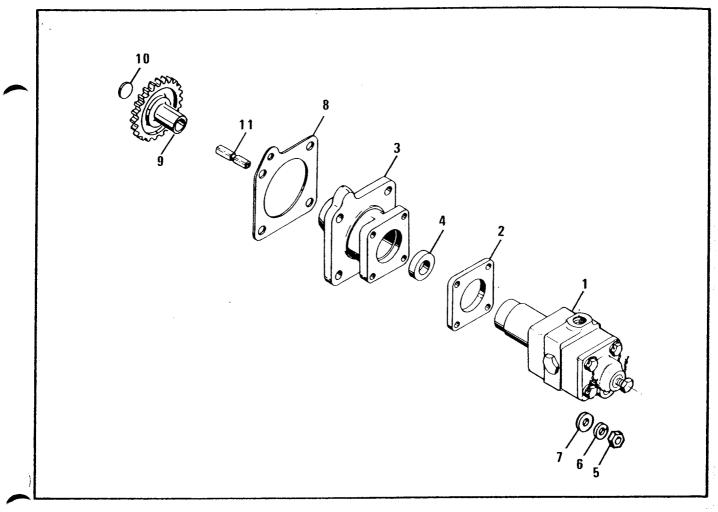


FIGURE 59 - FUEL PUMP ASSEMBLY (NEW STYLE)
MODELS 0-470-B,E,G,M,P

FIG.	PART			Q	U	٩N	TI	ΤY	' I	PE	R	Α	SS	E٨	ЛB	LY	,	
INDEX	NUMBER	12345 DESCRIPTION	A	В	E	G	IJ	K	L	М	Р	R	S	U	L		П	_
59-1	640643-5	Pump Assembly, Fuel		1	1	1				1	1			ĺ				
-2	632816	. Insulator, Fuel Pump		1	1	1	1	}		1	1			~				
-3	642515	. Adapter Assembly, Fuel Pump		1	1	1	-			1	1				ŀ			
-4	628178	Seal, Oil		1	1	1			ļ	1	1			'				
1		ATTACHING PARTS															1 1	
-5	2439	Nut	l	4	4	4		1		4	4	l		Α,				
-6	MS35338-45	Washer, Lock		4	4	4				4	4							
-7	2473	Washer, Plain		4	4	4				4	4							
		* * * *											Ì					
	EQ6537	Kit, Fuel Pump Assembly		1	1	1		.	ŀ]	1							
-8	534941	. Gasket, Fuel Pump Adapter		1	1	1				1	1	ĺ	١.	-	1	•		
-9	631684	. Gear Assembly, Fuel Pump		1	1	1				1	1]					
-10	539634	Plug	1	1	1	1	1		ŀ	1	1		1	1				
-11	631683	. Coupling		1	1	1				1	1							
				l							ļ	l			•	l		

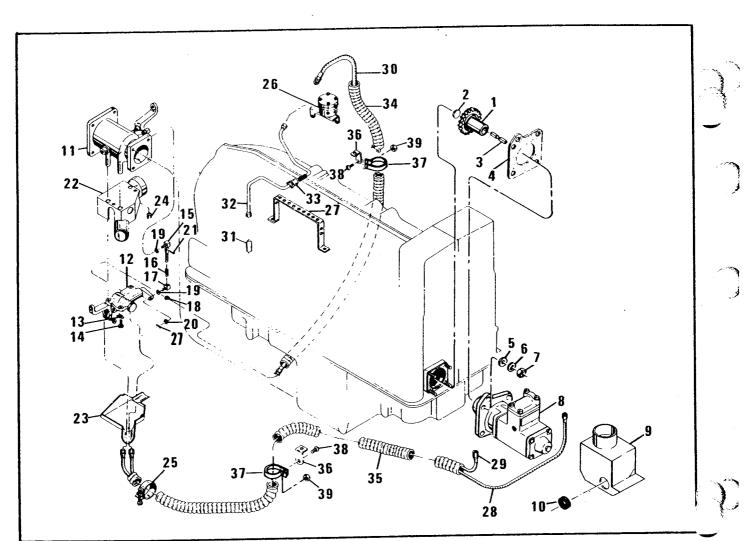


FIGURE 60 - FUEL INJECTION SYSTEM MODELS 10-470-C,H,J

FIG.	PART		T					ΤY				SS						
INDEX	NUMBER	12345 DESCRIPTION	0	D	E	F	G	Н	J	ΚĮI	_ M	N	Р	R	S	U	ᅬ	
60-1	631684	① Gear Assembly, Fuel Pump Drive	. 1				l	1	1									
-2	539634	① . Plug, Fuel Pump Gear	. [1					1	1				ļ	·				
-3	631683	Coupling, Drive	· []						!]								ŀ	
-4	534941	Gasket, Fuel Pump-to-Crankcase	$\cdot \mid \cdot \mid$							İ		1					,	. 3
-5	2473	Washer, Plain	$\cdot \mid $		1			4	4		1	1					ŀ	أعوب
-6	MS35338-45	Washer, Lock	. 15					4	4								- 1	
-7	2439	Nut, Plain	. 4					4	4								ı	
	639246A3	Fuel Injection Assembly, Complete	• [' I							-		١	1			- 1	
	639248A3	Fuel Injection Assembly, Complete	٠ [1	-			ŀ		'			
-8	638154-9A1	① . Fuel Pump and Vapor Separator Assembly	· []	1				1	'									c. **•
		* * * *	- ,		1			1	,								1	أغوس
-9	631764	Shroud Assembly, Fuel Pump						4	4				1	l				~
-10	626879-1	Grommet, Fuel Pump Shroud	٠ [[1		1	7		1		1					
	626836A1	. Throttle and Control Assembly		'				'	1	- [1					
	625487A1	. Throttle and Control Assembly		.		1					1							
-11	626791A1	Throttle and Lever Assembly	\cdot	'	1			"			-		1					· ·
-11	625259A1	Throttle and Lever Assembly							,	İ							3	}
		(for detail parts see Figure 68)		.				1								ļ	Ì	خند
-12	625219-2A1	Control Assembly, Complete	.	• {	ı	l	1	ļ I	1	Į,	- 1	ı	ı	l	ŀ	_		

FIG.	PART	· .													IBL		
INDEX	NUMBER	12345 DESCRIPTION	C	D	E	F	G	Н	J	K	L	M	N	Р	R	sΙ) V
60-12	625219-1A1	Control Assembly, Complete							1								
		ATTACHING PARTS															
. 13	501867	Washer, Tab	3					3	3								
-14	537629	. Screw	3					3									
14	307023	* * *							İ								
	632558A1	Link Rod Assembly	1			1		1	1								
		② Link Rod Assembly	1					1	1								
-15	632558	Rod and Link Assembly		1	'			1	1							Ì	
-15	625539	🗿 Rod and Link Assembly		1				1	1								
-16	626634	Spring, Compression	1					1	1								
-17	632557	Rod End, Special	1					1	1								
-17		② Rod End, Special			ļ			1	1	l							
-18	MS21044N3	Nut, Elastic Stop	1					1	1								
-19	625327-2	Washer, Wave	12	1			1	2	2								
-20	537690	. Washer, Plain	12					2	2								
-21	2500	. Pin, Cotter	12					2	1							Ì	
-22	627076	. Shroud Assembly, Bottom	1					1	ľ								
-23	627094	Shroud Assembly, Cover	2	4				2	2								
-24	626891	. Grommet, Rubber	1					1	1								
-25	24609	. Clamp, Metering Unit Shroud	li					i	1					İ			
-26	631427A15	. Valve Assembly, Fuel Manifold	'					•	'		1	1					
27	COCADO	(for detail parts see Figure 72) . Bracket, Fuel Discharge Tubes	2					2	2	١							
-27	626486	10 . Hose Assembly, Flexible	1		ł		i	1	1				ļ				
-28	MC20741-4-U34	66 . Hose Assembly, Fleixible	li	1				1	1							İ	
-29 -30		00 . Hose Assembly, Flexible	1	ì				1	1						i		
-30 -31	627335D12	3. Nozzle Assembly, Fuel Injection	6	1				6	6		ŀ						
-32	628154	. Tube Assembly, Fuel Discharge, No. 1 & 6	2		ŀ			2	-								
-32	638440	. Tube Assembly, Fuel Discharge No. 1 & 6							2								
-32	628153	. Tube Assembly, Fuel Discharge, No. 2 & 5	2				-	2								ı	
-32	628439	. Tube Assembly, Fuel Discharge, No. 3 & 4							2								
-32	628152	. Tube Assembly, Fuel Discharge, No. 3 & 4	2				1	2			ł						
-32	628441	. Tube Assembly, Fuel Discharge, No. 3 & 4							2								
-33	626577-2	. Clamp, Fuel Discharge Tubes	6			l		6	6								
-34	539819-24.00	. Duct, Flexible, 1 Inch ID x 24 Inch Long	1					1	1								
-35	532313-27.00	. Duct, Flexible, 1-1/2 Inch ID x 27 Inch Long .	1					1	1			-					
-36	626524	. Bracket, Tube	2					2	2								
-37	MS21333-81	. Clamp	2					2	2								
		ATTACHING PARTS								ļ							
-38	AN3-4A	. Bolt	2					2	2								
-39	MS20365-1032							2	2				l				
50																	
				1													
								1									
	_																

- ① See Figure 71 for old style fuel pump and associated parts.
- ② This link rod assembly is to be used, only with levers with no bushings. See Figures 69 and 75.
- 3 Check old nozzle on engine for nozzle size, stamped on hex, and order the complete nozzle part number (ie 627335D12C).

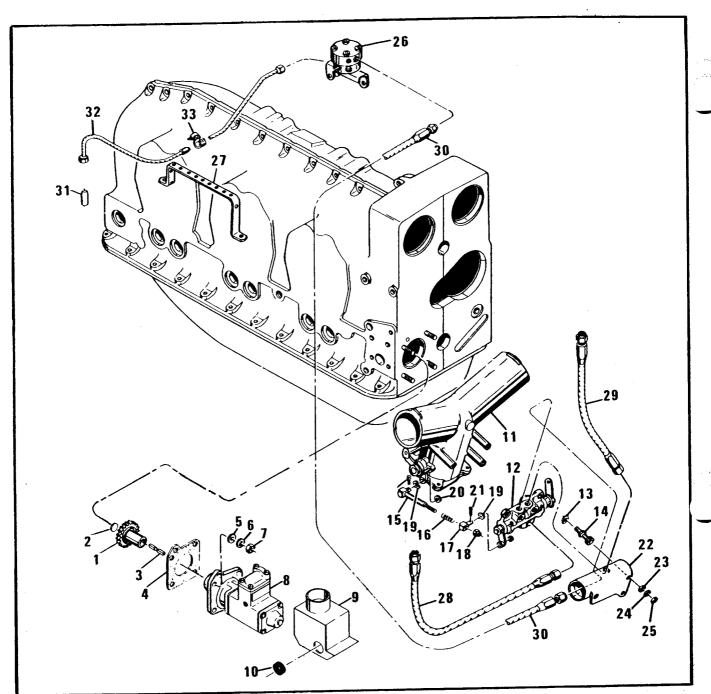


FIGURE 61 - FUEL INJECTION SYSTEM MODEL 10-470-F

FIG.	PART			Q	UA	١N	TI	ΤY	<u> </u>	PE	R	Α	SS	E١	ΛB	LY		
INDEX	NUMBER	12345 DESCRIPTION	C	D	E	F	G	Н	J	K	L	M	N	Р	R	S	U	У
61-1	631684	① Gear Assembly, Fuel Pump				1												
-2	539634	① . Plug, Fuel Pump Gear			l	1										l		
-3	631683	Coupling, Drive		١		1					Ì							
-4	534941	Gasket, Fuel Pump-to-Crankcase				1												
-5	2473	Washer, Plain				4	1									İ		
-6	MS35338-45	Washer, Lock				4	1				1	1		1	1			•
-7	2439	Nut, Plain			İ	4											1	
	640107A3	Fuel Injection Assembly, Complete				1												
-8	638154-9A8	① Fuel Pump & Vapor Separator Assembly				1					1	1	1	į	1		i	

ſ	FIG.	PART				U/										IBL			
	INDEX	NUMBER	12345 DESCRIPTION	_ C	L	ļΕ	↓E	G	ļН	IJ	ĻΚ	L	LM	N	P	R	s	U.	V
			* * *				١.											1	-
	61-9	631764	Shroud Assembly, Fuel Pump				1												
	-10	626879-1	Grommet, Fuel Pump Shroud				3											ı	
		640120A1	. Throttle and Control Assembly				1					ì							
	-11	639766A1	② Throttle and Lever Assembly				1										١		
			(for details see Figure 68)				١.												
	-12	625219A7	Control Assembly, Complete				1										ı		
			ATTACHING PARTS																1
	-13	501867	Washer, Tab			İ	3												١
	-14	630387	. Bolt, Special, 1-7/8 Inch Long	1			3					1							
			* * *														1		١
		632558A1	. Link Rod Assembly				1	1				l					ı		1
		625539A1	3 Link Rod Assembly				1												1
	-15	632558	Rod and Link Assembly				1			l									1
	-15	625539	3 Rod and Link Assembly				1										ŀ	.	١
	-16	626634	Spring, Compression				1				1								1
	-17	632557	Rod End, Special				1												1
	-17	625542	3 Rod End, Special				1												-
	-18	MS21044N3	Nut, Elastic Stop				1										ı		
	-19	625327-2	Washer, Wave				2												
	-20	537690	Washer, Plain				2							i			1		
	-21	2500	Pin, Cotter				2												
		632859A1	. Shroud Assembly, Metering Unit, Complete				1												1
	-22	632859	Shroud, Metering Unit	1			1										ı		
			ATTACHING PARTS															- [-
	-23	20522	Washer, Plain		ì		3										ŀ		-
_	-24	MS35338-44	Washer, Lock				3											1	-
	`-25	2437	Nut				3												1
			* * * *														1		١
	-26	631427A17	. Valve Assembly, Fuel Manifold				1							-			1		١
			(for detail parts see Figure 72)																١
	-27	626486	. Bracket, Fuel Discharge Tubes				2										-		1
	-28	635158-16.00	. Hose Assembly, Flexible, 1/4 ID x 16 Inch Long .				1												
	-29	635158-8.50	. Hose Assembly, Flexible, 1/4 ID x 8.5 Inch Long				1												-
	-30	635158-44.00	. Hose Assembly, Flexible, 1/4 ID x 44 Inch Long .				1	-											
	-31	627335D12	Nozzle Assembly, Fuel Injection				6												
	-32	638154	. Tube Assembly, Fuel Discharge, No. 1 & 6				2 2 2	-											١
	-32	638153	. Tube Assembly, Fuel Discharge, No. 2 & 5			.	2								v				١
	-32	638152	. Tube Assembly, Fuel Discharge, No. 3 & 4		ł		6										ı	-	
	-33	626557-2	. Clamp, Fuel Discharge Tubes	1			O										ı		1
															1.				
				ı		l		1				I						1	1

- ① See Figure 71 for old style fuel pump and associated parts.
- 2 If replacing old style throttle body which has cast mount legs, it will be necessary to order, in addition to new throttle assembly, a 639410 bracket, a 639411 bracket and 4 each 530346 bolts.
- This link rod assembly is to be used only with levers with no bushings. See Figures 69 and 75.
- 3 Check old nozzle on engine for nozzle size, stamped on hex, and order the complete nozzle part number (ie 627335D12C).

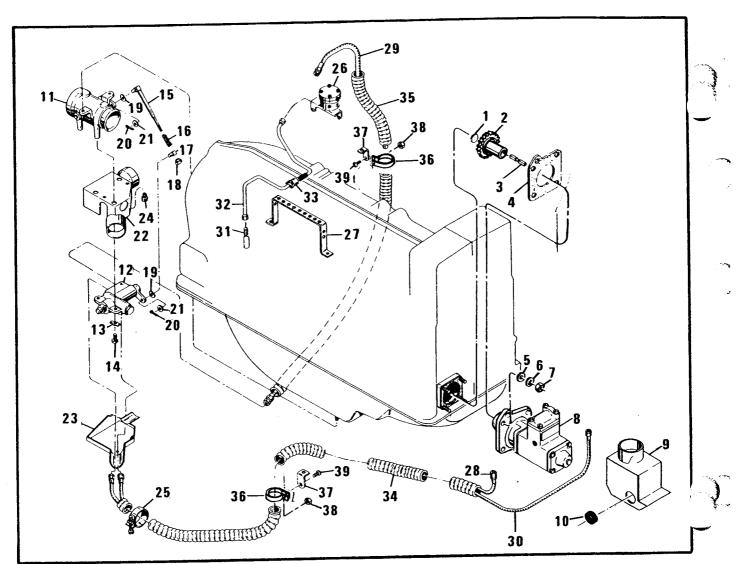


FIGURE 62 - FUEL INJECTION SYSTEM MODELS 10-470-K,N

FIG.	PART				_			_	ΓΥ				SS					
INDEX	NUMBER	12345 DESCRIPTION	_	C	D	E	F	G	н.	K	L	М	N	Р	R	S	<u>ין ט</u>	<u> </u>
62-1	631684	① Gear Assembly, Fuel Pump								1			1					
-2	539634	① . Plug, Fuel Pump Gear								'	1		1:				- 1	1
-3	631683	Coupling, Drive Gear				١				1			;				-	
-4	534941	Gasket, Fuel Pump			'									1			ı	il .
-5	2473	Washer, Plain					١			4			4				1	
-6	MS35338-45	Washer, Lock	•							4	1		4		1			
-7	2439	Nut, Plain	•				١		1	4		Ì	*					
	639234A3	Fuel Injection Assembly, Complete	•			١				'	1	1	1.					1.
	639247A3	Fuel Injection Assembly, Complete	• •		1					١,			'	1			I	
-8	638154-12A1	① . Fuel Pump & Vapor Separator Assembly	• •			1			1 1	'	1		١,		l			ri .
-8	638154-9A1	① . Fuel Pump & Vapor Separator Assembly	• •		1		1			1		1	'	1				· jus
		* * *								١.			١.					
-9	631764	Shroud Assembly, Fuel Pump					ľ			ָן <u>'</u>			'					
-10	626879-1	Grommet, Fuel Pump Shroud	• •										3	1	1			
	628428A1	Throttle and Control Assembly			1	1				- ['	'		١.	1				
	628776A1	. Throttle and Control Assembly			1									1			1	1
-11	628429A1	Throttle and Lever Assembly									۱		١.					Y
-11	628775A1	Throttle and Lever Assembly											11					
	•	(for detail parts see Figure 68)								1	١	ŀ	1	ı		l		ı

FIG.	PART NUMBER	122AF DECODERTION							Р						BL]
L			C	ID.	E	F	G	H	IJ		L	М	N	P	R	s [υN	1
62-12	625219-1A2	Control Assembly, Complete								1								
-12	625219-2A1	Control Assembly, Complete											1					
		ATTACHING PARTS																
-13	501867	Washer, Tab								3	ļ		3					
-14	537629	Screw, 1/4 - 20 x 21/32 Inch Long								3			3					
		* * * *																
	632558A1	Link Rod Assembly								1	ļ		1					-
		Link Rod Assembly								1		-	1					j
-15	632558	Rod and Link Assembly								1			1					
-15		Rod and Link Assembly								1			1					
-16	626634	Spring, Compression								1			1	- }	- 1			
-17	632557	Rod End, Special								1			1	İ	-			
-17		Rod End, Special								1			1					
-18	MS21044N3	Nut, Elastic Stop								1			1					
-19	625327-2	Washer, Wave								2			2					
-20	537690	Washer, Plain								2			2		-			-
-21	2500	Pin, Cotter								2			2					
-22	627076	Shroud Assembly, Bottom								1			1					-
-23	627094	Shroud Assembly, Cover								1			1					١
-24	626891	Grommet, Rubber						l		2		- 1	2					I
-25	24609	Clamp, Metering Unit Shroud			ļ					1	- 1		1		-		-	
-26	631427A19	. Valve Assembly, Fuel Manifold								1								
-26	631427A15	. Valve Assembly, Fuel Manifold											1				-	
07	020402	(for detail parts see Figure 72)																
-27	626486	Bracket, Fuel Discharge Tube	ı							2		1	2	-				I
-28	WIS28/41-4-0266	. Hose Assembly, Flexible, 1/4 ID x 26-3/4 Inch Long								1			1					I
-29	MS28741-4-0340	. Hose Assembly, Flexible, 1/4 ID x 34 Inch Long .								1			1					ļ
-30	MS28741-4-0300	Hose Assembly, Flexible, 1/4 ID x 30 Inch Long.								1						1		1
-31		Nozzle Assembly, Fuel Injection								6	1	E	j					
-32 -32	628440	Tube Assembly, Fuel Discharge No. 1 & 6								2							1	
-32 -32	628154 628439	. Tube Assembly, Fuel Discharge No. 1 & 6								,		2	4		1			
-32 -32	628153	Tube Assembly, Fuel Discharge No. 2 & 5								۷		ا						
-32 -32	628441	Tube Assembly, Fuel Discharge No. 2 & 5	ļ							,		2	<u> </u>					
-32 -32	628152	Tube Assembly, Fuel Discharge No. 3 & 4							4	4		,						
	626577-2	. Tube Assembly, Fuel Discharge No. 3 & 4	ļ							اہ		2	- 1					1
	532313-27.00	Clamp, Fuel Discharge Tubes	ſ							6			6				ļ	
	539819-24.00	Duct, Flexible, 1-1/2 ID x 27 Inch Long			ļ								1					1
	MS21333-81	Duct, Flexible, 1 Inch ID x 24 Inch Long				-							1					I
	626524	Clamp				-			- 1	2			2					
-31	020024	. Bracket, Tube					İ			2			4				1	1
	1100000 T	ATTACHING PARTS																-
	MS20365-1032C	. Nut		- 1					- 1	2	1		2					
-39	AN3-4A	. Screw				- [2			2					
•																		1
			ļ															1
			-			-												1
									-	l								
																		-
NOTE	e.	•	•	•	•	'	,	,	•	,	,	•	•	•	,	•	•	•

- ① See Figure 71 for old style fuel pump and associated parts.
- ① This link rod assembly is to be used only with levers with no bushings. See Figures 69 and 75.
- 3 Check old nozzle on engine for nozzle size, stamped on hex, and order the complete nozzle part number (ie 627335D12C).

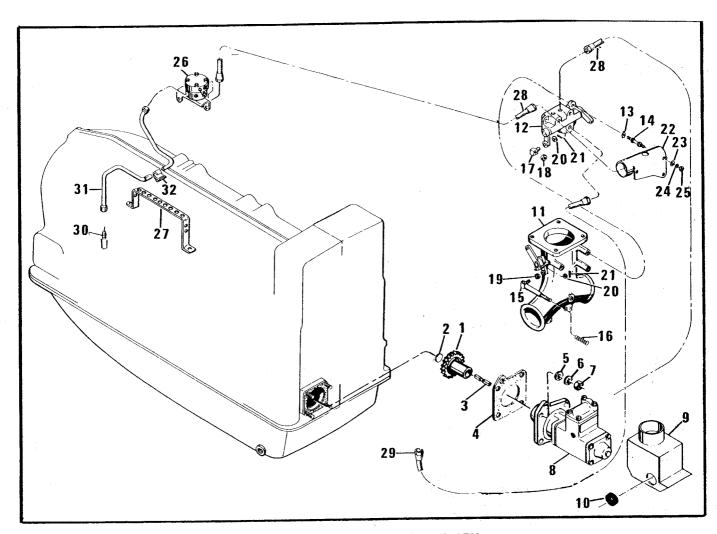


FIGURE 63 - FUEL INJECTION SYSTEM MODEL 10-470-L

FIG.	PART											Α						
INDEX	NUMBER	12345 DESCRIPTION	_ c	D	E	F	G	H	J	K	L	М	N	P	\mathbb{R}	S	u l	V
63-1	631684	Gear Assembly, Fuel Pump Drive									1		١.				T	٦
-2		D. Plug, Fuel Pump Gear									1		1					-
-3	631683	Coupling, Drive									1							
-4	534941	Gasket, Fuel Pump		1							1	ļ						
-5	2473	Washer, Plain									4							
-6	MS35338-45	Washer, Lock									4							
-7	2439	Nut, Plain									4							ı
•	639255A4	Fuel Injection Assembly, Complete									1		1					
-8) . Fuel Pump & Vapor Separator Assembly		1							1							
· ·	000.0.02	* * * *																
-9	631764	. Shroud Assembly									1							
-10	626879-1	. Grommet, Fuel Pump Shroud									3							
	628744A1	. Throttle and Control Assembly									1							
-11	627326A3	Throttle & Lever Assy, (for details see Fig. 68) .									1							
-12	625219-2A4	Control Assembly, Complete				-					1							
		ATTACHING PARTS																-
-13	501867	Washer, Tab	1								3	1					. 1	
-14	630387	Bolt, Special, 1-7/8 Inch Long									3							-
		* * *															.	
	632558A1	Link Rod Assembly									1							
	625539A1 Q) Link Rod Assembly						ļ			1						. }	-
-15	632558	Rod & Link Assembly						1			1							
-15	625539 Q) Rod & Link Assembly									1							
-16	626634	Spring, Compression		-							1							1
-17	632557	Rod End, Special									1		1					
-17) Rod End, Special									1	1						
-18	MS21044N3	Nut, Elastic Stop									1	Ì						-
-19	625327-2	Washer, Wave					ĺ	-			2							
-20	537690	Washer, Plain									2	1						
-21	2500	Pin, Cotter									2						1	-
-22	632859	Shroud, Metering Unit				İ											1	
		ATTACHING PARTS	-											1			Н	
-23	20522	Washer, Plain									3							-
-24	MS35338-44	Washer, Lock									3							
-25	2437	Nut, Plain									3							
		* * * *								-	1							
-26	631427-3A2	. Valve Assembly, Fuel Manifold									'					ŧ		-
07	000400	(for detail parts see Figure 72)					Ì	1			2	1						
-27	626486	Bracket, Fuel Discharge Tubes	1								2						1	
-28 20	635158-17.00 MS28741-4-0340	 Hose Assembly, Flexible, 1/4 ID x 17 Inch Long Hose Assembly, Flexible, 1/4 ID x 34 Inch Long 									1							
-29 -30		. Hose Assembly, Flexible, 174 ID x 34 IIIII Long. D. Nozzle Assembly, Fuel Injection									6							
-30 -31	628154	. Tube Assembly, Fuel Discharge No. 1 & 6									•							
-31 -31	628153	. Tube Assembly, Fuel Discharge No. 2 & 5									2 2 6			1				
-31 -31	628152	. Tube Assembly, Fuel Discharge No. 2 & 3									2							
-32	626577-2	. Clamp, Fuel Discharge Tubes							İ		6							
-02	020011 Z	. oldinp, i doi bloomargo Taboo									ľ							
			1															
			I	I	1	ı	1	l	ļ	ļ	İ	ŀ	ł	ì	ı	ŀ	1 !	,

- ① See Figure 71 for old style fuel pump and associated parts.
- ① This link rod assembly is to be used only with levers with no bushings. See Figures 69 and 75.
- 3 Check old nozzle on engine for nozzle size, stamped on hex, and order the complete nozzle part number (ie 627335D12C).

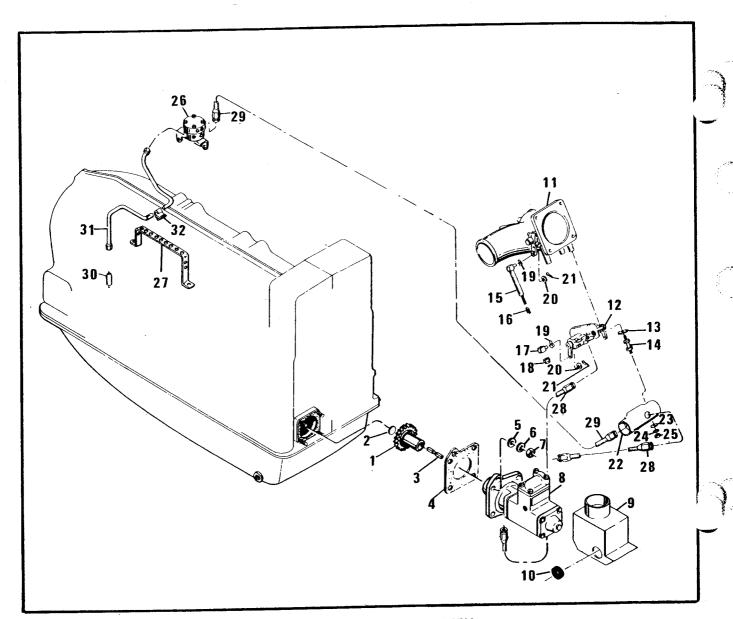


FIGURE 64 - FUEL INJECTION SYSTEM MODEL 10-470-M

FIG.	PART											AS					
INDEX	NUMBER	12345 DESCRIPTION	<u> C</u>	D	E	F	G	H	J	K	L	М	N P	R	S	U	Ц
64-1	631684	① Gear Assembly, Fuel Pump										1					
-2	539634	① . Plug, Fuel Pump Gear							1			1					
-3	631683	Coupling, Drive Gear										1				- 1	1
-4	534941	Gasket, Fuel Pump-to-Crankcase					l					1					
-5	2473	Washer, Plain										4					
-6	MS35338-45	Washer, Lock										4					
-7	2439	Nut, Plain			İ							4					
•	639260A3	Fuel Injection Assembly, Complete			1							1					
-8	638154-9A4	① . Fuel Pump & Vapor Separator Assembly			1	1	l					1				1	
U	0007070711	* * * *			1												1
-9	631764	. Shroud Assembly, Fuel Pump	.									1					
-10	626879-1	. Grommet, Fuel Pump-to-Shroud									ļ	3					-
, •	628891A1	. Throttle and Control Assembly					1					1					ĺ
-11	628861A1	Throttle and Lever Assembly										1					
		(for detail parts see Figure 68)															
-12	625219-2A9	Control Assembly, Complete										1	1				
		ATTACHING PARTS	ı					-		1							١
-13	501867	Washer, Tab		1								3					
-14	630387	Bolt, Special, 1-7/8 Inch Long										3					-
• •	000007	* * * *															
	632558A1	Link Rod Assembly										11		1			-
	625539A1	② Link Rod Assembly			1							11			Ì		
-15	632558	Rod & Link Assembly	. [1						1					- [
-15	625539	② Rod & Link Assembly		i		i				1		1					۱
-16	626634	Spring, Compression								İ		1	-	-		1	
-17	632557	Rod End, Special										1					١
-17	625542	② Rod End, Special		İ				1				1					1
-18	MS21044N3	Nut, Elastic Stop										11					
-19	625327-2	Washer, Wave										2	1	1			į
-20	537690	Washer, Plain										2					
-21	2500	Pin, Cotter						1				2		ı			
	632859A1	. Shroud Assembly, Metering Unit										1					- 1
-22	632859	Shroud, Metering Unit										11			1		
		ATTACHING PARTS					1			1	1		Ì		İ		
-23	20522	Washer, Plain	.									3	ł				
-24	MS35338-44	. Washer, Lock										3		1			
-25	2437	Nut, Hex	.									3					
23	2407	* * * *												ļ		1	
-26	631427A16	. Valve Assembly, Fuel Manifold	.					Ì				1					
20	0071277110	(for detail parts see Figure 72)															
-27	626486	. Bracket, Fuel Discharge Tubes	.			1						2	1				
-28	635158-16.00	. Hose Assembly, Flexible, 1/4 ID x 16 Inch Long	.		1							2					
-29	MS28741-4-03		.			1			1			1					
-30	62733D12	③ . Nozzle Assembly, Fuel Injector										6	}				
-31	628154	. Tube Assembly, Fuel Discharge, No. 1 & 6	.	1	1							2					, I
-31	628153	. Tube Assembly, Fuel Discharge, No. 2 & 5										2		1			i
-31	628152	. Tube Assembly, Fuel Discharge, No. 3 & 4										2					
-32	626577-2	. Clamp, Fuel Discharge Tubes										6					
NOTEC		•	1	1	ŀ	ı	ŀ	1	i	I	Ī	1	ı	I	I	1	

- ① See Figure 71 for old style fuel pump and associated parts.
- ② This link rod assembly is to be used only with levers with no bushings. See Figures 69 and 75.
- 3 Check old nozzle on engine for nozzle size, stamped on hex, and order the complete nozzle part number (ie 627335D12C).

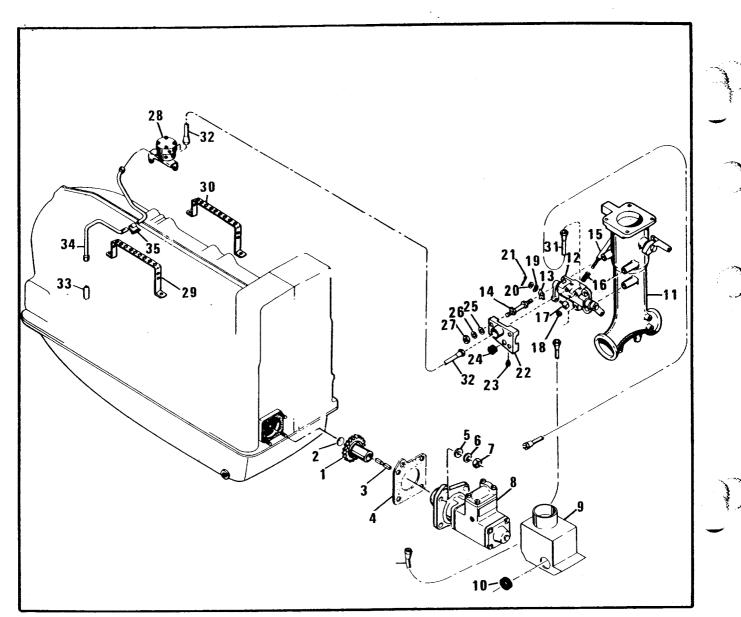


FIGURE 65 - FUEL INJECTION SYSTEM MODEL 10-470-S

FIG.	PART		}	Q	U/	٩N	TI	T		PE	R	Α	SS	ΕN	/BI	<u>LY</u>		_	
INDEX	NUMBER	12345 DESCRIPTION	C	D	E	F	G	Н	J	K	L	М	N	Р	R	S	U	۷	1 m
65-1	631684	① Gear Assembly, Fuel Pump Drive														1			1
-2	539634	① . Plug, Fuel Pump Gear	1				1				١					1		١	
-3	631683	Coupling, Drive Gear	1				1							ł		1			
-4	534941	Gasket, Fuel Pump-to-Crankcase		1	1		١]			
-5	2473	Washer, Plain						1		ł		1				4			
-6	MS35338-45	Washer, Lock					1		1							4			
-7	2439	Nut, Plain										1				4			1
	639264A2	Fuel Injection Assembly Complete						1					1			1			نون
-8	638154-9A6	1 . Fuel Pump & Vapor Separator Assembly										1				1			
		* * * *		1									1						:
-9	631764	Shroud Assembly, Fuel Pump		١		ł					1	1		1	1	1			i İ
-10	626879-1	Grommet, Fuel Pump Shroud	1				1									1		,	
	629399A9	. Throttle and Control Assembly														1			
-11	629397A1	Throttle and Lever Assembly	ĺ		1	1						-				1			- 8 - 550
		(for details see Figure 68)				1						1							٠.

FIG.	PART	PART 12345 DESCRIPTION													ŤII	Υ	PE	R	Α	SS	ΕM	BL	Υ	
INDEX	NUMBER		1	2345	Г	DESC	RIP	TION			ŀ	cl	DE	F	G	нΙ	ĮΠ	di	M	N	Р	Вl	sli	Jν
L	L			Control								*	1	T			T	T	T				1	
65-12	629703-2A4			Control	Moorii																			
									G PAR		ŀ												3	
-13	501867			. Washer,	Tab .	4.7.10			• • • • •	• • • • • •	• • •												3	
-14	630387			. Bolt, Spe	ecial,	I-//8					٠ ا											- [
	04000044			. Link Ro	م ۸ م	بالمصم		* * *			1	-									H		1	
	642283A1	<u></u>		. Link Roi . Link Roi	4 V ***	ombb	,												1				1	
-15	629364A1 642283	9		Rod an	nd Lir	nk Δα	em hl	 V				Ì							1				1	
-15	629364	മ		Rod an												- {							1	
-16	626634	Ÿ	•	Spring,	Com	nress	ion .							1		ļ							1	
-17	632557-1			Rod Ei	nd. Si	pecial																	1	
		2		Rod Ei												1			1				1	
-17 10	629330 MC21044N2			Koa Ei Nut, Ei	nu, o Isctic	PECIAL																	1	
-18 -19	MS21044N3 625327-2			Nui, E . Washer, \	iastic Wave	Stich	• • • •]]]												2	
-19 -20	537690			. Washer, I . Washer, I	Plain																		2	
-20 -21	2500			. Pin, Cott	ter	••••]												2	
۷,	629338A1		. :	Shroud As	semb	ly, Me	eterino	g Unit	Comp	lete										1			1	
-22	629338			Shroud,																			1	
-23	626891			. Gromme	t, Ru	bber																	2	
-24	626879-1			. Gromme	et, Ru	bber															l		'	
						ļ	ATTA	CHIN	G PAF	RTS														
-25	20522			. Washer,	Plain										Ì								3	
-26	MS35338-44			. Washer,	Lock																		3	-
-27	2437			. Nut, Pla	in									-						1			3	
								* * *	* *											1				
-28	631427A17			Valve Ass													- 1						1	
				(for detai	il part	ts see	Figur	e 72)			-										1.		1	
-29	641701			Bracket, F	el [)ischa	rge T	ubes (1-3-5 s	ide)								- }					1	
-30	628295	_		Bracket, F	el E)ischa	irge i i	ubes (?	2-4-b s	ide)								-					2	
-31	635158-18.00		•	Hose Asse	mbly	, Flex	uble,	1/4 IU 1/4 ID	X 18	INCA LOI	ng.			- 1					İ		1		1	-
-32	635158-32.00	ا ا		Hose Asse	mbly	, Flex	(IDIE, .al Ini	1/4 IU	X 32	HICH LUI	ıy .	1						- 1					6	
-33	627335D12	હ	J .	Nozzle As Tube Asse	semp	ny, Fl , Eu≎	i Diec Miliij	harne	No 1	 & ፍ					1	-				1			2	
-34	628154		•	Tube Asse	muiy	, Fue	l Disc	harna	No. 1	& G & F				ļ								1	2	- [
-34 -34	628153 628152		•	Tube Asse	mbly	, Fue	l Disc	harne	No. 3	& 4			1	- 1					ŀ			1	2	
-35	626577-2			Clamp, Fu																			6	1
-33	020377-2		٠	Gianip, F	uci Di	SCHOOL	go , a	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,																
											1			-					- 1		1			
																1			-			1		
																			- 1			1		
																						1		
												1												
																						1		
															1									
																			-					
												1							- 1		1	1	1	

- ① See Figure 71 for old style fuel pump and associated parts.
- 2 This link rod assembly is to be used only with levers with no bushings. See Figures 69 and 75.
- 3 Check old nozzle on engine for nozzle size, stamped on hex, and order the complete nozzle part number (ie 627335D12C).

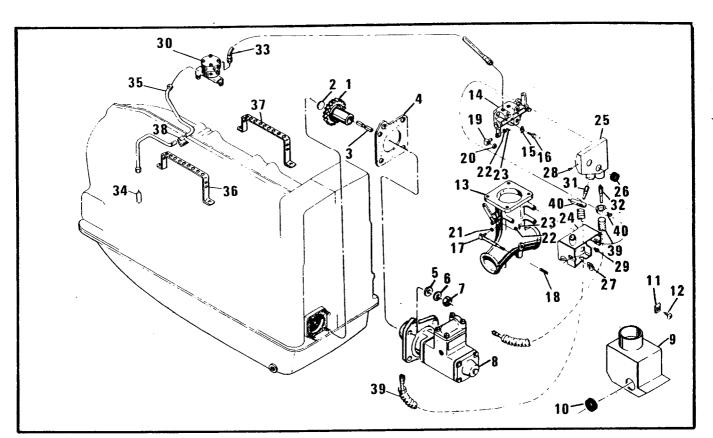


FIGURE 66 - FUEL INJECTION SYSTEM MODELS 10-470-U,V

FIG.	PART	QUANTITY	PER	ASSE	EME	BLY		_	1
INDEX	NUMBER	12345 DESCRIPTION CDEFGH.	JKL	M N	PR	S	Ū	<u></u>	
66-1	631684	① Gear Assembly, Fuel Pump Drive					1	1	
-2	539634	① . Plug, Fuel Pump Gear			1		1	1	
-3	631683	Coupling, Fuel Pump					1	1	
-4	534941	Gasket, Adapter-to-Crankcase		1 1 1			1		
-4	631685	Gasket, Adapter-to-Crankcase						1	
-5	2473	Washer, Plain	11				4		
-5	530181	Washer, Plain		1 1 1	1			2	
-6	MS35338-45	Washer, Lock		1 1 1	- 1		4	Z	
-7	2439	Nut, Plain	11				4	2	
	639261A3	Fuel Injection Assembly, Complete					1		
	639185A2	Fuel Injection Assembly, Complete			- [_	11	
-8	638154-9A20				-		1		
-8	638154-3A2	① . Fuel Pump & Vapor Separator Assembly] [- 1			11	
		* * * *							
-9	631764	Shroud Assembly, Fuel Pump					1		
-9	640027	Shroud Assembly, Fuel Pump						1	
-10	626879-1	Grommet, Fuel Pump Shroud		1 1 1			3	4	
-11	537911	Nut, Tinnerman, Type J			- 1		4		**
-11	534337	Nut, Tinnerman, Type J			-			4	
-12	AN526-1024-4	4 Screw, Sheet Metal					4	4	
	630074A1	. Throttle and Control Assembly					1	1	
	632885-2A1	. Throttle and Control Assembly			Į.			1	
-13	630069A1	Throttle Assembly					1	ĺ .	
-13	633143A1	Throttle Assembly (for detail parts see Fig. 68)	-					1	1
-14	629904-2A1	Control Assembly, Complete	1 1				1	_	.

FIG.	PART	T				UA										ИВI			
INDEX	NUMBER		12345 DESCRIPTION	C	D	E	F	G	Н	J	K	1	N	N	Р	R	S	U	V
66-14	632916-2A2		Control Assembly, Complete																1
			ATTACHING PARTS																
-15	501867		Washer, Tab															3	
-16	537629		Screw, 1/4 - 20 x 21/32 Inch Long															3	3
			* * *										1						
	632558A1	_	Link Rod Assembly															1	1
4.7	625539A1	(2)	Link Rod Assembly									١						1	,
-17	632558	•	Rod & Link Assembly	١														1	1
-17 10	625539	(2)	Rod & Link Assembly								}			ŀ				1	1
-18 -19	626634 632557		Spring, Compression															1. 1	i
-19 -19	625542	മ	Rod End, Special															1	
-20	MS21044N3	\odot	Nut, Elastic Stop											Ì				1	1
-21	625327-2		. Washer, Wave												1			2	2
-22	537690		Washer, Plain		1			ľ											2
-23	2500		Pin, Cotter											1					2
20	627544A1		. Shroud Assembly, Metering Unit, Complete															1	
-24	627544		. Shroud Assembly, Bottom									l						1	,
-25	627545		Shroud Assembly, Cover															1	
-24	633195		Shroud Assembly, Bottom																1
-25	633198		Shroud Assembly, Cover									1							1
-26	626879-1		Grommet																2
-27	537911		Nut, Tinnerman, Type J																2
-28	AN526-1024-4	ļ	Screw, Sheet Metal																2
-29	626891		Grommet, Rubber															, ,	2
-30	631427A15		. Valve Assembly, Fuel Manifold									-						1	
30	631351-10A3		. Valve Assembly, Fuel Manifold											1					1
			(for detail parts see Figure 72)					1											
-31	635158-15.00		. Hose Assembly, Flexible, 1/4 ID x 15 Inch Long .															1	
-31	635158-16.00		. Hose Assembly, Flexible, 1/4 ID x 16 Inch Long .																1
-32	635158-17.00		. Hose Assembly, Flexible, 1/4 ID x 17 Inch Long .			İ									1			1	1
-32	635158-18.00		Hose Assembly, Flexible, 1/4 ID x 18 Inch Long.															1	1
-33	635158-40.00	6	. Hose Assembly, Flexible, 1/4 ID x 40 Inch Long .	1														6	6
-34		9	Nozzle Assembly, Fuel Injector															2	
-35	628154		Tube Assembly, Fuel Discharge No. 1 & 6 Tube Assembly, Fuel Discharge No. 2 & 5			1												2	
-35	628153		Tube Assembly, Fuel Discharge No. 3 & 4															2	2
-35 -36	628152 641701		Bracket, Fuel Discharge Tubes, 1-3-5 Side			1			Ì									1	1
-37	628295		Bracket, Fuel Discharge Tubes, 2-4-6 Side									-			-			1	1
-38	626577-2		Clamp, Fuel Discharge		İ										1	ŀ		6	6
-39	625302-16.00		Duct, Flexible 1 Inch ID x 16 Inch Long			١.			ľ						1			2	2
-40	AN737RM38		Clamp, Flexible Duct															2	
70			ownip, Florible Duck T.T.T.T.T.T.T.T.T.T.T.T.T.T.T.T.T.T.T.																
NOTES	·-			I	İ	l	I	j	l	ı	ı	i	ł	ļ	l	1		, 1	

- ① See Figure 71 for old style fuel pump and associated parts.
- ② This link rod assembly is to be used only with levers with no bushings. See Figures 69 and 75.
- 3 Check old nozzle on engine for nozzle size, stamped on hex, and order the complete nozzle part number (ie 627335D12C).

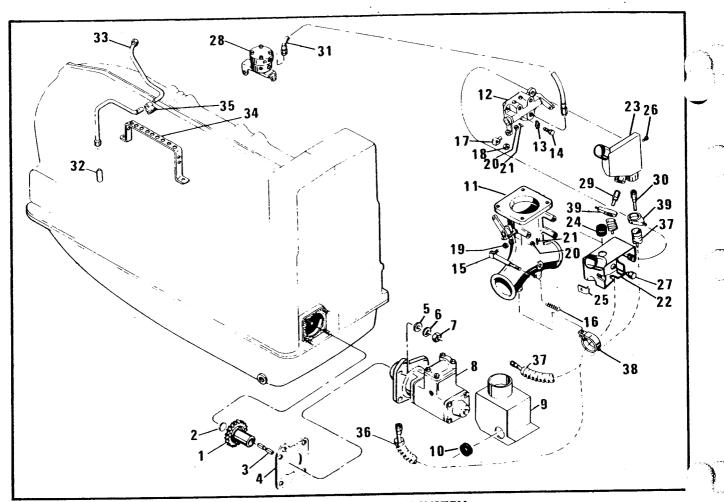


FIGURE 67 - FUEL INJECTION SYSTEM MODELS 10-470-D,E,G,P,R

FIG.	PART	QUANTITY PER ASSEMBLY	
INDEX	NUMBER	12345 DESCRIPTION CDEFGHJKLMNPRSUV	}
67-1	631684	① Gear Assembly, Fuel Pump Drive	
-2	539634	① Plug, Fuel Pump Gear	
-3	631683	Coupling, Fuel Pump	
-4	534941	Gasket, Adapter-to-Crankcase	l
-5	2473	Washer, Plain	100
-6	MS35338-45	Washer, Lock	
-7	2439	Nut. Plain	فننة
	639257A5	Fuel Injection Assembly, Complete	
	639258A3	Fuel Injection Assembly, Complete	
-8	638154-9A2	① . Fuel Pump & Vapor Separator Assembly	
		* * * *	
-9	631764	Shroud Assembly, Fuel Pump 1 1 1 1 1 1 1 1	
-9	639266	Shroud Assembly, Fuel Pump	خديم
-10	626879-1	Grommet, Fuel Fump Silvoud '	
	627315A1	Throttle and Control Assembly	
	627315A2	Infottle and Control Assembly	
-11	627326A1	. Throttle and Lever Assembly	
-11	627326A2	Intottie and Level Assembly	1
		(for details see Figure 69)	F.
-12	625219-2A2	Control Assembly, Complete	1
-12	625219-2A3	Control Assembly, Complete	J .

	FIG.	PART NUMBER		12245		DEC!	CD IF	ЭТІЛ	NI .			\top				NT						SS					
L		"TOWIDE!		12345	L		CRIP						ᄖ	ν	니	F	الن	117	14	41	+N	N	P	∟R	S	Ш	시
							ATTA						1.													İ	
	67-13	501867		Washer, Ta									3		3										١		ı
	-14	537629		Screw									3	3	3	3	3						3	3			
								* *																			
		632558A1	_	Link Rod										٠,	1								1	1			
		625539A1	(2)	Link Rod										- 1	1						1		1		ļ		
	-15	632558	_	Rod and											٠,		- 1							1	Ì		
	-15	625539	(2)	Rod and										1	1		1				1		1]		- 1	-
	-16	626634		Spring, (1								1	1			ı
	-17	632557		Rod End										·	1		1						!	•		ŀ	١
	-17	625542		Rod End										٠,	1		- 1						1	1			- 1
	-18	MS21044103		Nut, Elas											1		ı						1	1		- 1	ı
	-19	625327-2		Washer, Wa									2	<u> </u>	2	2							2	2			
	-20	537690		Washer, Pla									2	2 2	4	2							2	2			
	-21	2500		Pin, Cotter									2		4	2							2	2			
		627544A1		. Shroud Asse		• •		•		•			- 1	١,	.			1					,	١, ١		ļ	
	20	627713A1		. Shroud Asse									1	.	'	1							1	1			
	-22	627544		Shroud Ass									'	' .	,	1							1	1			ļ
	-22	627713		Shroud Ass									1		'	'							'	'			١
	-23 -23	627545 627734		Shroud Ass									'	'	.	1							1	1			-
	-23 -24	626879-1		Shroud Ass									2	,	2								2	2			- 1
	-2 4 -25	537911													1			ŀ					1	1		}	-
	-26	AN526-1024.4		Nut, Tinne									2		1	1							1	1			-
	-20 -27	626891		Grommet,										- [2	- 1	2						2	2			- 1
٠.,	-28	631427A15		. Valve Assem										1				Ì					1				
	-20	031727A13		(for detail p	-					• • • •			ı	1	١.		1	-					'	' '			
	-29	635158-15.00		. Hose Assemi						5 Inc	h Long	.	1.	1	1	- [.	ı	-					1	1			
	-30	635158-17.00		. Hose Assemi									- 1	i	١.		1						Ι'	'			
	-30	635158-13.00		. Hose Assemi									-	٠,	1	- -	ıl						1	1			
	-31	635158-40.00		. Hose Assemi									- -	1	'								•				
	-31	635158-32.00		. Hose Assemi									١	- 1	1	- -	П		1				1	1			
	-32	627335D12	3	. Nozzle Asser									1	- 1	6	1								6			
	-33	628154		. Tube Assem										2	2								12	2			
	-33	628153		. Tube Assemi									Γ	2	2		2			1		1	2				1
	-33	628152		. Tube Assemi										2 2	2		2			1		1	2				
	-34	626486		Bracket, Fuel I										2	2		2				1	-	2				
	-35	626577-2		Clamp, Fuel D									-	6	6		6		1				6	6			
· .	-36	625302-16.00		Duct, Flexible										2	1	· 24].	1						:1	1			.
	-37	625302-12.00		Duct, Flexible,	, 11	Inch	ID x	12 In	ch Lo	ong .					1		1						1	1			
	-38	AN737RM38		Clamp, Flexibl	le D	Juct .								2	1		1						1	1			
	-39	628264		Clamp, Hose.		. .								١	1		1						1	1			- 1
												1	. }	.	١							1:					
												ł	-			- 1										Ì	- [
												- 1	Ì			- 1		1									
)												J			1							1		-			
,												1				- ['					- 1
N	OTES:											ŀ	ı	ŀ	ı	. 1	ļ	I	Í	١	ţ	1	I	ı	1	ļ	1

① See Figure 71 for old style fuel pump and associated parts.

² This link rod assembly is to be used only with levers with no bushings. See Figures 69 and 75.

D Check old nozzle on engine for nozzle size, stamped on hex, and order the complete nozzle parts number (ie 627335D12C).

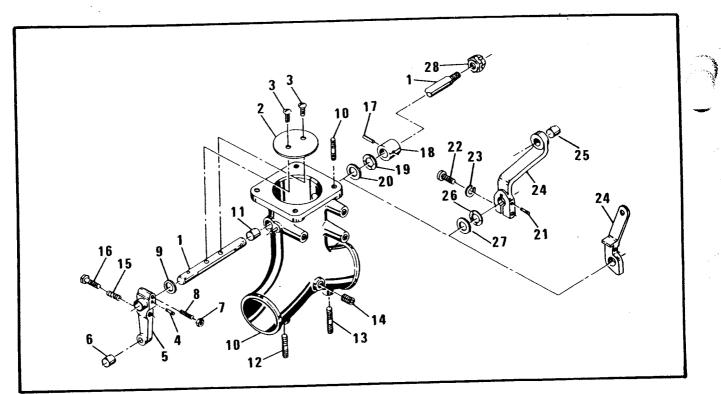


FIGURE 68 - THROTTLE AND LEVER ASSEMBLY MODELS 10-470-C,D,E,F,G,H,J,K,L,M,N,P,R,S,U,V

		WIU								, E) E E		۸۵	e E	MP			\neg	
FIG.	PART				<u>uυ</u>	Ar	<u> </u>		<u> </u>		`	<u>.т.</u>	SE.	VID.	<u> </u>	.	ᆏ		
INDEX	NUMBER	12345	DESCRIPTION		C	DΠ	<u> </u>	10	<u> </u>			L	M T	4	, T r	49	U	î x î	
68-	625259A1	Throttle and	Lever Assembly						r	rf								1	1
00-	626791A1	Throttle and	Lever Assembly		rt		-1	1	- In				- 1		١		1		
	627326A1	Throttle and	l ever Assembly					-	اي	1				١,	f	f			ĺ
	627326A2	Throttle and	Lever Assembly				rf	ľ	'			rf			۱,	'			
	627326A3	Throttle and	Lever Assembly			- 1		rf	-		1	''	- 1		1	١			1
	639766A1	Throttle and	Lever Assembly				- '	"	1	1	rf		.		1			'	
	628429A1	Throttle and	Lever Assembly				- 1	- 1	1	1	1			rf			-		١
	628775A1	Throttle and	Lever Assembly				- 1						rf			1	-		1
	628861A1	Throttle and	Lever Assembly		1		- 1			1				1	Ì	h	rf		١
	629397A1	Throttle and	Lever Assembly				١	- 1		١				١	١		rf	i	1
	630069A1	Throttle and	Lever Assembly				- 1	-						-	1	١	ı	rf.	
	633143A1	Throttle and	Lever Assembly		ı				-	1	1	1	1	١				1	1
-1	625454	. Shaft-Air T	hrottle		1,	1	,	1	1	۱ ۱	'	1	1	1	1	1	1	1	
-1	625600		hrottle		1	'	'	٠,	•	`		ľ					1	1	1
-1	631819	. Shaft-Air T														-	1	1	1
-1	630124	. Shaft-Air T	hrottle		1				- 1	1	1				- 1				
-2	539941	. Plate-Air T	hrottle		1	1	1	1	1				1	1	1	1	1 1	1	
-2	625601	. Plate-Air T	hrottle		١.	'	'				1				- 1	1	.		1
			ATTACHING	PARTS				١	2	٦,	, ,	,	2	2	2	2	2 2	ء ا د	
-3	539942	. Screw-Thro	ATTACHING ottle Plate		Z	2	2	Z	4	4	2	12	1	-	-	-	-		1
			* * * or, Lever ottle Control	*	١,	١,	1	1	,	,	. 1 1	1	1	1	1	1	111	1 1	
-4	626813	. Pin-Tubula	ır, Lever		1;	1	1	1		1	1	1	1	1	i	1			1
-5	632555-44	① . Lever-Thro	ottle Control		'	1	'	١.		1	' '	Ι.	'			Ť	1		
-5	632555-23	(1) Lever-Ihro	nttle Control				1]	1 1	- 1	1	- 1	1	1	1 1		1 14	1 1 1	
-5	632556	① . Lever-Thro	ottle Control		1	1	1	1	1	1	1 1	1 1	1	1	1	1	1	•	1
-6	632554-2	. Bushing			1,		li	1	1	i	i 1	1	1	1	1	1			
-7	13XX18130	. Nut, 8 - 32	ottle Control		1	1	li	li	1	\mathbf{i}	1 1	1 1	1	1	1	1	_		Ī
-8	AN565E8H16	. Screw, Set			1'	1'	1'	١,	١.	.• i	٠,١,٠		1 '	1	'	•		-	•

ſ	FIG.	PART				υ,										1BI			
	INDEX	NUMBER	12345 DESCRIPTION	\mathbf{T}	ĮD	E	F	G	H	IJ	ĮΚ	L					S	ļ	٧
_	68-9	625457	. Washer, Plain		1	1	1	1	1	1	1	1	1	1	1	1		1	1
_	-9	625457-1	. Washer, Plain			1				1							1		11
	-10	626226A1	. Body Assembly - Air	1					1	1									
	-10	626234A1	. Body Assembly - Air	- 1 -	1	1		1				1	İ		1	1		1	1
	-10	625735A1	. Body Assembly - Air		1	'		'				'	1		'			ı	'
	-10	626735A2	. Body Assembly - Air	•			1						'			İ			
	-10	639437	② . Body Assembly - Air				'				1					!			ıl
	-10	628382A1									ľ			1					
	-10	628528A1													İ		1		
	-10	629324A1	. Body Assembly - Air		2	2	2	2	2			2	2	2	2	2	2	2	2
	-11	630455	† Stud - 1/4 x 1-1/4 Inch Long		2	2		2				2	2		2	2		2	2
	-12 -12	401893 402711	t Stud - 1/4-20 x 1/4-28 x 7/8 In. Lg							1						•	2		
	-13	628981	† Stud - 1/4-20 x 1/4-28 x 1-5/16 ln. Lg										2		l				
	-14	AN932-2	. Plug - Manifold Pressure Boss		1	1		1				1	1	l	1	1	1	1	
	-15	626634	. Spring - Idle Adjusting		1	1	1	1	1	1	1	1	1		1		1	1	1
	-16	639479	. Screw - Idle Adjusting		1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
	-17	626813	. Pin - Tubular, Collar		1				1	1	1			1				1	1
	-18	625238	. Collar - Throttle Shaft		1	1			1	1	1			1				1	1
	-19	625327-1	. Washer - Wave				1		1	1	1			1	ŀ		1	1	1
	-20	625457	. Washer - Plain				1		1	1	1			1			1	1	
	-21	626813	. Pin - Tubular, Throttle Lever		1	1	1	1	1	1	1	1	1	1	1	1	1		
	-22	AN501-10-10	. Screw - Throttle Lever		1	1	Ì	1					1		1	1			
	-22	AN501-10-14	. Screw - Throttle Lever						1	1	1								
	-23	13XX-260	. Lockwasher - Throttle Lever		1	1		1	1	1	1		1	1		1			
	-24	626910	Lever - Throttle Shaft		,			İ	ľ	1	ľ				1	1			
_	-24	632555-32	① . Lever - Throttle Shaft		1	1	1.				1			1					
	-24	632555-33	① Lever - Throttle Shaft			١.	1	١,							1	١,			
	-24	632555-48	① Lever - Throttle Shaft			'	1	1					1		'	'			
	-24	632555-47	① . Lever - Throttle Shaft										'			1	1		
	-24	632555-31	① Lever - Throttle Shaft					1				1				l	'		
	-24	632555-25	① . Lever - Throttle Shaft	1	.	ı 1	١١،	1			l	1	1	1	1	1	1	1	1
	-25	632554-1	. Bushing			1 1		1				1	1			li	1		
	-26	625327-1	. Washer - Wave					1					1			1			
	-27	625457	. Nut-Throttle Shaft	- 1		• '		'		.		'	'		'				1
	-28	2457	. Mate Mattle Share																
													1		Ì				
				-								İ	Ì						
)							Ì	1							1				
/				1															
ì										1									
!																		1	
	OTEC.			ł	Ì	ı	İ	ı	1	ı	١	1	ı	i	I	ţ	l	1	l

① These levers are a new style which incorporate harden bushings. If replacing old style levers with no bushings, it will be necessary to order, in addition to new levers a new link rod assembly. See appropriate application Figures 60 thru 67.

⁾ If replacing old style throttle body, which has cast mount legs, it will be necessary to order, in addition to new throttle assembly, a 639410 bracket, a 639411 bracket and 4 each 530346 bolts.

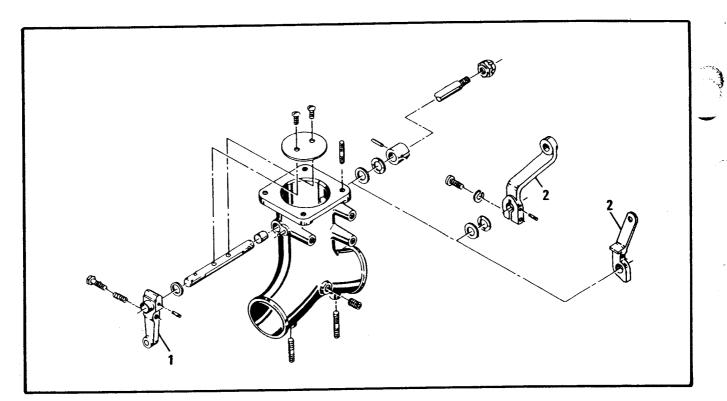


FIGURE 69 - THROTTLE LEVERS (OLD STYLE)
MODELS 10-470-C,D,E,F,G,H,J,K,L,M,N,P,R,S,U,V

FIG.	PART	Т							 	T							EF								7	
INDEX	NUMBER		123	45	DES	CRIP	TION	<u> </u>	 _	C	D	E	F	G	Н	J	K	L	М	N	Р	R	S	יוט	Д	
69-1 -1 -1 -2 -2 -2 -2 -2	625228 629329 629871 627809 629418 628095 628914 631818	000000	Lever, Lever, Lever, Lever, Lever	, Throttle , Throttle , Throttle , Throttle , Throttle , Throttle , Throttle	Control Control Shaft Shaft Shaft Shaft Shaft	ol			 		1	1	1	1	1	1	-	1	1	4==	1			1		
																								يشدها والمنازعة والمساوي والمنازورية والمراومة		
																										New Year

¹⁾ These are old style levers which are no longer available. For replacement order new lever found in Figure 68 and a new rod assembly. See appropriate application, Figures 60 thru 67.

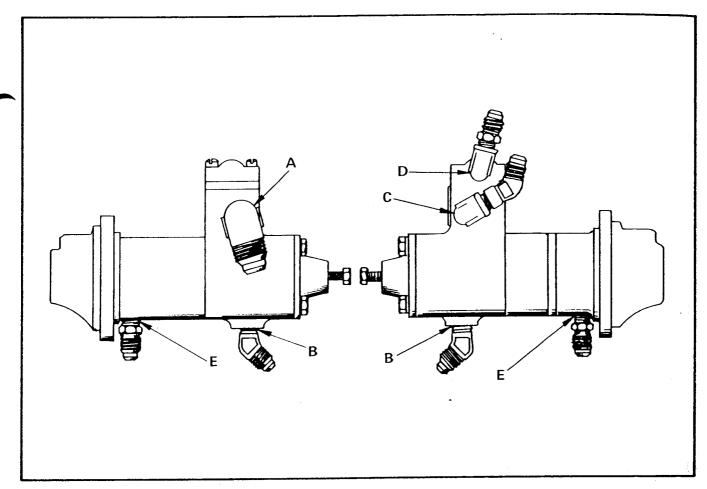


FIGURE 70 - FUEL PUMP AND VAPOR SEPARATOR FITTING LOCATIONS(NEW STYLE) MODELS 10-470-C,D,E,F,G,H,J,K,L,M,N,P,R,S,U,V

	Fuel Pump & Vapor Sep. Number	INLET Fitting "A" Number	OUTLET Fitting "B" Number	MIXTURE RETURN Fitting "C" Number	VAPOR RETURN Fitting "D" Number	SEAL DRAIN Fitting "E" Number
10-470-C, D, E, F, G, H, J, K, N, P, R	638154	632017 AN832-6B	628437	628478	628476	
10-470-L	638154	632017 630065	628437	628478	627119 628476	
IO-470-M	638154	632017 637286	628436	628478	AN816-6-2 627119	
IO-470-S	638154	628475	628436	628478	628476	
10-470-U	638154	632017 AN823-6B	627119 628438	628478	628476	
IO-470-V	638154	632017	628436	628478	628476	628438

See Figure 71 for old style pump.

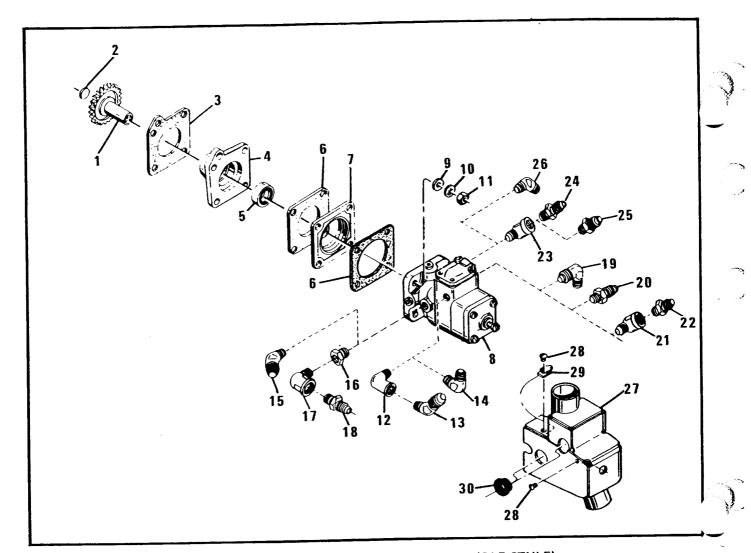


FIGURE 71 - FUEL PUMP ASSEMBLY, COMPLETE (OLD STYLE)
MODELS 10-470-C,D,E,F,G,H,J,K,L,M,N,P,R,S,U

FIG.	PART			Q	UA	N.	TI	ŢΥ	P	EF	₹	A	SSI	EM	ВІ	_Y			
INDEX	NUMBER	12345 DESCRIPTION	C	D	Ε	F	G	Н	J	K	L	M	N	P	R	S	U	丒	
71-1 -2 -3 -4	534995 539634 534941 627518	Gear Assembly, Fuel Pump Plug, Expanison Gasket, Fuel Pump to Crankcase Adapter Assembly, Fuel Pump Seal, Oil	1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	· Security	
-5 -6 -7 -8	534956 MS9137-01 626839 638156	Gasket, Adapter to Fuel Pump Insulator, Fuel Pump Tell Pump & Vapor Separator Assy, Complete	1	1 1 1	1 1	1 1 1	1 1 1	1 1 1	1 1	1	1 1 1	1 1 1	1 1	1	1 1	1 1 1	1 1 1		
-9 -10 -11	2473 MS35338-45 2439	ATTACHING PARTS Washer, Plain Washer, Lock Nut, Plain, Hex	14	4	14	1 **	7	4 4	7	1 7	ויד ו	4 4 4	7	,	٠.	4 4	l	No.)
-12 -13 -13 -14 -15	632017 AN823-6B 637286 628475 629267	* * * * Elbow, 90 Degree	'	'	1 1	1 1 1	1 1 1	1	1 1	1 1 1 1		1	1	1	1	1	1)

FIG.	PART													ΕN			
NDEX	NUMBER	12345 DESCRIPTION	C	D	E	F	G	H	J	K	L	M	N	P	R	S	U
71-15	630089	. Elbow, 45 Degree	1				l					1				1	
-16	X12143	. Bushing, Reducing							İ		1		1			ł	1
-17	627119	. Elbow, 90 Degree											1				1
-18	628438	. Fitting, Connector									1		1		l		1
-19	628478	. Elbow, 90 Degree	1	1	1	1	1	1.	1	1	1	1	1	1	1	1	1
-20	628438	. Fitting, Connector									1						
-21	627119	. Elbow, 90 Degree			1									ĺ			
-22	AN816-4B	. Nipple			1			l	}								
-23	627119	. Elbow, 90 Degree										1	1				
-24	628438	. Fitting, Connector							ł				1				
-25	AN816-6-2	. Nipple					١.					1					
-26	628476	. Elbow, 45 Degree					1						1		1		
-27	639268	. Shroud Assembly, Fuel Pump	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
		ATTACHING PARTS															
-28	AN526-1024-4	. Screw, Sheet Metal	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4
-29	534337	. Nut, Tinnerman, Type J	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4
		* * *									1		ŀ				
-30	626879-1	. Grommet	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
												İ					
			1														
				ľ							İ						- 1
									ļ								
			l														
											ŀ						- 1
			l														
																	ł
			l														
																ł	- 1
			l												l		
																	- 1
																- [
				,										ļ			
															ļ		
															ļ		
			ı				1	.			l			ì	ı	- 1	
				l I	. 1	1				Į.		ļ		- 1	ŀ	ı	ł

[&]quot;OTE:

This fuel pump is no longer available. For replacement order appropriate pump (found in Figures 60 thru 67) and a service kit P/N EQ6537.

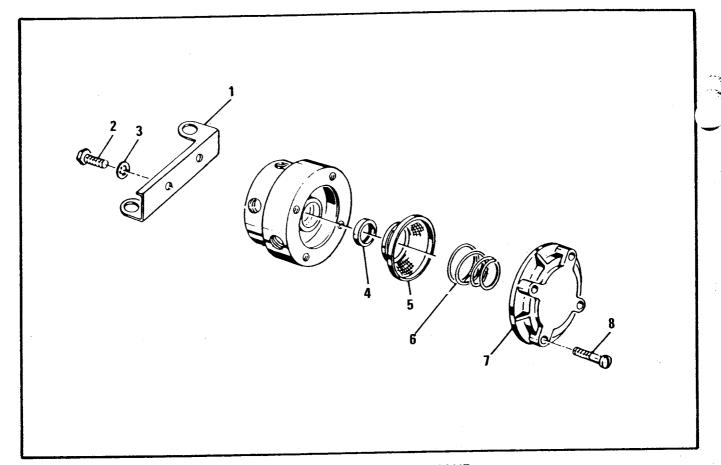


FIGURE 72 - FUEL MANIFOLD VALVE MODELS 10-470-C,D,E,F,G,H,J,K,L,M,N,P,R,S,U

FIG.	PART			1				.IT			EF			SSI				_		7
INDEX	NUMBER	12345	DESCRIPTION	C	D	E	E	G	Н	J	K		М	N	Р	R	S	Ш	-	P
72-	631427A15	Fuel Manifold	Valve Assembly	. 1	1	1		1	1	1				1	1	1		1		
	631427A16	Fuel Manifold	Valve Assembly	.									1							
	631427A17		Valve Assembly				1										1			
	631427 A 19		Valve Assembly								1									l
	631427-3A2	Fuel Manifold	Valve Assembly	.								1								ĺ
	631351-10A3		Valve Assembly	.			ŀ												1	ĺ
-1	642064				1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	ĺ
		•	ATTACHING PARTS		1											ľ				ĺ
-2	AN500-10-5	Screw		. 2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	
-2 -3	22910	Washer Lock		. 2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	
-3	22310											t t					1			
-4	631330	Seal	* * * *	. 1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	ŀ
-5	626557	^			1 8	1 1			11			1 1	11	, ,	}		, ,	1	1	
-6	627378	Spring		. 1	1	1	1	1	1	1	1	1	1	1	1	1	1	1		ĺ
-6	630184	Spring		.	1	1			1	ı		i							1	
. 7	626553	Cover		. 1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	l "
-			ATTACHING PARTS																	د
8	AN500A8-10	Scrow		. 4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	
-0	ANJOUAU-10	061647	* * * *		1															
																			,	Ì
						1														1


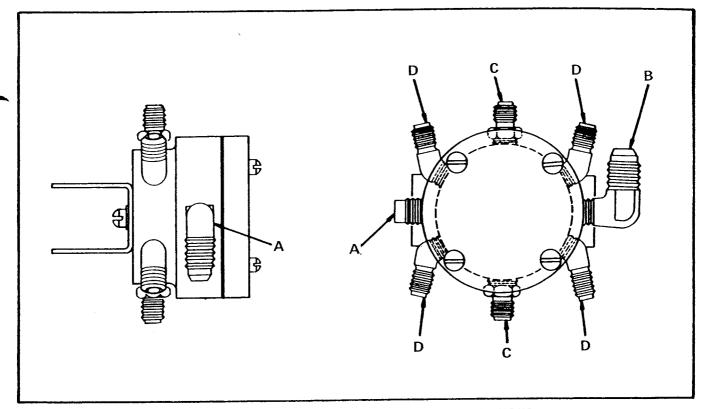


FIGURE 73 - FUEL MANIFOLD VALVE FITTING LOCATIONS MODELS 10-470-C,D,E,F,G,H,J,K,L,M,N,P,R,S,U,V

	Fuel Manifold Assembly Number	Fitting "A" Number	Fitting "B" Number	Fitting "C" Number	Fitting "D" Number
10-470-C,D,E,G,H,J,L,N,P,R,U	631427	Plug 629518-1H	628437	AN780-2	627331
10-470-K	631427	631658	628437	AN780-2	627331
10-470-M	631427	628437	628437	AN780-2	627331
10-470-F,S	631427	631720	628437	AN780-2	627331
10-470-V	631351	631720	628437	AN780-2	627331

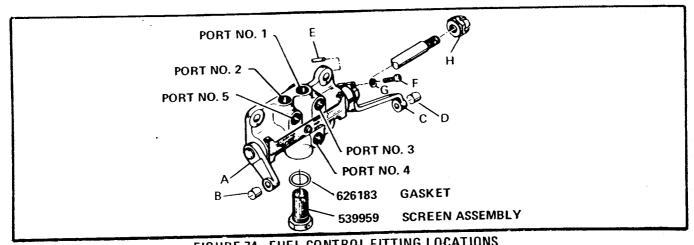

THE PART OF THE PART OF THE	-111	16	11 T A 71	INIC
FIGURE 74 - FUEL CONTROL FITT	HIND	LL	ルしれまれ	J110

			FIGURE.	/4 - FUEL	CUNTRU	L 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	O EOOM				
Model 10-470	C-H-N	D	E-G-P-R	F	J	К	L	M	S	U	V
Control Assy. Fuel Inj. P/N	625219-2	625219-2	625219-2	625219-2	625219-1	625219-1	625219-2	625219-2	629703-2	632904-2	632916-2
Port No. 1 Fitting P/N	627119 628437	627119 628437	627119 628437	630119 628476	627119 628437	627119 628437	630119 627119 628438	X12470 627119 628478	627119 630119 628437	627119 628437	633343 628437
Port No. 2 Fitting P/N	626900 628437	628476	626900 628434	628437	626900 628437	628437 626900	628437	628437	AN932-2	628476	628437
Port No. 3 Fitting P/N	AN932-2	AN932-2	AN932-2	AN932-2	AN932-2	AN932-2	AN932-2	AN932-2	AN932-2	AN932-2	AN932-2
Port No. 4 Fitting P/N	628437	627642 AN932-2 628438	628437	628437	628437	628437	628437	627642 2024 628438	630119 628478	627642 2024 628438	628438 2024 634195
Port No. 5 Fitting P/N	627119 626900 628434	626900 628434	628437	AN932-2	627119 626900 628434	AN932-2	AN932-2	AN932-2	628438	626900 628434	AN932-2
Metering Control Lever "A" No.	0	(i)	0	0	0	① 632555-24	① 632555-24	① 632555-24	① 632555-5	① 632555-24	① 632555-2
Bushing Metering Lever "B" No.	632554-2	632554-2	632554-2	632554-2				632554-2			632554-2
Mixture Control Lever "C" No.	626910	①	① 632555-27	① 632555-46	626910	626910	① 632555-46	① 632555-46	① 632555-28		
Bushing Mixture Lever "D" No.		632554-1	632554-1	632554-1			632554-1	632554-1	632554-1		
Pin Mixture Lever "E" No.	626813	626813	626813	626813	626813	626813	626813	626813	626813-1		
Screw Mixture Lever "F" No.	AN501 -10-14	AN501 -10-10		AN501 -10-10	AN502	AN502 -10-14	A N 5 0 1 - 1 0 - 1 0	AN502 -10-14			
Lockwasher Mixture Lever "G" No.		13XX260		13XX260	13XX260	13XX260	13XX260	13XX260			
Nut Mixture Lever "H" No.										MS21042 -5	MS21042

NOTE: L

¹ These levers are a new style which incorporate harden bushings. If replacing old style levers with no bushings, it will be necessary to order, in addition to new levers a new link rod assembly. See appropriate application, Figures 60 thru 67.

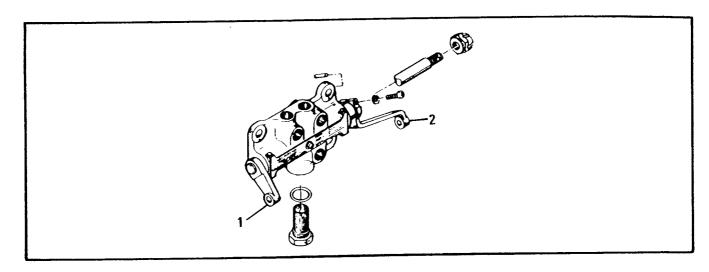


FIGURE 75 - FUEL CONTROL LEVERS(OLD STYLE)
MODELS 10-470-C,D,E,F,G,H,J,K,L,M,N,P,R,S,U,V

FIG. PART								Ϋ́	F	PEF	 A	SS	ΕN	IBL	Y	
INDEX NUMBER	12345	DESCRIPTION	C													UV
75-1 627590 -1 629111 -1 629351 -2 539989 -2 629326 -2 632553-2	① Lever, Mixturn ① Lever, Mixturn ① Lever, Mixturn ① Lever, Meterin ① Lever, Meterin	e Control	1	1	1	1	1			1	1		1	1	1	

NOTE:

¹ These are old style levers which are no longer available. For replacement order new lever found in Figure 74 and new link rod assembly. See appropriate application, Figures 60 thru 67.

.

SECTION III

OVERSIZE AND UNDERSIZE PARTS LIST

PART NO.	NAME	DESCRIPTION	PART NO.	NAME	DESCRIPTION
25008P003	Stud	.003" OS on PD	401816P003	Stud	.003" OS on PD
	Stud	.006" OS on PD	401816P007	Stud	.007" OS on PD
	Stud	.009" OS on PD	401816P012	Stud	.012" OS on PD
200001009	Stud	0.000 0.000	,0,0,0,0		
350998P0015	Bushing-C/wat	.0015" OS on OD	401824P003	Stud	.003" OS on PD
350998P003	Bushing-C/wgt	.003" OS on OD	401824P007	Stud	.007" OS on PD
350998P005	Bushing-C/wgt	.005" OS on OD	401824P012	Stud	.012" OS on PD
3303301 003	Busining O/Mgt	,000 00 077 00			
35966P005	Insert	.005" OS on OD	401830P003	Stud	.003" OS on PD
35966P010	Insert	.010" OS on OD	401830P007	Stud	.007" OS on PD
35966P015	Insert	.015" OS on OD	401830P012	Stud	.012" OS on PD
35966P020	Insert	.020" OS on OD			
35966P030	Insert	.030" OS on OD	401836P003	Stud	.003" OS on PD
333007 030	1113011	.000 000.00	401836P007	Stud	.007" OS on PD
35967P005	Insert	.005" OS on OD	401836P012	Stud	.012" OS on PD
35967P010	Insert	.010" OS on OD			
35967P015	Insert	.015" OS on OD	401841P003	Stud	.003" OS on PD
		.020" OS on OD	401841P007	Stud	.007" OS on PD
35967P020	Insert	.030" OS on OD	401841P012	Stud	.012" OS on PD
35967P030	Insert	.030 03 01 00	4010171012	Otaa	.0.2 00 0 2
401798P003	Stud	.003" OS on PD	401852P003	Stud	.003" OS on PD
401798P003 401798P007	Stud	.003" OS on PD	401852P007	Stud	.007" OS on PD
401798P007 401798P012		.012" OS on PD	401852P012	Stud	.012" OS on PD
401/982012	Stud	.012 03 0111 0	,01002.012	0144	
401804P003	Stud	.003" OS on PD	401860P003	Stud	.003" OS on PD
401804P007	Stud	.007" OS on PD	401860P007	Stud	.007" OS on PD
401804P012	Stud	.012" OS on PD	401860P012	Stud	.012" OS on PD
4010041 012	Stud	,012 00 011 12			
401806P003	Stud	.003" OS on PD	401861P003	Stud	.003" OS on PD
401804P007	Stud	.007" OS on PD	401861P007	Stud	.007" OS on PD
401804P012	Stud	.012" OS on PD	401861P012	Stud	.012" OS on PD
401808P003	Stud	.003" OS on PD	401870P003	Stud	.003" OS on PD
401808P007	Stud	.007" OS on PD	401870P007	Stud	.007" OS on PD
401808P012	Stud	.012" OS on PD	401870P012	Stud	.012" OS on PD
401809P003	Stud	.003" OS on PD	401881P003	Stud	.003" OS on PD
401809P007	Stud	.007" OS on PD	401881P007	Stud	.007" OS on PD
401809P012	Stud	.012" OS on PD	401881P012	Stud	.012" OS on PD
401814P003	Stud	.003" OS on PD	401885P003	Stud	.003" OS on PD
401814P007	Stud	.007" OS on PD	401885P007	Stud	.007" OS on PD
401814P012	Stud	.012" OS on PD	401885P012	Stud	.012" OS on PD
			İ		
			•		

PART NO.	NAME	DESCRIPTION	PART NO.	NAME	DESCRIPTION
401886P003	Stud	.003" OS on PD	402151P003	Stud	.003" OS on PD
401886P007	Stud	.003 OS on PD	402151P007	Stud	.007" OS on PD
		.012" OS on PD	402151P012	Stud	.012" OS on PD
401886P012	Stud	.012 05 011 PD	4021311 012	Otaa	.012 00 0111 0
401893P003	Stud	.003" OS on PD	402153P003	Stud	.003" OS on PD
401893P007	Stud	.007" OS on PD	402153P007	Stud	.007" OS on PD
401893P012	Stud	.012" OS on PD	402153P012	Stud	.012" OS on PD
401895P003	Stud	.003" OS on PD	402162P003	Stud	.003" OS on PD
401895P007	Stud	.007" OS on PD	402162P007	Stud	.007" OS on PD
401895P012	Stud	.012" OS on PD	402162P012	Stud	.012" OS on PD
4010956012	Stuu	.012 03 011 10			
401899P003	Stud	.003" OS on PD	402711P003	Stud	.003" OS on PD
401899P007	Stud	.007" OS on PD	402711P007	Stud	.007" OS on PD
401899P012	Stud	.012" OS on PD	402711P012	Stud	.012" OS on PD
401000000	Carrel	.003" OS on PD	530383M010	Bearing-C/rod	.010" US on ID
401963P003	Stud	.003 OS 011 PD .007" OS on PD	000000111010	Boaring of roa	.0.0 00 011 10
401963P007	Stud		534895P015	Piston	.015" OS on OD
401963P012	Stud	.012" OS on PD	5546951015	1 15(01)	.015 03 01 00
401965P003	Stud	.003" OS on PD	535661P020	Camshaft	.020" OS on OD
401965P007	Stud	.007" OS on PD			
401965P012	Stud	.007 OS on PD	536563P005	Dowel-C/shaft	.005" OS on OD
4019051012	Stud	.012 00 01110		·	
401971P003	Stud	.003" OS on PD	537341P015	Spring - Clutch	.015" US on ID
401971P007	Stud	.007" OS on PD			
401971P012	Stud	.012" OS on PD	537883P015	Piston	.015" OS on OD
401977P003	Stud	.003" OS on PD	538404P003	Stud	.003" OS on PD
401977P007	Stud	.007" OS on PD	538404P006	Stud	.006" OS on PD
401977P007 401977P012		.007 OS 01 PD	538404P009	Stud	.009" OS on PD
4019//2012	Stud	.012 05 011 PD	330-10-11 000	Otad	.000 0001112
402042P003	Stud	.003" OS on PD	539467P005	Pin - Piston	.005" OS on OD
402042P007	Stud	.007" OS on PD		4	
	Stud	.012" OS on PD	539800M015	Spring - Clutch	.015" US on ID
402048P003	Stud	.003" OS on PD	539814P015	Piston	.015" OS on OD
402048P007		.003 03 01 1 D	0000111010	1 100017	
402048P012	Stud	.007 OS 01 FD	626739M010	Collar - C/shaft	.010" US on ID
402046P012	Stud	.012 03 011 FD	020/33///010	Conai Cysnart	.010 00 011 12
402056P003	Stud	.003" OS on PD	626992P015	Piston	.015" OS on OD
402056P007	Stud	.007" OS on PD			
402056P012	Stud	.012" OS on PD	627480P005	Ring - Piston	.005" OS on OD
			627480P015	Ring - Piston	.015" OS on OD
402066P003	Stud	.003" OS on PD	,		
402066P007	Stud	.007" OS on PD	627738P015	Piston	.015" OS on OD
402066P012	Stud	.012" OS on PD			
400407000	6.	000// 00 05	628198M010	Collar - C/shaft	.010" US on ID
402127P003	Stud	.003" OS on PD	600001000	Ctual	0037 OC DD
402127P007	Stud	.007" OS on PD	628981P003	Stud	.003" OS on PD
402127P012	Stud	.012" OS on PD	628981P006	Stud	.006" OS on PD
4004000		2004 27 77	628981P009	Stud	.009" OS on PD
402129P003	Stud	.003" OS on PD	COCO 403 40 40	Dearing 0/1 - 6	0107 110 - 15
402129P007	Stud	.007" OS on PD	629848M010	Bearing-C/shaft	.010" US on ID
402129P012	Stud	.012" OS on PD			

PART NO.	NAME	DESCRIPTION	PART NO.	NAME	DESCRIPTION
630591P005	Insert	.005" OS on OD	639568P005	Ring - Piston	.005" OS on OD
630591P010	Insert	.010" OS on OD	639568P015	Ring - Piston	.015" OS on OD
630591P015	Insert	.015" OS on OD			
630591P020	Insert	.020" OS on OD	639573P010	Washer - Thrust	.010" OS on OD
630591P030	Insert	.030" OS on OD	639573P020	Washer - Thrust	.020" OS on OD
			639573P030	Washer - Thrust	.030" OS on OD
630826M010	Bearing - C/rod	.010" US on ID			
	3		639768P005	Ring - Piston	.005" OS on OD
631481P015	Piston	.015" OS on OD	639768P015	Ring - Piston	.015" OS on OD
					_
631496P005	Guide - Valve	.005" OS on OD	640518P015	Piston	.015" OS on OD
631496P010	Guide - Valve	.010" OS on OD			
631496P015	Guide - Valve	.015" OS on OD	641960P005	Guide - Valve	.005" OS on OD
631496P020	Guide - Valve	.020" OS on OD	641960P010	Guide - Valve	.010" OS on OD
631496P030	Guide - Valve	.030" OS on OD	641960P015	Guide - Valve	.015" OS on OD
			641960P020	Guide - Valve	.020" OS on OD
631867P003	Stud	.003" OS on PD	641960P030	Guide - Valve	.030" OS on OD
631867P006	Stud	.006" OS on PD			
631867P009	Stud	.009" OS on PD	642086P005	Ring - Piston	.005" OS on OD
			642086P015	Ring - Piston	.015" OS on OD
632319M010	Bearing-C/shaft	.010" US on ID			
	3		642720M010	Bearing - C/shaft	.010" US on ID
632932P015	Piston	.015" OS on OD		* 1	
633136M010	Bearing-C/shaft	.010" US on ID			
	3				
639565P005	Ring - Piston	.005" OS on OD			
639565P015	Ring - Piston	.015" OS on OD			
	· ·				
639566P005	Ring - Piston	.005" OS on OD			
639566P015	Ring - Piston	.015" OS on OD			
	-				
639567P005	Ring - Piston	.005" OS on OD			•
639567P015	Ring - Piston	.015" OS on OD			

.

SECTION IV

REPAIR SETS AND MATERIALS

PART NUMBER	DESCRIPTION	SIZE	CODE
641543	Thread-Silk	260 Yd. Spool	All
642188	Gasket Paste	1 Oz. Tube	All
536092A1	Gasket Faste Gasket Set - Complete Overhaul	Standard	O-470-A-E-J
536092A1	Gasket Set - Complete Overhaul	Standard	O-470-B-M O-470-D-F-M-U-V
536092A2 536092A3	Gasket Set - Complete Overhaul	Standard	O-470-K-L-R-S-U-V
536092A3 536092A4	Gasket Set - Complete Overhaul	Standard	10-470-J-K
626049A1	Gasket Set - Complete Overhaul	Standard	O-470-G-P 10-470-C-E-G-H-L N-P-R-S
642106	Gasket Set - Top Overhaul	Standard	O-470-A-J 10-470-J-K
642107	Gasket Set - Top Overhaul	Standard	O-470-B-G-K-L-M-P-R-S IO-470-C-D-E-F-G-H-L-M-N S-U-V
642108	② Gasket Set - Top Overhaul	Standard	
639567A9 ③	Ring Set - Single Cylinder	Standard	O-470-A-B-E-J-M-P 1O-470-J-K (534895 & 537883 Piston)
639567A9P005 ^③	Ring Set - Single Cylinder	.005 OS on OD	ŕ
639567A9P015 ③	Ring Set - Single Cylinder	.015 OS on OD	
639567A10 ^③	Ring Set - Single Cylinder	Standard	O-470-K-L-R (626992 piston)
639567A10P005 ³	Ring Set - Single Cylinder	.005 OS on OD	•
639567A10P015	Ring Set - Single Cylinder	.015 OS on OD	
639567A12 ^③	Ring Set - Single Cylinder	Standard	O-470-K-L-R (632932 piston)
639567A12P005 ³	Ring Set - Single Cylinder	.005 OS on OD	
639567A12P015	Ring Set - Single Cylinder	.015 OS on OD	
639566A1 ^③	Ring Set - Single Cylinder	Standard	O-470-G IO-470-C-G-P-R (539814)
639566A1P005 ③	Ring Set - Single Cylinder	.005 OS on OD	
639566A1P015 ③	Ring Set - Single Cylinder	.015 OS on OD	
639565A8 ^③	Ring Set - Single Cylinder	Standard	O-470-R-S-U (640518 & 631481 piston)
639565A8P005 ③	Ring Set - Single Cylinder	.005 OS on OD	•
639565A8P010 ^③	Ring Set - Single Cylinder	.010 OS on OD	
639565A5 ③	Ring Set - Single Cylinder	Standard	10-470-D-E-F-H-L-M-N-S-U-V (627738 Piston)
639565A5P005 ③	Ring Set - Single Cylinder	.005 OS on OD	
639565A5P010 ^③	Ring Set - Single Cylinder	.010 OS on OD	
639723 ④	Ring Set - Single Cylinder	Standard	O-470-J-K-L-M-P 10-470-J-K (534895 & 537883 piston)
639726 ④	Ring Set- Single Cylinder	Standard	O-470-G- 10-470-C-G-P-R (539814 piston)
639734 ④	Ring Set - Single Cylinder	Standard	0-470-K-L-R (626992 piston)
639736 ④	Ring Set - Single Cylinder	Standard	0-470-K-L-R (632932 piston)
639732 ④	Ring Set - Single Cylinder	Standard	O-470-R-S-U IO-470-D44, -V6, -V8, -V9, -V10 (640518 & 631481 piston)
			001401 pistoii <i>j</i>

PART NUMBER	DESCRIPTION	SIZE	CODE
639729 ④	Ring Set - Single Cylinder	Standard	10-470-D, E, F, H, L, M, N, S, U, V (627738 piston)
633136A3 ©©	Bearing Set - Crankshaft	Standard	O-470-A-E-J-K-L-M-R-S-U
633136A3MO10 3 6		.010 US on ID	
642720A1 (36)	Bearing Set - Crankshaft	Standard	O-470-G-P 1O-470-(AII)
642720A1M010 36	Bearing Set - Crankshaft	.010 US on ID	
633136A1 ©0	Bearing Set - Crankshaft	Standard	O-470-A-E-J-K-L-M-R-S-U
633136A1M010 37	Bearing Set - Crankshaft	.010 US on ID	
630464A5 (S)	Bearing Set - Crankshaft	Standard	O-470-G-P IO-470-(All
			except P)
630464A5M010 37	Bearing Set - Crankshaft	.010 US on ID	
630464A6 (5\(\frac{1}{2}\)		Standard	1O-470-P
630464A6M010 32	Bearing Set - Crankshaft	.010 US on ID	
6331 36 A2	Bearing Set - Crankshaft	Standard	O-470-B-M-1N
633136A2M010 32		.010 US on ID	<u>.</u>
537401A1 (5)(8)		Standard	O-470-A-C-E-J-K-L-R
537401A1M010 👀	Bearing Set - Crankshaft	.010 US on ID	
538879A1 (5)(8)		Standard	O-470-B-M-N
538879A1M010 👀	•	.010 US on ID	
627795A1		Standard	O-470-G-P 1O-470-(AII)
627795A1M010	Bearing Set - Crankshaft	.010 US on ID	
626531-1	Enamel - Gold, Engine	1 Quart	All
626531-2	Enamel - Gold, Engine	1 Gallon	All
535011S	Lockwire - 0.040 in dia. steel	1 Lb. Roll	All

This set does not contain intake hoses.

Same as 642107, but includes spirotallic exhaust gasket.

NOTES:
1 This
2 Sam
3 For
4 For
5 This
6 For
7 Thr
8 Flar For use with steel barrel cylinders. See Service Bulletin M74-11 for piston and cylinder applications.

For use with chrome cylinders. See Service Bulletin M78-12 for piston and cylinder applications.

This set does not contain connecting rod bearings.

For use with Phase 3 style crankcase and crankshaft. See Service Bulletin M78-9.

Thrust washer type bearings for use with Phase 2 style crankcase & crankshaft. See Service Bulletin M78-9.

Flange type bearings for use with Phase 1 style crankcase & crankshaft. See Service Bulletin M78-9.

For O-470-G engines with modernized crankshafts. See Service Bulletin M64-20.

SECTION V NUMERICAL PARTS LIST

<u> </u>					1
PART	FIG. &	PART	FIG. & INDEX	PART NUMBER	FIG. & INDEX
NUMBER	INDEX	NUMBER	INDEX	MONBER	INDEX
AN101017	33-07	AN515-8-6	43-36	AN900-14	29-29
AN101217 AN101218	33-07	AN520-416-12	52-48	AN900-15	28-10
	05-46	A14020 470 12	53-22	AN900-18	27-12
AN123860	06-43		55-19		29-12
A N 4 0 0 0 0 0	06-43	AN526-1024-4	45-28	AN900-28	27-51
AN123862	03-18	AN320-1024-4	66-12	,	29-51
	31-41		71-28	AN932-2	27-07
			66-28	, == ==	31-14
A N 4 00005	32-32 05-43		67-26		68-14
AN123865	06-43 06-40	AN530-10-6	38-12		74-
A NI 4 0 0 0 0 0	01-34	AN330-10-0	38-17	AN960-10L	05-28
AN123866	01-34	AN565E8H16	68-08	, , , , , , , , , , , , , , , , , , , ,	06-23
ANO 44		AN6230-26	07-06	AN960-516L	26-19
AN3-4A	60-38	AN737RM38	66-40	AN960-816L	07-24
	62-39	AN737 NIVISO	67-38	AN960C916	31-47
AN316-9R	31-45	AN737TW26	56-16	A110000010	32-38
,	32-36	AN737TW46	55-25	A24814	16-22
AN320-9	31-45	AN7371W46	57-14	A24014	17-22
AN381-3-18	31-48	AN732TW82	54-08	A24815	16-25
AN4-26A	53-30		36-06	A24013	17-25
	55-31	AN75-16	35-15	A36121	20-01
	57-29	AN75A10	36-17	EQ5880	38-
AN4-27A	55-31	AN75A15	34-14	EQ6491	05-
AN4-7A	57-21	AN75A15	52-03	200-31	06-
AN4022-1	38-08		52-03	EQ6537	5 9 -
AN5-10A	33-05	1	53-26	MS122121	16-05
AN5-12A	03-21	AN75A26	52-08	WOTZZTZT	17-05
	04-22	AN75A26 AN75A6	33-10		18-05
AND 10A	04-23	AN75A0	34-09		19-05
AN5-13A	03-20		35-10	MS122122	01-28
	03-21 04-20		36-10	,	02-27
	04-20	AN78-10	07-23		26-12
ANE 14A	03-21	AN780-2	38-20	MS122162	01-28
AN5-14A		AN700-2	73-		02-27
AN5-15A	04-21 03-20	AN805-2	38-05	MS124657	27-14
AND-TOA	04-20	AN816-4B	71-22	MS20073-04-10	27-45
	34-06	AN816-6-2	70-		29-45
	35-06	ANGIOGE	71-25	MS20074-03-03	05-30
AN5-16A	34-05	AN823-6B	70-		06-25
AN5-10A AN5-17A	35-05	AN020 0B	71-13	MS20074-04-03	25-05
ANS-T/A	36-05	AN832-6B	70-		26-05
AN500-10-5	72-02	AN900-10	01-22	MS20074-04-04	25 -03
AN500-10-5 AN500-416-8	05-34	7,11000 10	02-23		26-03
AN300-410-8	06-28		25-11	MS20365-1032A	42-35
AN500A10-4	03-04		26-16	MS20365-1032C	60-39
AN300A10-4	04-04		27-25		62-38
AN500A8-10	72-08		27-33	MS21042-5	74-
AN501-10-10	68-22		29-33	MS21044N3	60 -18
MINOUTTO-10	74-	AN900-12	25-11		61-18
AN501-10-14	68-22	AN900-14	27-21		62-18
ANSU 1-10-14	74-	/	27-25		63-18
AN501-10-8	42-33]	27-29		64-18
AN501-10-8 AN502-10-14	42-33 74-	1	29-21		65-18
AN515-8-6	41-34		29-25		66-20
ANJ 1000	71-04	I '		•	

	PART NUMBER	FIG. &	PART NUMBER	FIG. & INDEX	PART NUMBER	FIG. & INDEX
L	MS21044103	67-18	MS35338-44	55-45	MS35756-8	31-21
	MS21083N4	53-31	1,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	56-06	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	31-44
•	MS21083N8	55-32		56-34		32-16
	MS21333-81	60-37		57-05	1	32-35
	11102100001	62-36		57-20	MS9021-011	09-20
	MS214657	29-14		57-28	MS9021-038	31-04
	MS28741-4-0266	60-29		57-34		32-04
		62-28		61-24	MS9134-01	28-25
	MS28741-4-0300	60-30		63-24	ł	30-22
		62-30		64-24	1	39-05
	MS28741-4-0340	60-28		65-26		40-06
		62-29	MS35338-45	05-18	MS9137-01	58-05
		63-29		06-18		71-06
	MS28741-4-0370	64-29		06-31	M330S208	57-24
	MS29513-010	03-09		06-37	Q9S552-06	27-46
		04-09		16-20		29-46
	MS335338-45	05-23		17-20	Q9T116-07	27-48
	MS35303-36	54-10		31-09		29-48
	MS35333-41	05-40		31-39	Q9T116-218	27-44
	MS35338-42	43-37		32-08		29-44
	MS35338-44	05-11		32-29	WE1017	47-06
		05-33		35-16		48-15
		06-11		39-07	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	49-06
		16-30		40-08	WE365	47-06
		17-30		41-03		49-06
		18-33		42-03	WEEGO	50-06
		19-33		43-03	WE502	48-13
•		21-03		44-03	WE565	48-08 40-16
		22-03		45-03 51-05	MEGGE	49-16 48-07
		22-10		51-05 51-02	WE626	46-07 49-15
		23-03		51-23 52-20	WE630	48-06
		23-11 24-03		52-20 53-40	WEOSO	49-14
		24-03 24-09		53-40	X12143	71-16
		27-09		54-04	X12470	74- 74-
		28-03		55-38	X13041	31-19
		28-17		56-25	7.100.7	32-14
		28-28		58-03	X1473	27-15
		29-03		59-06		29-15
		30-03		60-06	13XX18130	68-07
	*	30-14		61-06	13XX1896	05-55
		30-25		62-06		06-52
		31-39	·	63-06	13XX202B	25-09
		39-03		64-06		26-18
		40-04		65-06		52-43
		51-14		66-06		55-41
		52-35		67-06		56-18
		52-47		71-10		56-22
		53-07	MS35338-46	06-05	13XX260	68-23
		53-21		26-22		74-
		54-22		39-10	13XX299	31-46
		54-37		40-11		32-37
		55-06	MS35756-8	10-08	20087	41-16
		55-20		11-08		43-21
			j		•	

PART NUMBER	FIG. & INDEX	PART NUMBER	FIG. & INDEX	PART NUMBER	FIG. & INDEX
20087	45-20	21007	18-24	2437	23-05
2024	26-13		18-27		23-10
2024	29-07		19-24		24-08
	38-19		19-27		27-01
	74-	21208A1	28-11		28-04
2025	01-25		30-07		28-18
2020	02-25	21213	36-16		28-29
2026	22-07	21247	18-41		29-02
2020	23-07		19-41		30-04
	24-06	21264	41-27		30-15
	24-17	21493	16-34		30-26
20274	25-12		17-34		39-02
20522	16-31	21512	38-07		40-02
20322	17-31	22022	16-33		54-38
	18-34		17-33		55-44
	19-34	22366	07-26		56-33
	21-04	22533	26-19		57-19
	22-04		51-06		57-27
	22-11		51-24		61-25
	23-04		54-05		63-25
	23-12	22535	05-16		64-25
	24-04		06-16		65-27
	24-10	22537	31-33	2439	03-23
	25-04	2265	26-15		04-25
	26-04	22661	34-12		05-19
	27-03		35-13		05-24
	28-02		36-13		06-19
	28-16		37-18		06-33
	29-04		51-19		31-08
	30-02		52-16		32-07
	30-13		53-36	•	33-08
	31-32		54-32		34-08
	51-15		56-31		35-0 9
	52-17		57-22		36-09
	52-36		57-30		37-12
	53-06	2274	07-05		39-06
	53-35	22904	05 -52		40-07
	54-23		06-49		41-02
	55-07	22910	05-29		42-02
	55-46		05-54		43-02
	56-07		06-24]	44-02
	56-35		06-51		45-02
	57-06		28-23	,	51-04
	61-23		30-20		51-22
ŧ	63-23		42-34		52-19
	64-23		72-03		53-39
	65-25	23890	57-33	1	54-03
20527	41-33	24239	03-17		55-39
20655	28-24		04-17		56-26
20000	30-21	2437	05-12		58-02
20720	38-06		06-12		59-05
21007	16-24		21-02		60-07
21007	16-27		22-05		61-07
	17-24		22-09		62-07
	17-24		•		

PART NUMBER	FIG. & INDEX	PART NUMBER	FIG. & INDEX	PART NUMBER	FIG. & INDEX
2439	63-07	2473	40-09	25171	07-11
2439	64-07	2-170	52-05	25302	41-15
	65-07		52-09		43-20
	66-07		52-12		45-19
	67-07		52-21	25312	41-17
	71-11		52-44		43-22
2441	03-19		53-41	25314	41-11
	04-19		53-44		43-16
	05-06		55-42	25316	41-09
	06-06		56-23	05047	43-14
	07-04		58-04	25317	41-08
	07-14		59-07	05040	43-13
	26-21		60-05	25318	41-07
	31-02		61-05	25220	43-12
	32-02		62-05	25320	41-28 43-29
	39-09		63-05		43-29 44-41
0.440	40-10		64-05 65-05	25321	41-29
2443	07-10		66-05	20021	43-30
2457	68-28		67-05		44-42
24609	60-25 62-25		71-05	25328	03-14
2471	05-53	2474	26-23	20020	04-14
2471	06-50	27/7	26-23		06-
	28-22	24764	03-02	25387	41-20
	30-19	21,01	04-02	25388	41-19
2472	28-27	24802	16-11	2555	35-07
- // -	39-04		17-11		36-07
•	40-05		18-13	2794	07-37
	54-33		19-13		06-34
2473	03-13	24835	51-13	2848	27-32
	03-22		52-34	0040	29-32
	04-13		53-08	2849	27-31 29-31
	04-24		54-21 55-05	350998	08-02
	05-17		56-05	330990	09-02
•	05-22 05-41		57-04	352024	41-06
	06-17	2500	60-21	002021	43-11
	06-32	2300	61-21	35966	16-09
	06-38		62-21		17-09
	16-21		63-21		18-10
	17-21		64-21	35967	16-10
	18-30		65-21		17-10
	19-30		66-23		18-11
	25-10		67-21	*	19-11
	26-19	25008	40-16	35971	16-12
	31-10	25102	39-15		17-12
	31-40		40-17		18-15
	32-09	25135	53-37	25070	19-15
	32-30	25164	28-16	35972	20-03
	33-06	05474	54-34	35985	51-01 51-26
	34-07	25171	03-10		51-26 52-23
	35-08		03-24 04-10		52-23 53-42
-	36-08		04-10		54-01
	39-08		04-20		3 7 .01

PART NUMBER	FIG. &	PART NUMBER	FIG. & INDEX	PART NUMBER	FIG. & INDEX
		401005	01-11	501867	63-13
36151J	51-07	401885	01-14	301007	64-13
	52-25		02-04		65-13
	53-14		02-04		66-15
	54-14		02-14		67-13
36151L	52-25		16-07	501868	32-31
	54-14		17-07	301000	37-15
	55-09				52-04
	56-09		26-09		52-51
	57-08		26-11		53-25
36151R	05-49	401886	01-09		55-29
	06-46		02-09		56-18
36219	41-18	401893	02-07		50-16 57-17
	43-23		09-18	E00007	
401506	04-15		18-06	502287	31-18
	33-09		19-06	-00405	32-13
401507	07-15	401893	68-12	520105	16-13
.0.00	07-21	401895	02-11		17-13
	39-11	401899	01-17		18-16
	40-12		02-17		19-16
401753	26-14	401963	01-02	520112	16-04
401763	23-15		02-02		17-04
401798	02-16		27-06		18-04
401804	18-06		28-15		19-04
401004	26-10		29-06	520112-1	18-04
401806	01-10		30-11		19-04
401000	02-10	401965	01-12	522188	08-10
	26-10		02-12		09-10
401808	01-10		31-12	530181	66-05
401000	02-10	401971	52-14	530346	25-08
	09-18	401977	02-19		52-42
401809	02-18	402042	01-03		52-52
401814	01-13		02-03		56-17
401014	01-17	402048	01-03	530367	16-23
	02-13	402056	01-08		16-26
	02-18		02-08		17-23
401816	30-12	402066	01-15		17-26
401824	53-52		01-18	530383	08-14
401830	07-17		02-16		09-15
401836	01-13		07-16	530455	41-10
401841	01-10	402127	31-16		43-15
401041	02-10	.02.12.	32-11	530658	20-02
4010E0	01-07	402129	01-06	531001	03-11
401852	02-07	402720	02-06		03-25
	39-14	402151	01-13		04-11
401000	26-08	702101	02-03	,	04-27
401860	01-15		02-13		16-02
401861	01-13	402153	01-12		17-02
	02-16	402130	02-12		18-02
•	02-16	402162	02-15	,	19-02
	07-19	402702	68-12	531141	07-03
404070		501867	31-27	531178	39-19
401870	01-02	501007	32-22		40-22
404004	02-02		60-13	531378	28-14
401881	02-03		61-13		30-10
401885	01-04		n 1-1.5		30 10

PART NUMBER	FIG. & INDEX	PART NUMBER	FIG. & INDEX	PART NUMBER	FIG. & INDEX
531547	30-24	534610	17-36	534941	64-04
531548	01-05	334010	18-37	00.0	65-04
. 551546	02-05		19-37		66-04
532129	16-16	534625	26-24		67-04
332 123	17-16	534655	10-09		71-03
532200	16-41	00 1000	11-09	534942	05-21
002200	17-41	534685	31-36	534956	58-08
	18-43	00.000	32-26		71-05
	19-43	534715	31-37	534969	31-13
532313-27.00	60-35		32-27	534976A1	31-24
	62-34	534728	05-08	534980	31-43
532362	38-13		06-08		32-34
	38-18	534740	05-07	534982	31-20
53236450	51.20		06-07	534987	58-07
	54-39	534741	08-21	534995	58-10
532432	01-21		09-28		71-01
	02-22	534742	39-13	535008	27-39
	25-12		40-15		28-05
	27-34	534743	25-06		29-39
	29-34		26-06	535010	28-06
532450	16-28	534750	41-05	535042	41-23
	17-28	•	42-05	535076	52-33
532451	16-32		43-05	535079	52-32
	17-32		44-05	535118	16-29
532676	38-21		45-05		17-29
532683	07-18	534757	08-20		18-32
532685	38-01		09-27	505040	19-32
532686	38-02	534775	31-50	535213	43-39
532687	38-03	E04707	32-40	535425 535484	31-31
532873	07-02	534787	33-03	535484 535541	52-31 33-02
532943	38-09	534857	18-35 19-35	535557	41-32
532944	38-10	E04001 A 1	39-12	555557	43-35
532945	38-11 38-16	534861A1	40-13	535559	41-
532946	38-16	534862	27-50	535631	22-02
532940 532947	38-15	334002	29-50	333031	23-02
534316	31-05	534863	39-16		24-02
534337	66-11	334003	40-18		54-24
334337	71-29	534873	28-09	535634	27-38
534360	52-40	534895	12-01		28-07
001000	53-11	534900	31-30		29-38
	54-28	534916	31-23	535651	31-38
534365	52-39	534934	31-29	535660	10-03
001000	53-10	534938	31-35		11-03
	54-27		32-25	535661	10-02
534445	05-25	534940	25-01		11-02
	06-20		26-01	535662	10-06
534470	05-01	534941	05-20		11-05
	06-01		58-09	535666	10-07
534503	21-01		59-08		11-06
534609	16-35		60-04		16-19
	17-35		61-04		17-19
•	18-36		62-04		55-37
	19-36		63-04		56-24
534610	16-36		ı		

			FIG. &	PART	FIG. &
PART NUMBER	FIG. & INDEX	PART NUMBER	INDEX	NUMBER	INDEX
535668	24-02	536413	52-37	537650	25-07
535681	52-28		53-01	537682	58-06
00000.	56-12		54-25	537690	60-20
535737	10-04		55-01		61-20
000.0.	11-07		56-01		62-20
535756	23-14		57-01		63-20
535784	52-50	536421	08-18		64-20
000.0.	53-23		09-25		65-20
	55-23	536432	52-15		66-22
535785	52-49	536485	38-04		67-20
555.55	53-24	536486	38-	537721	01-16
	55-22	536552	31-22		02-17
535787	52-46		32-17	537728	56-28
000.07	53-20	5 3656 3	08-17	537738A1	31-34
	55-18		09-24		32-24
535810	03-16	53 656 6	31-28	537742	31-06
000070	04-16	536740	52-38		32-05
535832	52-27		53-09	537743	31-11
535847	41-04		54-26	537743A2	31-
000017	42-04	536795	53-46	537745	31-51
	43-04	536871	53-27		32-41
	44-04	536872	53-28	537749	31-42
	45-04	536911	53-38		32-33
535885	28-20	537019	18-29	537750	26-17
333003	30-17		19-29		31-07
535887	28-21	537229	27-23		31-38
333007	30-18		29-23		32-28
535900	27-40	537235	27-26		37-16
333300	29-40	537282	24-05		53-48
535908	28-19	537296	16-38		55-40
333300	30-16		17-38		56-21
535912	52-45		18-39	537873	51-12
535928	33-04		19-39		53-02
535933	27-47	537297	01-30	537874	51-10
500000	29-47		02-29		53-04
535958	23-09	537299	05-44	537875	51-11
535960	53-26		06-41		53-03
535961	52-22	537312	24-07	537883	12-01
536036	52-01	537341	31-25	537911	43-40
536037	52-02	537432	10-05		45-27
536038	18-41		11-04		66-11
	19-41	537505	01-29		66-27
536213	33-02		02-28		67-25
	34-02	537539	33-11	537939	53-43
	35-02		34-10	537961	51-25
	36-02		35-11		53-26
536326	53-18		36-11		55-28 50-17
	55-16		37-09		56-17
536332A1	53-17	537589	27-24		57-16
536379	08-19	537629	40-03	538069	33-13
	09-26		60-14	538070	33-13
536410	16-37		62-14	538076	10-01
	17-37		66-16		11-01
536413	51-16		67-14	538100	57-23
	•				

	PART NUMBER	FIG. &	PART NUMBER	FIG. & INDEX	PART NUMBER	FIG. & INDEX
,	538127	07-22	538927	51-03	539518	06-02
	538135	07-22	330027	26-02	539520	38-21
_	538136	07-07	538944-10.50	03-05	539523	27-36
	538185	27-04	330344 10.33	04-05		29-36
	536165	29-01	538944-8.88	03-06	539525	27-35
	538304	18-40	330344 0.00	04-06		29-35
	556504	19-40	538949	03-29	539547-30.00	36-01
	538305	16-40	330343	04-31	539547-31.19	33-01
	536305	17-40		54-11		34-01
	538346	33-12	538969	05-38		37-19
	538361A1	52-06	00000	06-35	539547-32.00	35-01
	538404	01-20	538989	03-26	539568	31-24
	330404	02-21	00000	04-28		32-19
	538433	53-19	538996	53-47	539579	33-14
	JJU-1JJ	55-17	538999	31-07	539634	58-11
	538434A1	53-49		32-06		59-10
	538468	53-32	•	52-10		60-02
		55-35	539023	54-12		61-02
		57-35	539058	05-05		62-02
	538469	53-29		06-04		63-02
		55-30		31-03		64-02
	538470	53-33		32-03		65-02
		57-31	539113	53-34		66-02
	538480	41-31		57-32		67-02
	538516	27-37	539140	41-		71-02
		29-37		43-	539734	01-01
	538554	52-31	539374	03-15	539740	18-21
		52-32		04-15		19-21
		52-33	539433	41-12	539742	18-22
		53-05		45-06		19-22
		54-18	539467	12-05	539758	52-28
	538580	27-23		13-06	539785	31-26
		29-23		14-06	520200	32-21
	538607	36-15		15-06	539800	31-25 32-20
	538609	27-37	539487	55-10 51.00	539805	31-23
		29-37		51-08 52.26	559605	37-23 32-18
	538650	03-28		52-26 53-16	539814	12-01
	500707	04-30		54-13	539819- 24.00	60-34
	538727	27-43		54-15	333613- 24.00	62-35
ì	F0070F	29-43		56-10	539914	05-03
	538735	27-24		57-09	333314	06-03
	538736	27-26 29-26	539491	16-03	539937	25-07
	538773	05-32	339431	17-03	539941	68-02
	030773	06-27	539491A3	16-	539942	68-03
	538789A1	28-13	33343173	17-	539961	07-20
	330703A1	30-09	539491CP	16-03	539988	18-19
	538801	05-	000 10 70	17-03		19-19
	000001	06-	539491CP-A1	16-	539989	75-02
	538804	05-31	539491CP-A3	17-	625016	22-08
	000001	06-26	539492	18-03		23-08
	538814A1	26-07	539492A1	18-	625017	23-06
	538872	52-18	539501	01-01	625142	16-18
	538882	51-17	539518	05-02		17-18
		*			625207	25-02

PART NUMBER	FIG. & INDEX	PART NUMBER	FIG. & INDEX	PART NUMBER	FIG. & INDEX
625213	05-42	625539	63-15	626486	61-27
OLUL 10	06-39		64-15		62-27
625219-1	74-		66-17		63-27
625219-1A1	60-12		67-15		64-27
625219-1A2	62-12	625539A1	60-		67-34
625219-2	74-	520	61-	626487	05-13
625219-2A1	60-12		62-		06-13
023213°2F(1	62-12		63-	626524	43-41
625219-2A2	67-12		64-		60-36
625219-2A2	67-12		66-		62-37
	63-12		67-	626527	54-29
625219-2A4	64-12	625542	60-17	626530	54-30
625219-2A9		025542	61-17	626540	16-17
625219A7	61-12		62-17	020540	17-17
625228	69-01		63-17		18-20
625238	68-18		64-17		19-20
625259A1	60-11		66-19	626553	72-07
	68-				72-07 72-05
625298	41-13	005000	67-17 68-01	626557 626557-2	61-33
	46-	625600			60-33
625299	41-14	625601	68-02	626577-2	62-33
	46-	625615	18-31		
625302-12.00	67-37		19-31		64-32
625302-16.00	66-39	625735A1	68-10		65-35
	67-36	625765	42-01		66-38
625303	21-05		45-01		67-35
	22-12	625782	18-19	626577-2R	43-32
	22-13	625821	18-19		45-30
	24-11	625886	28-01	626634	60-16
625327-1	68-19		30-01		61-16
•	68-26	625966	01-33		62-16
625327-2	60-19		05-26		63-16
	61-19		06-21		64-16
	62-19	625982	41-13		65-16
	63-19	625983	41-14		66-18
	64-19		46-		67-16
	65-19	625996	02-31		68-15
	66-21	626089	26-20	626713	48-10
	67-19	626140	20-04		49-18
625383	26-20	626147	16-39	626714	48-09
02000	16-15		17-39		49-17
	17-15		18-38	626718	47-08
	18-18		19-38		48-17
	19-18	626189	24-01		49-08
625411	51-18	626226A1	68-10	•	50-08
UZUTII	54-31	626234A1	68-10	626735A2	68-10
625454	68-01	626332	24-13	626739	09-16
625454 625457	68-09	626334	01-32	626744	55-12
020407	68-20	020004	02-30	626791A1	60-11
		626341	24-16	020/07/17	68-
005457.4	68-27	626341 626342	24-10	626813	68-04
625457-1	68-09		46-	020010	68-17
625487A1	60-	626359	48-11		68-21
625539	60-15	000400	43-33		74-
	61-15	626486	1	626813-1	74- 74-
	62-15		45-29	UZUO 13-1	/ " T"

PART NUMBER	FIG. &	PART NUMBER	FIG. & INDEX	PART NUMBER	FIG. & INDEX
	19-03	627119	71-23	627449	43-17
626820 626820A8	19-03	02/113	74-	627450	43-17
626820CP	19-03	627164	06-39	627458	29-24
626820CP-A2	19-03	627166	06-	627480	13-05
626831	46-	627178	53-38		14-05
020031	47-01	627181	34-16		15-05
	49-01	627250A1	55-14	627494	27-17
626832	46-	627254	55-21		29-17
020032	47-01	627272	33-04	627495	27-18
	49-01		34-04		29-18
626836A1	60-	627273	33-04	627496	24-15
626839	71-07		34-04	627518	58-07
626845	58-01	627274	33-04		71-04
626879-1	60-10		34-04	627544	66-24
020070	61-10	627276	34-13	·	67-22
	62-10	627277	34-19	627544A1	66-
	63-10	627279	34-15		67-
	64-10		35-17	627545	66-25
	65-10		36-18		67-23
	65-24	627281	35-18	627590	75-01
	66-10		36-19	627642	74-
	66-26		37-14	627643	41-12
	67-10	627282	34-17	627650	27-22
	67-24	627315A1	67-		29-22
	71-30	627315A2	67-	627651	27-19
626889	09-17	627326A1	67-11	007050	29-19
626891	60-24		68-	627652	27-20
	62-24	627326A2	67-11	007050 1 1	29-20
	65-23		68-	627658A1	52-07 55-43
	66-29	627326A3	63-11	627670	34-11
	67-27		68-	627673	36-12
626900	74-	627331	73-	627673-2	35-12 35-12
626910	68-24	627335D12	60-31	62/6/3-2	35-12 37-17
	74-		61-31	627681	55-36
626919	42-30		62-31 63-30	027001	56-20
626960	31-01	00702010	64-30	627690	34-19
626992	14-01	62733D12	65-33	627713	67-22
627001	41-21	627335D12	66-34	627713A1	67-
	43-24		67-32	627734	67-23
627002	41-22	607269	55-47	627738	15-01
007044	43-25	627368	56-36	627756	41-26
627011	55-12		57-36	027730	43-28
007040	56-12	627377	34-03		45-23
627040	46-	62/3//	35-03	627759	41-25
	48-01	627378	72-06	02.7.00	43-27
627060	49-09 34-18	627392	22-01		45-22
627068	34-18 60-22	027332	23-01	627804	41-14
627076	60-22 62-22	627429	16-34		43-19
627004	62-22 60-23	021720	17-34		46-
627094	62-23	627433	04-12	627805	41-13
627119	62-23 70-	027 700	05-39		43-18
02/118	70- 71-17		06-36		46-
	71-21	627443	03-12	627809	69-02
	, , 4, 1	,		-	

PART	FIG. &	PART	FIG. &	PART	FIG. &
NUMBER	INDEX	NUMBER	INDEX	NUMBER	INDEX
627820	56-13	628271	43-31	628475	70-
627836	55-43		43-38		71-14
	56-32		45-24	628476	70-
627841	31-01		45-26		71-26
627862	43-19	628295	65-30		74-
33.002	46-		66-37	628478	70-
627863	43-18	628319	32-40		71-19
02,000	46-	628320	50-01		74-
627921	41-24	628320-11.00	45-13	628482	31-01
02,02.	43-26	628320-12.75	45-11		32-01
	45-21	628320-14.25	45-14	628488	10-10
627978	41-12	628320-16.00	45-12		11-10
628004	35-21	628320-16.25	45-10	628528A1	68-10
020004	36-22	628320-17.50	45-15	628543	06-39
628005	36-03	628336	54-02	628580	36-14
628008	06-03	628372A2	26-07	6285 83	36-21
628023	51-21	628379	45-	628597	54-35
628051	16-03	628380	45-	628698	25-07
628051A1	16-	628381	54-17	628701	55-24
628051CP	16-03	628382A1	68-10	628703	57-12
628051CP-A1	16-	628383	54-06	628705	57-11
628095	69-02	628390	54-09	628730	37-08
628129	27-49	628391	50-01	628739	43-06
020129	29-49	628391-31.75	45-07		44-06
628152	60-32	628391-32.00	45-08	628740	43-
020152	62-32	628391-32.50	45-16		44-11
	63-31	02000 / 02.00	45-17	628744A1	63 .
	64-31	628391-36.50	45-18	628752	20-01
	65-34	628391-37.50	45-09	628760	31-49
	66-35	628409	26-02	323.33	32-39
	67-33	628416	54-36	628766	57-13
628153	60-32	628428A1	62-	628775A1	62-11
028193	62-32	628429A1	62-11		68-
	63-31	020420711	68-	628776A1	62-
	64-31	628434	74-	628816	57-26
	65-34	628436	70-	628822	57-18
	66-35	628437	70-	628833	57-25
	67-33	020107	73-	628859	30-09
628154	60-32		74-	628861A1	64-11
020104	62-32	628438	70-	020001711	68-
	63-31	020430	71-18	628891A1	64-
	64-31		71-20	628914	69-02
	65-34		71-24	628981	68-13
	66-35		74-	628986	47-07
	67-33	628439	60-32	020000	48-16
628178	59-04	020100	62-32		49-07
628198	09-16	628440	62-32		50-07
628245	09-16	628441	60-32	629007	43-07
628257	05-02	020-7-7 1	62-32	J. J. J. J. J. J. J. J. J. J. J. J. J. J	44-10
040207	06-02	628472	43-01	629008	43-08
628260	18-42	020-112	44-01	0_000	44-07
UZOZOU	19-42	628473	43-01		44-12
628264	67-39	020773	44-01	629009	43-09
		628474	45-25	02000	44-08
628271	41-30	UZU4/4	70-20		,, 00

	PART NUMBER	FIG. & INDEX	PART NUMBER	FIG. & INDEX	PART NUMBER	FIG. & INDEX
•	629009	44-13	629505	50-14	630296	56-15
	629010	43-10	629506	50-16	630387	61-14
		44-09	629518-1H	01-23		63-14
		44-14		01-24	1	64-14
	629011	43-07		02-24		65-14
	0.400	44-15		16-08	630455	68-11
	629076	39-17		17-08	630474	56-27
		40-19		18-07	630519	34-17
	629077	39-18		19-07		35-19
		40-21		51-02		36-20
	629104	08-06		52-13		37-13
		09-07		53-51	630533	43-17
	629111	75-01		54-07	630591	18-10
	629117	18-14		73-		19-10
		19-14	629518-3H	01-26	630626	52-41
	629138	52-30		01-27	630627	55-27
		54-20		02-26		56-14
		55-02	629518-4H	23-16	630628	52-41
		55-04	629595	55-13		56-14
		56-02		56-13	630686	34-04
		56-04	629597	55-13	630693-10.44	03-16
		57-02	629599	54-02	630826	08-14
	629163	54-13	629601	54-06		09-15
	629176	32-01	629675	07-09	630863	41-12
	629202	05-09	629703-2	74-	630886	09-01
		06-09	629703-2A4	65-12	630927	09-01
	629267	71-15	629825	35-14	630932	09-01
	629324A1	68-10	629837	42-28	630977	09-01
	629325	52-30		44-37	630985	37-03
		54-19	629847	01-31	630988	37-10
		55-03	629848	09-13	630989	37-05
		56-03	629871	69-01	631000	37-04
		57-03	629882	09-01	631094	37-02
	629326	75-02	629885	07-01	631111	37-01
	629329	69-01	629887	02-01	631200	37-06
	629330	65-17	629904-2A1	66-14	631237	41-01
	629338	65-22	630039	35-20	004050	43-01
	629338A1	65-	630065	70-	631252	31-20
	629351	75-01	630069A1	66-13	001001	32-15
	629353	56-29	00007444	68-	631261	31-01
	629354	56-30	630074A1	66-	621266 1	32-01
	629364	65-15	630089	71-15	631266-1	05-50
	629364A1	65-	, 630093	41-31	CO107E 1	06-47
	629397A1	65-11	020110	43-34	631275-1 631277	06-48 42-06
	000000	68-	630119	74-	631330	42-06 72-04
	629399A9	65-	630124	68-01	631351	72-0 4 73-
	629417	35-04	630184	72-06	631351-10A3	66-30
	600.410	36-04	630261-35	08-05 09-05	031301-10A3	72-
	629418	69-02	620261.26	08-05	631427	72- 73-
	629494	44-34	630261-36	08-05	631427 631427-3A1	73- 72-
	629495	44-33	630261-37	08-05	631427-3A2	63-26
	629496	44-32	620261.20	08-05	631427A1	03-26 72-
	629498	44-31	630261-39	08-05	631427A1	72- 72-
	629502	50-10	630261-40	09-05	631427A11	60-26
	629504	50-13	•	09-00 1	00172/A10	00-20

				PART	FIG. &	1
PART	FIG. &	PART	FIG. & INDEX	NUMBER	INDEX	
NUMBER	INDEX	NUMBER	INDEX	TEOMOLIT		
631427A15	62-26	631818	69-02	632556	68-05	
031427A15	66-30	631819	68-01	632557	6 0 -17	
	67-28	631845	10-03		61-17	
CO1407A1C	64-26	00.0.0	11-04		62-17	_
631427A16 631427A17	61-26	631867	01-19		63-17	
031427A17	65-28	00.00	02-20		64-17	
631427A19	62-26	631915	06-45		66-19	
631427A19	72-	631927	01-30		67-17	
631427A2 631427A3	72-	631928	05-47	632557-1	65-17	
631478	27-28		06-44	632558	60-15	
031470	29-28	631972	52-24		61-15	
CO1 401	13-01	55 7 5 7. –	53-15		62-15	
631481	16-06		55-08		63-15	
631496	17-06		56-08		64-15	
	18-08		57-07		66-17	
	19-08	631995	27-30		67-15	
CO1E 4.4	18-42		29-30	632558A1	60 -	
631544	19-42	632017	70-		61-	
001000	27-27	002011	71-12		62-	
631638	29-27	632077	40-13		63-	
004050	28-08	632085	28-10		64-	
631650	30-05	002000	30-06		66 -	
004050	27-10	632105	42-27		67-	
631653	29-10	002100	44-38	632563	27-05	
004050	73-	632106	44-35		29 -05	
631658	59-11	632149	05-51	632563A16	27-	
631683	60-03	632151	05-48		29-	
	61-03	632280	55-26	632563A17	29-	
	62-03	632312	37-07	632563A2	27-	_
	63-03	632319	09-12	632563A20	29-	
	64-03	632323	52-28	632563A29	29-	
	65-03	632330	39-13	632563A31	27-	
	66-03	632357	05-04	632563A4	27-	
	67-03	632372	22-06	6 32 563A7	27-	
631684	59-09	632443-4	09-19		29-	
051004	60-01	632478	27-09	632653A1	39-12	
	61-01	632553-2	75-02	632762	27-16	
	62-01	632554-1	68-25		29-16	
	63-01		74-	632816	59-02	
	64-01	632554-2	68-06	632837	17-34	
	65-01		74-	632859	61-22	
	66-01	632555-23	68-05		63-22	
	67-01	632555-24	74-		64-22	
631685	66-04	632555-25	68-24	632859A1	61-	
631720	73-	632555-27	74-		64-	
631739	44-36	632555-28	74-	632885-2A1	66-	
631764	60-09	632555-31	68-24	632904-2	74-	
001701	61-09	632555-32	68-24	632916-2	74-	
	62-09	632555-33	68-24	632916-2A2	66-14	
	63-09	632555-44	68-05	632932	13-01	
	64-09	632555-46	74-	633009	44-30 50.11	
	65-09	632555-47	68-24	633012	50-11 52-19	
	66-09	632555-48	68-24	633027	52-18 27-11	
	67-09	632555-5	74-	633062	37-11	_

	PART NUMBER	FIG. &	PART NUMBER	FIG. & INDEX	PART NUMBER	FIG. &. INDEX
		50-12	633589	42-39	635360	44-40
	633096 633099	50-12	033303	47-11	635363	44-39
	633113	41-13	633590	42-41	635623	08-06
	033113	46-	000000	47-13		09-06
	633114	41-14	633591	42-43	635993	24-01
	000114	46-		47-15	636675	47-02
	633136	08-12	633592	42-42		48-02
	633143A1	66-13		47-14		48-12
		68-	633593	42-38		49-02
	633189	08-08		47-10		49-10
		09-09	633845	31-28		50-02
	633195	66-24		32-23	636676	47-03
	633198	66-25	633925	42-37		48-03 49-03
	633219	08-01	633926	42-36		49-03 49-11
	633225	08-01	633927	42-32		50-03
	633227	08-01	634150	27-09 29-09	636677	47-04
	633246	09-01	624105	29-09 74-	030077	48-04
	633254	08-09	634195	16-01		49-04
	000000	09-08	634505	17-01		49-12
	633256	08-01 08-01		18-01		50-04
	633258	09-01		19-01	636678	47-05
	633311	42-07	634511	03-27		48-05
	633343	74-	00.0	04-29		48-14
	633412	25-07	634592	31-01		49-05
	633435	57-15	634673	37-04		49-13
	633579	42-10	634675	42-06		50-05
		42-11		43-17	636679	50-06
		42-12		44-16	636687	42-31
		42-13	634805	55-33	636692	42-26
		42-14	634807	55-34	636922	42-29 44-17
		42-15	635050A1	31-15	636954 637286	70-
		42-16	00505044	32-10	03/200	70- 71-13
	000570	46-	635050A4	31- 32-	637409	50-09
	633579	47-09	635134	05-36	637409-48	44-18
	633580	42-08 42-09	039134	06-30	007 100 10	44-19
		42-09	635158-13.00	67-30		44-20
		42-18	635158-15.00	66-31		44-21
		42-19	003.00 .0.00	67-29		44-22
ī		46-	635158-16.00	61-28		44-23
		47-09		64-28		44-25
	633581	42-25		66-31		44-28
	633582	42-24	635158-17.00	63-28	•	44-29
	633583	42-23		66-32	637579	08-11
		42-40		67-30	007704	09-11
		47-12	635158-18.00	65-31	637781	18-20 19-20
	633584	42-22	005450 00 00	66-32	637,836	19-20 16-14
	633585	42-21	635158-32.00	65-32 67-31	05 <i>1,</i> 030	17-14
		42-45	625150 40 00	66-33		18-17
	622506	47-17	635158-40.00	67-31		19-17
_	633586	42-20 42-44	635158-44.00	61-30	637847	32-01
		47-16	635158-8.50	61-29	638152	61-32
		., .		ı		

PART	FIG. &	PART	FIG. &	PART	FIG. &
NUMBER	INDEX	NUMBER	INDEX	NUMBER	INDEX
	' 		14.02	641250	08-15
638153	61-32	639567	14-02 12-03	041200	09-22
638154	61-32	639568	13-03	641306	08-16
	70-		14-03	041300	09-23
638154-12A1	62-08		l l	641361	05-27
638154-3A2	66-08	639573	18-28 19-28	041301	06-22
638154-9A1	60-08		18-23	641368	31-17
	62-08	639629	18-26	041300	32-12
638154-9A12	63-08		19-23	641643	55-30
638154-9A2	67-08		19-26	641651	05-14
638154-9A20	66-08		51-09	041031	06-14
638154-9A4	64-08	639660-13	· · · · · · · · · · · · · · · · · · ·	641682	18-25
638154-9A6	65-08		52-27	041002	19-25
638154-9A8	61-08		52-29 52-12	641701	65-29
638156	71-08		53-12	041701	66-36
638172	39-20		53-13 54-12	641860	52-18
	40-23		54-12 54-16	641862	10-11
638440	60-32		54-10 55-11	041002	11-11
639152	24-01		56-11	641905	08-01
639185A2	66-		57-10	641930-9.81	03-07
639193	08-04	000000	13-04	041000 0.01	04-07
	09-04	639663	61-11	641931-10.75	03-08
639195	08-03	639766A1	68-	011001 10170	04-08
	09-03	639768	12-04	641952A1	18-12
639196	09-03	039700	13-04	0110027	19-12
639197	08-03		14-04	641960	18-09
639234A3	62-		15-04	0.,000	19-09
639246A3	60-	639997	05-15	641962	18-03
639247A3	62-	039997	06-15	641962A1	18-
639248A3	60- 63-	640027	66-09	642003-2	59-01
639255A4	67-	640107A3	61-	642064	72-01
639257A5	67-	640120A1	61-	642068	18-03
639258A3	64-	640299	12-02		19-03
639260A3	66-	010200	13-02	642068A1	18-
639261A3 639264A2	65-		14-02	642068A3	18-
639264A2 639266	67-09	640300	12-04		19-
639268	71-27	0.000	14-04	642068CP	18-03
639292	20-05		15-04		19-03
639304	05-25	640301	12-02	642068CP-A1	18-
039304	06-20		13-02		19-
639305	24-14		15-02	642086	13-04
639418-1	01-20	640302	13-05	642159A1	01-01
033410-1	02-21	-	14-05	642166A1	02-01
639418-2	01-19		15-05	642167A1	02-01
0004702	02-20	640380	28-26	642168A1	02-01
639437	68-10		30-23	642169A1	02-01
639479	68-16		39-01	642170A1	02-01
639565	13-02		40-01	642172A1	02-01
00000	15-02	640518	13-01	642173A1	02-01
639566	12-02	640620-4	05-35	642177A1	02-01
	13-03	640620-5	06-29	642178A1	01-01 02-01
	15-03	640620-8	05-35	04047044	02-01
639567	12-02		06-29	642179A1	02-01
	13-02	641139	52-18	642182A1	01-01

PART NUMBER	FIG. & INDEX	PART NUMBER	FIG. & INDEX	PART NUMBER	FIG. & INDEX
642183A1	01-01	642283	65-15	642720	08-13
642189A1	02-01	642283A1	65-		09-14
642193A1	01-01	642335	27-11	642914	05-10
642194A1	01-01	0.200	29-11		06-10
64224	27-13	642336	27-08	647409-48	44-24
04224	29-13	•	29-08		44-26
642249	09-21	642515	59-03		44-27
642250	03-03	642714	28-12	6577-2	63-62
042230	04-03	012///	30-08		
		•			
				·	
	· 1		į		
	1		1		
	1		Į.		

.

SECTION VI CUSTOMER SPECIFICATIONS

This section contains a parts listing of customer specifications for the basic engines of each model. There is a Figure and Index column which refers to an illustrated view of the parts or assembly differences. Figures 76 thru 82 are located on pages 6-25 thru 6-29 in the rear of this section. The other Figures referenced in this section are located throughout Section II.

MODEL SPEC	PART NUMBER	12345 DESCRIPTION	QTY	FIGURE INDEX
0-470-G7	639250A3	Fuel Injection Assembly, Complete	1	***
0-470-67	638154-9A1	. Fuel Pump Assembly, Complete	1	60-8
	625487A1	. Throttle and Control Assembly, Complete	1	60-
	631427A15	. Manifold Valve	1	60-26
O-470-J6	537487	Regulator, Voltage, 12 Volt, 35 Amp	1	76-1
O-470-J8	627272	Generator, 12 Volt, 50 Amp	1	33-4
	04040044	D Crankcase Studding Assembly	1	* * *
O-470-J11	• · - · · · .	Stud, 1/4 x 1-5/16 Inch Long	5	1-10
	401808 626189	Oil Cooler Assembly & Associated Parts		24-
		(See O-470-B) Screw, 1/4 x 1.00 Inch Long	12	24-2
	24873	Screw, 1/4 x 1.00 Inch Long	1	* * *
	632823	Bracket, O/C (Rocker Cov. No. 5 Cyl.)	1	***
	632824	Bracket, Oil Cooler	1	* * *
	629806	Bolt, 1/4 - 28	1	***
	536779	Washer	1	* * *
	2437	Nut	1	33-4
	627272	Generator, 12 Volt, 50 Amp	ı	33 -4
	507000 A 1	Rod Assembly, Oil Gauge	1	5-45
O-470-K3	537298A1	O-Ring	1	5-46
	AN123860 627322	Regulator, Voltage, 12 Volt, 35 Amp	1	76-1
		n I - Fusing Mounting	4	5-1
O-470-K5	534470	Bracket, Engine Mounting	1	5-45
	626295A1	Rod Assembly, Oil Gauge	1	5-46
	AN123860	. O-Ring	1	52-18
	641139	Carburetor, Model MA4-5	•	7 7 -
	535262	Fuel Pump Assy. & Associated Parts	1	38-1
	536486	Priming System Assembly		
	627322	Regulator, Voltage, 12 Volt, 35 Amp	.1	76-1
G 4770 140	E07000 A 1	Rod Assembly, Oil Gauge	1	5-45
O-470-K9	537298A1 AN123860	O-Ring	1	5-46
			2	78-1
O-470-K14	401801 627392	Stud, 1/4 x 1-1/4 Inch Long	2	22-
	404004	Stud, 1/4 x 1-1/4 Inch Long	2	78-1
O-470-K15	401801	Stud, 1/4 x 1-1/4 frich Long	1	5-45
	537298A1 AN123860	Rod Assembly, Oil Gauge	1	5-46
		On the October Assembly	1	***
O-470-K17	0 12 102111	(1) Crankcase Studding Assembly	5	1-10
	401808	. Stud, 1/4 x 1-5/16 Inch Long	1	5-4 5
	537298A1	Rod Assembly, Oil Gauge	i 1	5-45 5-46
	AN123860	. O-Ring	1	
	627272	Generator, 12 Volt, 50 Amp	1	33-4
0.470 1.2	539792A1	Rod Assembly, Oil Gauge	1	5-45
O-470-L2	AN123860	. O-Ring	1	5-46
6.2	MARCH 1979			

MODEL SPEC	PART NUMBER	12345 DESCRIPTION	QTY	FIGURE INDEX
O-470-L9	627272	Generator, 12 Volt, 50 Amp	1	33-4
Э-470-L10	627272	Generator, 12 Volt, 50 Amp	1	33-4
J-470-E10	632563A7	Oil Pump Housing & Associated Parts		27-
	628472	Magneto Assembly, Left Hand	1	44-1
	628473	Magneto Assembly, Right Hand	1	44-1
O-470-L12	632563A7	Oil Pump Housing & Associated Parts(See O-470-R)		27-
	629176	Starter, 12 Volt	1	32-1
	628472	Magneto Assembly, Left Hand	1	44-1
	628473	Magneto Assembly, Right Hand	1	44-1
O-470-L13	632563A7	Oil Pump Housing & Associated Parts(See O-470-R)		27-
	629176	Starter, 12 Volt	1	32-1
	627272	Generator, 12 Volt, 50 Amp	1	33-4
	628472	Magneto Assembly, Left Hand	1	44-1
	628473	Magneto Assembly, Right Hand	1	44-1
O-470-L16	642162A1 (D Crankcase Studding Assembly	1	* * *
	401808	. Stud, 1/4 x 1-5/16 Inch Long	5	1-10
	539792A1	Rod Assembly, Oil Gauge	1	5-45
	AN123860	. O-Ring	1	5-46
•	626189	Oil Cooler Assy. & Associated Parts (See O-470-B)		24-
	24835	Screw, 1/4 x 7/8 Inch Long	12	24-2
	632823	Bracket, O/C (Rocker Cov. No. 5 Cyl.)	1	* * *
	632824	Bracket, Oil Cooler	1	* * *
	629806	Bolt, 1/4 - 20	1	* * *
	536779	Washer	1.	* * *
	2437	Nut	1	* * *
	627272	Generator, 12 Volt, 50 Amp	1	33-4
O-470-M1	629518-1H	Plug, Pipe (Between Cyl. 1 & 3)	1	* * *
	637261A1	Rod Assembly, Oil Gauge	1	5-45
	AN123860	. O-Ring	1	5-46
	627274	Generator, 24 Volt, 25 Amp and Associated Parts		79-
	627320	Regulator, Voltage, 24 Volt, 25 Amp	1	76-1
O-470-M8	637261A1	Rod Assembly, Oil Gauge	1	5-45
	AN123860	. O-Ring	1	5-46
O-470-M10	637261A1	Rod Assembly, Oil Gauge	1	5-45
	AN 123860 627274	O-Ring	1	5-46
		Associated Parts		79-
	627320	Regulator, Voltage, 24 Volt, 25 Amp	1	76-1

MODEL SPEC	PART NUMBER	12345 DESCRIPTION	QTY	FIGURE INDEX
O-470-M11	637261A1	Rod Assembly, Oil Gauge	1	5-45
0-470-10111	AN123860	O-Ring	1	5-46
	627320	Regulator, Voltage, 24 Volt, 25 Amp	1	76-1
O-470-M12	637261A1	Rod Assembly, Oil Gauge	1	5-45
U-470-W12	AN123860	. O-Ring	1	5-46
0.470.1400	642192A1 ⁽	① Crankcase Studding Assembly	1	* * *
O-470-M22	402042	. Stud, 5/16 x 1 Inch Long	1	1-3
	539914	Bracket, Engine Mounting	3	5-3
	628008	Bracket, Engine Mounting	1	6-3
	628319	Sheave, Starter Drive	1	32-1
	629417	Generator 24 Volt. 50 Amp and		00
	020 111	Associated Parts (See IO-470-R)	1	36-
	632563A1	Adapter Assembly, Mag	1	39-12 43-17
	627450	Plug, Spark	12	43-17
O-470-M23	637261A1	Rod Assembly, Oil Gauge	1	5-45
0-4/0-10123	AN123860	O-Ring	1	5-46
	627450	Plug, Spark	12	43-17
	000004	Plug, Special	1	1-32
O-470-M26	626334 625966	Gasket	1	1-33
	AN123866	Seal, O-Ring	1	1-34
	637261A1	Rod Assembly, Oil Gauge	1	5-45
	AN123860	O-Ring	1	5-46
	639152	Cooler Assembly, Oil and		_
	000702	Associated Parts (See O-470-M)	1	24-
	639305	Valve, Oil Temperature Control	1	24-14
	627496	. Gasket	1	24-15 39-12
	632653A1	Adapter Assembly, Mag	1	39-12
O-470-R1	627272	Generator, 12 Volt, 50 Amp	1	33-4
0 170 111	629176	Starter, 12 Volt	1	32-1
	628472	Magneto, Left Hand	1	44-1
	628473	Magneto, Right Hand	1	44-1
O-470-R2	627272	Generator, 12 Volt, 50 Amp	1	33-4
0-470-112	629176	Starter, 12 Volt	1	32-1
O 470 D2	627272	Generator, 12 Volt, 50 Amp	1	33-4
O-470-R3	636954	Harness Assembly	1	44-17
	635150	Spark Plug	12	43-17
0.470.04	607070	Generator, 12 Volt, 50 Amp	1	33-4
O-470-R4	627272 629176	Starter, 12 Volt	1	32-1
	023170		_	20.1
O-470-R5	627272	Generator, 12 Volt, 50 Amp	1	33-4
	628472	Magneto, Left Hand	1	44-1
	628473	Magneto, Right Hand	1	44-1

	MODEL SPEC	PART NUMBER	12345 DESCRIPTION	QTY	FIGURE INDEX
	`O-470-R6	642164A1	O Crankcase Studding Assembly	1	***
		401808	. Stud, 1/4 x 1-5/16 Inch Long	5	1-10
		631927	. Guide, Oil Gauge Rod	1	1-30
		626189	Oil Cooler & Associated Parts		
			(See O-470-B)	1	24-
		24835	Screw, 1/4 x 7/8 Inch Long	12	24-2
		626823	Bracket, O/C (Rocker Cov. No. 5 Cyl.)	1	* * *
		626824	Bracket, Oil Cooler	1	***
		629806	Bolt, 1/4 - 28	1	***
		536779	Washer	1	***
		2437	Nut	1	
		627272	Generator, 12 Volt, 50 Amp	1	33-2
		636954	Harness Assembly	1	44-17 ***
		635150	Spark Plug	12	^ ^ *
	O-470-R9	629176	Starter, 12 Volt	1	32-1
	0 170 110	636954	Harness Assembly	1	44-17
		631277	Plug, Spark	12	42-6
	O-470-R11	631277	Plug, Spark	12	42-6
	O-470-R13	642161A1 (Crankcase Studding Assembly	1	* * *
		401806	. Stud, 1/4 x 1-1/4 Inch Long	3	1-10
		626334	Plug, Special	1	1-32
		625966	Gasket	1	1-33
		AN123866	Seal, O-Ring	1	1-34
		639151	Oil Cooler & Associated Parts		80-
		627272	Generator, 12 Volt, 50 Amp	1	33-4
		636954	Harness Assembly, Complete	1	44-17
		631277	Plug, Spark	12	42-6
	O-470-R14	642162A1 ⁽¹	Crankcase Studding Assembly	1	* * *
		401801	. Stud, 1/4 x 1-5/16 Inch Long	5	1-10
		626189	Oil Cooler & Associated Parts		
:			(See O-470-B)		24-
		24835	Screw, 1/4 x 7/8 Inch Long	12	24-2
		626823	Bracket, O/C (Rocker Cov. No. 5 Cyl.)	1	* * *
		626824	Bracket, Oil Cooler	1	* * *
		629806	Bolt, 1/4 - 28	1	* * *
		536779	Washer	1	* * *
1.		2437	Nut	1	* * *
		627272	Generator, 12 Volt, 50 Amp	1	33-4
		628472	Magneto Assembly, Left Hand	1	43-1
		628473	Magneto Assembly, Right Hand	1	43-1
		633113	Harness Assembly, Left Hand	1	41-13
		633114	Harness Assembly, Right Hand	1	41-14
		621277	Plug, Spark	-12	42-6

MODEL SPEC	PART NUMBER	12345 DESCRIPTION	QTY	FIGURE INDEX
O-470-R15	539518	Bracket, Engine Mounting	3	5-2
0-470-1113	628257	Bracket, Engine Mounting (Cyl. No. 2)	1	5-2
	632357	Spacer, Mounting Bracket	1	5-4
	636954	Harness Assembly	1	44-17
	631277	Plug. Spark	1	42-6
	536038	Nut, Exhaust	24	18-41
O-470-R17	642161A1 C	Crankcase Studding Assembly	1	* * *
0-470-1117	401806	. Stud, 1/4 x 1-1/4 Inch Long	3	1-10
	626334	Plug, Special	1	1-32
	625966	Gasket	1	1-33
	AN123866	Seal, O-Ring	1	1-34
	639151	Oil Cooler & Associated Parts		80-
	627272	Generator, 12 Volt, 50 Amp	1	33-4
	636954	Harness Assembly, Complete	1	44-17
	631277	Plug, Spark	12	42-6
	627321	Regulator, Voltage, 12 Volt, 50 Amp	1	77-1
•		A. A. A. A. A. A. A. A. A. A. A. A. A. A	2	42-1
O-470-R20	625765	Magneto, Assembly	1	42-7
	633311	Harness Assembly	12	* * *
	635150 536038	Spark Plug	24	18-41
O-470-R23	627433	Bolt	5	3-12
0-470-1123	2473	Washer, Plain	5	3-13
	628257	Bracket, Eng. Mounting, Cyl. No. 2	1 .	5-2
	632357	Spacer	1	5-4
	625765	Magneto Assembly	2	42-1
	633311	Harness Assembly	1	42-7
O-470-R25	627433	Bolt	5	3-12
0 170 1120	2473	Washer, Plain	5	3-13
	630693-10.44		1	3-16
	628257	Bracket, Eng. Mounting, Cyl. No. 2	1	5-2
	628357	Spacer	1	5-4
	625765	Magneto Assembly	2 .	42-1
	633311	Harness Assembly	1	42-7
	631277	Plug, Spark	12	42-6
O-470-R32	642163A1 (D Crankcase Studding Assembly	1	* * *
	401814	. Stud, 5/16 x 1-7/8 Inch Long	4	1-17
	627433	Bolt	5	3-12
	2473	Washer, Plain	5	3-13
	628257	Bracket, Eng. Mounting, Cyl. No. 2	1	5-2
	632357	Spacer	1	5-4
	535662	Gear, Cam Cluster	1	10-6
	535666	Screw, Cam-to-Gear	4	10-7
	535262	Pump Assembly, Fuel	i	77-

**,	MODEL SPEC	PART NUMBER	12345 DESCRIPTION	QTY	FIGURE INDEX
)-470-R32	625765	Magneto Assembly	2	42-1
		633311	Harness Assembly	1	42-7
		631277	Plug, Spark	12	42-6
	O-470-R35	642161A1 ①	Crankcase Studding Assembly	1	* * *
		401806	. Stud, 1/4 x 1-1/4 Inch Long	3	1-10
		626334	Plug, Special	1	1-32
		625966	Gasket	1	1-33
		AN123866	Seal, O-Ring	1	1-34
		627433	Bolt	5.	3-12
		2473	Washer, Plain	5	3-13
		_	Bolt, 3/8 x 10-7/16 Inch Long	1	3-16
		628257	Bracket, Eng. Mounting (Cyl. No. 2)	1	5-2
		632357	Spacer	1	5-4
		639171	Cooler Assembly, Oil and		
			Associated Parts		81-
		625765	Magneto Assembly	2	42-1
		633311	Harness Assembly	1	42-7
		631277	Plug, Spark	1	42-6
	O-470-R37	630693-10.44	Bolt, 3/8 x 10-7/16 Inch Long	1	3-16
		634592	Starter, 12 Volt	1	31-1
		627377	Sheave, Generator Drive	1	33-3
		627274	Generator, 24 Volt, 25 Amp	1	33-4
	•	536213	Spacer	1	33-2
		539580	Bracket, Generator Support	1	* * *
		538283	Bracket, Generator Support	1	* * *
		538346	Arm, Generator Belt, Adjusting	1	* * *
		636954	Harness Assembly	1	44-17
		627320	Regulator	1	77-1
	O-470-S2	642195A1 ①	Crankcase Studding Assembly	1	* * *
		401852	. Stud, 1/4 x 1-13/32 Inch Long	5	1-10
		626334	Plug, Special	1	1-32
		625966	Gasket	1	1-33
•		AN123866	Seal, O-Ring	1	1-34
		639171	Cooler Assembly, Oil & Assoc. Parts		81-
	O-470-U2	642195A1 ①	Crankcase Studding Assembly	1	***
		401852	. Stud, 1/4 x 1-13/32 Inch Long	5	1-10
		626334	Plug, Special	1	1-32
÷		625966	Gasket	1	1-33
		AN123866 639171	Seal, O-Ring	1	1-34
			Associated Parts		81-
	7-470-U3	642266	Procket Eng Mounting Cyl No. 2	1	***
	7-47U-U3 -	642266 637847	Bracket, Eng. Mounting, Cyl. No. 2	1	32-1

MODEL SPEC	PART NUMBER	12345	DESCRIPTION	ΩΤΥ	FIGURE INDEX
O-470-U4	642195A1 (D Crankcase Stu	udding Assembly	1	* * *
0-470-04	401852		1-13/32 Inch Long	5	1-10
	626334	· ·		1	1-32
	625966			1	1-33
	AN123866			1	1-34
	642266 639171	Bracket, Eng. Cooler Assem	Mounting, Cyl. No. 2	1	***
	039171		irts		81-
	637847		olt	1	32-1

10-470 SPECIFICATIONS

MODEL SPEC	PART NUMBER	12345 DESCRIPTION	QTY	FIGURE INDEX
10-470-C7	628481	Switch, Magnetic	1	82-
10-470-D1	641701	Bracket, Fuel Discharge Tubes, 1-3-5 Side	1	66-36
	628295	Bracket, Fuel Discharge Tubes, 2-4-6 Side	1	66-37
10-470-D2	632563A7	Housing Assembly, Oil Pump	1	29-
,0 ,,0 52	628482	Starter, 12 Volt	1	32-1
	627272	Generator, 12 Volt, 50 Amp	1	34-4
	538517	Sump Assembly, Oil Pump	1	* * *
	639257A6	Fuel Injection Assembly, Complete	1	* * *
	638154-9A2	. Fuel Pump Assembly, Complete	-1	67-8
	627315A8	. Throttle and Control Assembly	1	* * *
	631427A15	. Manifold Valve Assembly	1	67-28
10-470-D12	639152	Oil Cooler and Associated Parts (see IO-470-U)		24-
10 470 012	641701	Bracket, Fuel Discharge Tubes, 1-3-5 Side	1	66-36
	628295	Bracket, Fuel Discharge Tubes, 2-4-6 Side	1	66-37
10-470-D15	639152	Oil Cooler and Associated Parts (see IO-470-U)	1	24-
10 470 010	628472	Magneto Assembly, L.H	1	44-1
	628473	Magneto Assembly, R.H.	1	44-1
	636954	Harness Assembly	1	44-17
	641701	Bracket, Fuel Discharge Tubes, 1-3-5 Side	1	66-36
	628295	Bracket, Fuel Discharge Tubes, 2-4-6 Side	1	66-37

10.470.D19	MODEL SPEC	PART NUMBER	12345 DESCRIPTION	QTY	FIGURE INDEX
625966 Gasket	IO-470-D19	626334	Plug, Special	1	
S39914 Bracket, Engine Mounting 3 6-3		625966		1	
539914 Bracket, Engine Mounting 3 63 628008 Bracket, Engine Mounting 1 63 628319 Sheave, Generator Drive 1 32-40 629417 Generator, 24 Volt, 50 Amp and 36- 639152 Oil Cooler and Associated Parts (See 10-470-U) 24- 628472 Magneto Assembly, Left Hand 1 44-1 628473 Magneto Assembly, Right Hand 1 44-1 639564 Harness Assembly, Complete 1 44-1 6395262A3 Fuel Injection Assembly, Complete 1 6-6-8 638154-9A20 Fuel Pump Assembly, Complete 1 6-6-8 627315A1 Throttle and Control Assembly 1 6-7 631427A15 Manifold Valve 6 6-8 628060 Gasket, Engine Mounting 3 6-2 628008 Bracket, Engine Mounting 3 6-2 628019 Sheave, Starter Adapter 1 32-40 62819 Sheave, Starter Adapter 1 32-40 628472 Magneto Assembly, E.H. 1 44-1 <		AN123866	Seal, O-Ring	1	2-32
628008 Bracket, Engine Mounting 1 6-3 628319 Sheave, Generator Drive 3240 629417 Generator, 24 Volt, 50 Amp and 3240 639152 Oil Cooler and Associated Parts (See IO-470-U) 24- 628472 Magneto Assembly, Left Hand 1 44-1 628473 Magneto Assembly, Right Hand 1 44-17 639262A3 Fuel Injection Assembly, Complete 1 64-17 638154-9A20 Fuel Pump Assembly, Complete 1 66-8 627315-A1 Throttle and Control Assembly 1 67- 631427A15 Manifold Valve 1 66-8 627315-A1 Manifold Valve 1 66-30 628260 Gasket, Engine Mounting 3 6-2 639152 Oil Cooler and Associated Parts (See IO-470-U) 24- 628319 Sheave, Starter Adapter 1 32-40 629417 Generator, 24 Volt, 50 Amp and Associated Parts (See IO-470-U) 36- 628472 Magneto Assembly, C.H. 1 44-1				3	6-3
628319 Sheave, Generator Drive 1 32-40				1	6-3
Generator, 24 Volt, 50 Amp and Associated Parts (See IO-470-U) 36- G39152 Oil Cooler and Associated Parts (See IO-470-U) 24- G28472 Magneto Assembly, Left Hand 1 44-1- G28473 Magneto Assembly, Left Hand 1 44-1- G36954 Harness Assembly Interval 1 44-1- G39262A3 Fuel Injection Assembly, Complete 1 **** G38154-9A20 Fuel Pump Assembly, Complete 1 66-8- G27315A1 Throttle and Control Assembly 1 67- G31427A15 Manifold Valve 1 66-30- G28260 Gasket, Exhaust Flange 6 19-42- IO-470-D27 539914 Bracket, Engine Mounting 3 6-2- G28008 Bracket, Engine Mounting 3 6-3- G28008 Bracket, Engine Mounting 1 6-3- G39152 Oil Cooler and Associated Parts (See IO-470-U) 24- G28319 Sheave, Starter Adapter 1 32-40- G28472 Magneto Assembly, L.H. 1 44-1- G28473 Magneto Assembly, L.H. 1 44-1- G28474 Magneto Assembly, L.H. 1 44-1- G38954 Harness Assembly, R.H. 1 44-1- G38955 Bracket, Fuel Discharge Tubes, 1-3-5 Side 1 66-36- G28295 Bracket, Fuel Discharge Tubes, 2-4-6 Side 1 66-36- G28295 Bracket, Fuel Discharge Tubes, 2-4-6 Side 1 66-36- G33154-9A20 Fuel Pump Assembly, Complete 1 66-30- G28008 Bracket, Fuel Discharge Tubes, 2-4-6 Side 1 66-30- G2806 Gasket 1 2-31- G31427A15 Manifold Valve Assembly 1 1 1 1 G4170-D30 G26334 Plug, Special 1 2-31- G31427A15 Manifold Valve Assembly 1 66-30- G28008 Bracket, Engine Mounting 1 6-3- G28008 Bracket, Engine Mounting 1 6-3- G28008 Bracket, Engine Mounting 1 6-3- G28008 Bracket, Engine Mounting 1 6-3- G28014 Generator, 24 Volt, 50 Amp and Associated Parts (See IO-470-U) 36- G28026A3 Fuel Injection Assembly, Complete 1 6-3- G33154-9A20 Fuel Pump Assembly, Complete 1 6-3- G33154-9A20 Fuel Pump Assembly, Complete 1 6-3- G33154-9A20 Fuel Pump Assembly, Complete 1 6-3- G33154-9A20 Fuel Pump Assembly, Complete 1				1	32-40
Associated Parts (See IO-470-U)					
639152		020 117	Associated Parts (See IO-470-U)		36-
628472 Magneto Assembly, Left Hand		639152			24-
628473 Magneto Assembly, Right Hand				1	44-1
636954		_		1	44-1
639262A3 Fuel Injection Assembly, Complete				1	44-17
638154-9A20 Fuel Pump Assembly, Complete 1 66-8 627315A1 Throttle and Control Assembly 1 67-631427A15 Manifold Valve 1 66-30 628260 Gasket, Exhaust Flange 6 19-42				1	* * *
627315A1 . Throttle and Control Assembly 1 67-631427A15 . Manifold Valve				1	66-8
631427A15				1	67-
10-470-D27 539914 Bracket, Engine Mounting 3 6-2 628008 Bracket, Engine Mounting 1 6-3 639152 Oil Cooler and Associated Parts (See IO-470-U) 24 628319 Sheave, Starter Adapter 1 32-40 629417 Generator, 24 Volt, 50 Amp and Associated Parts (See IO-470-U) 36- 628472 Magneto Assembly, L.H. 1 44-1 628473 Magneto Assembly, R.H. 1 44-1 636954 Harness Assembly 1 44-1 641701 Bracket, Fuel Discharge Tubes, 1-3-5 Side 1 66-36 628295 Bracket, Fuel Discharge Tubes, 2-4-6 Side 1 66-36 638154-9A20 Fuel Pump Assembly, Complete 1 66-8 630074A2 Throttle and Control Assembly 1 66-30 6470-D30 626334 Plug, Special 1 2-31 AN123866 Seal, O-Ring 1 2-31 AN123866 Seal, O-Ring 1 2-31 628008 Bracket, Engine Mounting 3 6-3 628008 Bracket, Engine Mounting 3 6-3 628019 Sheave, Generator Drive 1 32-40 639152 Oil Cooler and Associated Parts (See IO-470-U) 24- 639262A3 Fuel Injection Assembly, Complete 1 6-3 639152 Oil Cooler and Associated Parts (See IO-470-U) 24- 639154 Oil Cooler and Associated Parts (See IO-470-U) 24- 639154 Throttle and Control Assembly, Complete 1 6-8 639155 Oil Cooler and Associated Parts (See IO-470-U) 24- 639154 Fuel Pump Assembly, Complete 1 6-8 6301427A15 Manifold Valve 1 66-30 66-30 66-30 66-30 67-631427A15 Manifold Valve 1 66-30 66-30 66-30 66-30 66-30 66-30 66-30 66-30 66-30 66-30 67-7631427A15 Manifold Valve 1 66-30 66-30 66-30 66-30 66-30 66-30 66-30 66-30 66-30 66-30 67-631427A15 Manifold Valve 1 66-30 67-631427A15 Manifold Valve 1 66-30 67-631427A15 Manifold Valve 1 66-30 67-631427A15 Manifold Valve 1 66-30 67-631427A15 Manifold Valve 1 66-30 67-631427A15 10-70-10-10-10-10-10-10-10-10-10-10-10-10-10		*		1	
10-470-D27				-	
628008		020200	Gasket, Extidust Flange	Ü	10 12
628008	O 470 D27	E20014	Product Engine Mounting	3	6-2
639152 Oil Cooler and Associated Parts (See IO-470-U) 628319 Sheave, Starter Adapter	U-470-D27		Product Engine Mounting		
628319 Sheave, Starter Adapter				•	
629417 Generator, 24 Volt, 50 Amp and Associated Parts (See IO-470-U) 36- 628472 Magneto Assembly, L.H. 1 44-1 628473 Magneto Assembly, R.H. 1 44-1 636954 Harness Assembly 1 44-17 641701 Bracket, Fuel Discharge Tubes, 1-3-5 Side 1 66-36 628295 Bracket, Fuel Discharge Tubes, 2-4-6 Side 1 66-37 639263A3 Fuel Injection Assembly, Complete 1 68-86 630074A2 Throttle and Control Assembly 1 66-30 631427A15 Manifold Valve Assembly 1 66-30 626334 Plug, Special 1 2-30 625966 Gasket 1 2-31 AN123866 Seal, O-Ring 1 2-31 AN123866 Seal, O-Ring 3 6-3 628319 Sheave, Generator Drive 1 32-40 629417 Generator, 24 Volt, 50 Amp and Associated Parts (See IO-470-U) 36- 639152 Oil Cooler and Associated Parts (See IO-470-U) 24- 639262A3 Fuel Injection Assembly, Complete 1 66-8 627315A1 Throttle and Control Assembly 1 66-30				1	
Associated Parts (See IO-470-U) 36-				-	
628472 Magneto Assembly, L.H.		629417	Associated Ports (See IO 470.11)		36-
628473 Magneto Assembly, R.H. 1 44-1 636954 Harness Assembly		600470	Associated Parity (See 10-470-07	1	
636954 Harness Assembly				1	
641701 Bracket, Fuel Discharge Tubes, 1-3-5 Side 1 66-36 628295 Bracket, Fuel Discharge Tubes, 2-4-6 Side 1 66-37 639263A3 Fuel Injection Assembly, Complete 1 66-8 630074A2 Fuel Pump Assembly, Complete 1 66-8 630074A2 Throttle and Control Assembly 1 66-30 625966 Gasket 1 2-31 AN123866 Seal, O-Ring 1 2-31 539914 Bracket, Engine Mounting 3 628008 Bracket, Engine Mounting 1 63 628319 Sheave, Generator Drive 1 32-40 629417 Generator, 24 Volt, 50 Amp and Associated Parts (See IO-470-U) 24-639262A3 Fuel Injection Assembly, Complete 1 66-8 627315A1 Throttle and Control Assembly 1 67-631427A15 Manifold Valve 1 66-30				1	
628295 Bracket, Fuel Discharge Tubes, 2-4-6 Side 1 66-37 639263A3 Fuel Injection Assembly, Complete 1 66-8 630074A2 Fuel Pump Assembly, Complete 1 66-8 630074A2 Throttle and Control Assembly 1 631427A15 Manifold Valve Assembly 1 66-30 625966 Gasket 1 2-31 AN123866 Seal, O-Ring 1 2-31 539914 Bracket, Engine Mounting 3 628008 Bracket, Engine Mounting 1 6-3 628319 Sheave, Generator Drive 1 32-40 629417 Generator, 24 Volt, 50 Amp and Associated Parts (See IO-470-U) 36-639152 Oil Cooler and Associated Parts (See IO-470-U) 24-639262A3 Fuel Injection Assembly, Complete 1 66-8 627315A1 Throttle and Control Assembly 1 67-631427A15 Manifold Valve 1 66-30				-	
639263A3 Fuel Injection Assembly, Complete 1 638154-9A20 Fuel Pump Assembly, Complete 1 66-8 630074A2 Throttle and Control Assembly 1 631427A15 Manifold Valve Assembly 1 66-30 625966 Gasket 1 2-31 AN123866 Seal, O-Ring 1 2-31 539914 Bracket, Engine Mounting 3 628008 Bracket, Engine Mounting 1 63 628319 Sheave, Generator Drive 1 32-40 629417 Generator, 24 Volt, 50 Amp and Associated Parts (See IO-470-U) 36-639152 Oil Cooler and Associated Parts (See IO-470-U) 36-639262A3 Fuel Injection Assembly, Complete 1 638154-9A20 Fuel Pump Assembly, Complete 1 66-8 627315A1 Throttle and Control Assembly 1 66-30			Bracket, Fuel Discharge Tubes, 1-3-3 Side		
638154-9A20 . Fuel Pump Assembly, Complete 1 66-8 630074A2 . Throttle and Control Assembly 1 531427A15 . Manifold Valve Assembly 1 66-30 62-30 6				1	
630074A2				1	
631427A15				1	
O-470-D30 626334 Plug, Special				1	66.30
625966 Gasket		631427A15	. Manifold Valve Assembly	1	00-30
625966 Gasket	0.470.020	606004	Dhua Chaoial	1	2-30
AN123866 Seal, O-Ring	0-470-030			_	
539914 Bracket, Engine Mounting 3 6-3 628008 Bracket, Engine Mounting 1 6-3 628319 Sheave, Generator Drive 1 32-40 629417 Generator, 24 Volt, 50 Amp and 36- 36- 639152 Oil Cooler and Associated Parts (See IO-470-U) 24- 639262A3 Fuel Injection Assembly, Complete 1 **** 638154-9A20 Fuel Pump Assembly, Complete 1 66-8 627315A1 Throttle and Control Assembly 1 67- 631427A15 Manifold Valve 1 66-30				-	
628008 Bracket, Engine Mounting				•	
628319 Sheave, Generator Drive				1	
629417 Generator, 24 Volt, 50 Amp and Associated Parts (See IO-470-U)			Bracket, Engine Mounting	1	
Associated Parts (See IO-470-U)			Sheave, Generator Drive	•	52 40
639262A3 Fuel Injection Assembly, Complete		629417	Associated Parts (See IO-470-U)		
639262A3 Fuel Injection Assembly, Complete		639152			
638154-9A20 Fuel Pump Assembly, Complete 1 66-8 627315A1 Throttle and Control Assembly 1 67- 631427A15 Manifold Valve 1 66-30		639262A3	Fuel Injection Assembly, Complete	1	* * *
627315A1 Throttle and Control Assembly 1 67- 631427A15 Manifold Valve 1 66-30				1	66-8
631427A15 . Manifold Valve				1	67-
				1	66-30
OZUZUU — OUSKUL ENHUUSET MINNY FFFFFFFFFFFFFFF		628260	Gasket, Exhaust Flange	6	19-42

MODEL SPEC	PART NUMBER	12345 DESCRIPTION	QTY	FIGURE INDEX	
10-470-D42	626334	Plug, Special	1	2-30	
10 470 0-12	625966	Gasket	1	2-31	
	AN123866	Seal, O-Ring	1	2-32	
	539766	Rod Assembly, Oil Gauge	1	6-42	
	AN123860	. O-Ring	1	6-43	
	539910	Starter, 12 Volt	1	* * *	Sep.
	534316	Gasket, Starter-to-Adapter	1	31-5	
	627272	Generator, 12 Volt, 50 Amp	1	34-4	
	627690	Bracket, Generator Mounting	1	34-19	
	639152	Oil Cooler and Associated Parts (See IO-470-U)		24-	
	626745	Tube Assembly, Elbow, 1-3-5 Side	1	***	
	537873	Tube, Intake Manifold, Cylinder 1-5 & 6	3	53-2	
	537874	Tube, Intake Manifold, Cylinder No. 2	1	53-4	
	537875	Tube, Intake Manifold, Cylinder Nos. 3 & 4	2	53-3	•
10-470-D44	626334	Plug, Special	1	2-30	
10-470-044	625966	Gasket	1	2-31	
	AN123866	Seal, O-Ring	1	2-32	
	631481	Piston, 8:1 Compression Ratio	6	13-1	
	639565	Ring, Piston, Top Groove	6	13-2	
	639566	Ring, Piston, 2nd Groove	6	13-3	
	639663	Ring, Piston, Third Groove	6	13-4	
	627480	Ring, Piston, Fourth Groove	6	13-5	
	639152	Cooler Assembly, Oil and		*	· ~
	039102	Associated Parts (See IO-470-U)	1	24-	J
	628472	Magneto, Left Hand	1	44-1	* · ·
	628473	Magneto, Right Hand	1	44-1	
	636954	Harness Assembly	1	44-17	
	628295	Bracket, Fuel Lines, 2-4-6 Side	1	65-30	
	641701	Bracket, Fuel Lines, 1-3-5 Side	1	65-29	
	628260	Gasket, Exhaust Flange	6	19-42	
10 470 DE0	626334	Plug, Special	1	2-30	
10-470-D50	625966	Gasket	1	2-31	
		Seal, O-Ring	1	2-32	
	AN123866	Bracket, Engine Mounting	3	6-3	, 400
	539914	Bracket, Engine Mounting	1	6-3	
	628008 628319	Sheave, Generator Drive	1	32-40	
			•		
	629417	Generator, 24 Volt, 50 Amp and Associated Parts (See IO-470-U)		36-	
	639152	Cooler Assembly, Oil and		24-	
		Associated Parts (See IO-470-U)	1	44-1	į
	628472	Magneto Assembly, Left Hand	1	44-1	, r. A
	628473	Magneto Assembly, Right Hand	1	44-17	
	636954	Harness Assembly) 1	44-1/ ***	
	639263A3	Fuel Injection Assembly, Complete	1	66-8	
	638154-9A20		1	66-8 ***	· 🗼
	630074A3	. Throttle and Control Assy	1	66-30	V
	631427A15	. Manifold Valve Assembly	1	19-42	P. Valley
	628260	Gasket, Exhaust Flange	1	19-42	

	MODEL SPEC	PART NUMBER	12345 DESCRIPTION	QTY	FIGURE INDEX
`	10-470-D52	639152	Oil Cooler and Associated Parts (See IO-470-U)		24-
		628472	Magneto Assembly, L.H.	1	44-1
		628473	Magneto Assembly, R.H.	1	44-1
			Harness Assembly	1	44-17
		636954	Bracket, Fuel Discharge Tubes, 1-3-5 Side	1	66-36
		641701	Bracket, Fuel Discharge Tubes, 2-4-6 Side	1	66-37
		628295	Bracket, Fuel Discharge Tubes, 2-4-0 Side	•	00-37
	IO-470-E6	534445	Valve, Oil Temperature Control	1	* * *
		534316	Gasket, Starter-to-Adapter	1	3 1 -5
		627272	Generator, 12 Volt, 50 Amp	1	34-4
		632563A7	Housing Assembly, Oil Pump and		
		3	Associated Parts (See IO-470-F)	1	2 9 -
		628472	Magneto Assembly, Left Hand	1	44-1
		628473	Magneto Assembly, Right Hand	1	44-1
		636954	Harness Assembly	1	44-17
		641701	Bracket, Fuel Line, 1-3-5 Side	1	65-29
		628295	Bracket, Fuel Line, 2-4-6 Side	1	65-30
		-0.4.4.5	V. L. O'l Terror anatoms Control	1	***
	10-470-E8	534445	Valve, Oil Temperature Control	1	* * *
		539910	Starter, 12 Volt	1	31-5
		534316	Gasket, Starter-to-Adapter	•	31-3
		632563A7	Housing Assembly, Oil Pump and		29-
			Associated Parts (See IO-470-F)		65-29
		641701	Bracket, Fuel Line, 1-3-5 Side		
	•	628295	Bracket, Fuel Line, 2-4-6 Side		65-30
	IO-470-E13	534445	Valve, Oil Temperature Control	1	* * *
	10 170 270	539910	Starter, 12 Volt	1	* * *
		534316	Gasket, Starter-to-Adapter	1	31-5
		627272	Generator, 12 Volt, 50 Amp	1	34-4
		632563A7	Housing Assembly, Oil Pump and		
			Associated Parts (See IO-470-F)		29-
		641701	Bracket, Fuel Line, 1-3-5 Side	1	65-29
		628295	Bracket, Fuel Line, 2-4-6 Side	1	65-30
	IO-470-F1	539374	Washer (CC-to-CC at O-Ring)		4-15
j	10-470-1 1	539518	Bracket, Engine Mounting	4	6-2
		632965A1	Rod Assembly, Oil Gauge	1	6-42
		AN123860	O-Ring	1	6-43
		539910	Starter, 12 Volt	1	***
				A	6-2
1	IO-470-F3	539518	Bracket, Engine Mounting	4	6-42
		629409	Rod, Oil Gauge	1	6-42 6-43
		AN123860	O-Ring	1	
		626189	Oil Cooler and Associated Parts (See IO-470-M)		24- ***
		632823	Bracket, O/C (Secure to Rocker Cover)	I A	* * *
		632824	Bracket, Oil Cooler	1	***
		629806	Bolt, Special, 1/4-28	1	***
-		536779	Washer	7	***
		2437	Nut	1	* * *

MODEL SPEC	PART NUMBER	12345 DESCRIPTION	QTY	FIGURE INDEX
10-470-F3	628472	Magneto Assembly, L.H.	1	44-1
(Continued)	628473	Magneto Assembly, R.H.	1	44-1
(50::::::::::::::::::::::::::::::::::::	634675	Spark Plug	12	44-16
	636954	Harness Assembly	1	44-17
	641701	Bracket, Fuel Discharge Tubes, 1-3-5 Side	1	66-36
	628295	Bracket, Fuel Discharge Tubes, 2-4-6 Side	1	66-37
	640106A11	Fuel Injection Assembly, Complete	1	* * *
	638154-9A3	. Fuel Pump Assembly, Complete	1	* * *
	640118A5	. Throttle and Control Assembly	1	* * *
	631427A17	. Manifold Valve Assembly	1	61-26
10-470-F4	642175A1 ^①	Crankcase Studding Assembly	1	***
10-470-F4	401804	. Stud, 1/4 x 1-1/16 Inch Long (Cam Hole Cover)	2	***
	531661	. Stud, 1/4 x 2-7/8 Inch Long	2	2-6
		. Stud, 1/4 x 1-5/16 Inch Long	5	2-10
	401808	. Stud, No. 10 x 5/8 Inch Long	_	
	535956	(Oil Seal Retainer)	2	***
	.0.007	. Stud, 5/16 x 2 - 1/8 Inch Long	4	2-18
	401837	. Stud, 5/16 x 2 - 1/8 inch Long	1	4-15
	539374	Washer, C/C-to-C/C at O-Ring	3	5-2
	539518	Bracket, Engine Mounting	1	5-3
	628257	Bracket, Engine Mounting, Cyl. No. 2	1	6-42
	629409	Rod Assembly, Oil Gauge	١.	24-
	626189	Oil Cooler and Associated Parts (See IO-470-M)	1	24°
	632823	Bracket, O/C (Secure to Rocker Cover)	1	* * *
	632824	Bracket, Oil Cooler	1	***
	629806	Bolt, Special, 1/4 - 28	1	***
	536779	Washer	1	***
	2437	Nut	1	
	637847	Starter, 24 Volts	1	32-1
	628319	Sheave, Generator Drive	1	32-40
	629417	Generator, 24 Volt, 50 Amp and		
		Associated Parts (See IO-470-U)		36-
	628472	Magneto Assembly, Left Hand	1	44-1
	628473	Magneto Assembly, Right Hand	1	44-1
	636954	Harness Assembly	1	44-17
	640106A9	Fuel Injection Assembly, Complete	1	* * *
	638154-9A18		1	* * *
	640118A2	. Throttle and Control Assembly	1	* * *
	631427A17	. Manifold Valve Assembly	1	61-26
	628873	Regulator, Voltage	1	76-1
IO-470-F5	642175A1 Q	Crankcase Studding Assembly	1	***
	401804	. Stud, 1/4 x 1-1/16 Inch Long		
		(Cam Hole Cover)	2	* * *
	531661	. Stud, 1/4 x 2-7/8 Inch Long	2	2-6
	401808	Stud, 1/4 x 1-5/16 Inch Long	5	2-10
	535956	. Stud, No. 10 x 5/8 Inch Long		
	333330	(Oil Seal Retainer)	2	* * *
	401837	Stud, 5/16 x 2-1/8 Inch Long	4	2-18
		Washer, C/C-to-C/C at O-Ring	1	4-15
	539374	washer, 6/6-to-6/6 at 6-ming	•	

	MODEL SPEC	PART NUMBER	12345 DESCRIPTION	QTY	FIGURE INDEX
	10-470-F5	539518	Bracket, Engine Mounting	4	6-2
	(Continued)	629409	Rod Assembly, Oil Gauge	1	6-42
		626189	Oil Cooler and Associated Parts (See IO-470-M)		24-
		632823	Bracket, O/C (Secure to Rocker Cover)	1	* * *
		632824	Bracket, Oil Cooler	1	* * *
		629806	Bolt, Special, 1/4 - 28	1	* * *
		536779	Washer	1	* * *
		2437	Nut	1	* * *
		628472	Magneto Assembly, Left Hand	1	44-1
		628473	Magneto Assembly, Right Hand	1	44-1
		636954	Harness Assembly	1	44-17
		640106A8	Fuel Injection Assembly, Complete	1	* * *
		638154-9A3	. Fuel Pump Assembly, Complete	1	* * *
		640118A2	. Throttle and Control Assembly	1	***
		631427A17	. Manifold Valve Assembly	1	61-26
		627321	Regulator, Voltage	1	76-1
	10 470 57	04047444 6) o to the Assemble	1	***
	IO-470-F7	642174A1 ^Q	O, a, measure of the management of the managemen	•	
		401804	. Stud, 1/4 x 1-1/16 Inch Long	2	***
		504004	(Cam Hole Cover)	2	2-6
		531661	Stud, 1/4 x 2-7/8 Inch Long	2 5	2-0 2-10
		401808	Stud, 1/4 x 1-5/16 Inch Long	5	2-10
		535956	. Stud, No. 10 x 5/8 Inch Long	2	***
		404007	(Oil Seal Retainer)	4	2-18
		401837	. Stud, 5/16 x 2-1/8 Inch Long	1	2-18
		631927	. Guide, Oil Gauge Rod	1	6- 42
		632062-4A1	Rod Assembly, Oil Gauge	1	6-43
		25328	. O-Ring	1	5-47
		631928	Hose	1	5-47 5-48
		632151	Housing	3	5-46 5-49
		36151R	Clamp	2	
		631266-1	Clamp	i 1	5-50 5-51
		632149	Bracket	1	5-51 5-52
		22904	Screw	1	5-52 5-53
N.		2471	Washer	1	5-53 5-54
į.		22910	Washer	1	5-5 4 5-55
		13XX1896	Nut	1	5-55 4-15
		539374	Washer, C/C-to-C/C at O-Ring	2	4-15 5-2
		539518	Bracket, Engine Mounting	3	5-2 5-3
		628257	Bracket, Engine Mounting, Cyl. No. 2	1	5-3 5-4
		632357	Spacer, Cylinder No. 2	ı	24-
		626189	Oil Cooler & Associated Parts (See 10-470-M)	1	***
		632823	Bracket, O/C (Secure to Rocker Cover)	1	* * *
		632824	Bracket, Oil Cooler	1	* * *
		629806	Bolt, Special, 1/4 - 28	1	* * *
		536779	Washer	1	***
		2437	Nut	2	42-1
		625765	Magneto Assembly	1	42-7
		633311	ndiness Assembly		

MODEL SPEC	PART NUMBER	12345 DESCRIPTION	QTY	FIGURE INDEX
10-470-F7	640106A5	Fuel Injection Assembly, Complete	1	***
(Continued)	638154-9A3	. Fuel Pump Assy., Complete	1	* * *
,	640118A2	. Throttle and Control Assembly	1	***
	631427A17	. Manifold Valve Assembly	1	61-26
	627321	Regulator, Voltage	1	76-1
IO-470-F18	626334	Plug Special	1	2-30
	625966	Gasket	1	2-31
	AN123866	Seal, O-Ring	1	2-32
	539518	Bracket, Engine Mounting	3	6-2
	628257	Bracket, Engine Mounting	1	6-2
	637847	Starter, 24 Volt	1	32-1
	628319	Sheave, Starter Adapter	1	32-40
	625765	Magneto Assembly	2	42-1
	634675	Spark Plug	1	42-6
	633311	Harness Assembly	1	42-7
	641701	Bracket, Fuel Discharge Tubes, 1-3-5 Side	1	66-1
	628295	Bracket, Fuel Discharge Tubes, 2-4-6 Side	1	66-2
	640106A10	Fuel Injection Assembly, Complete	1	* * *
	638154-9A18	. Fuel Pump Assembly	1	* * *
	640118A5	. Throttle and Control Assembly	1	* * *
	631427A17	. Manifold Valve Assembly	1	61-26
	639151	Oil Cooler and Associated Parts		80-
IO-470-F19	642175A1 ©	Crankcase Studding Assembly	1	* * *
10-470-1 13	401804	. Stud, 1/4 x 1-1/16 Inch Long (Cam Hole Cover)	2	***
	531661	. Stud, 1/4 x 2-7/8 Inch Long	2	2-6
	401808	. Stud, 1/4 x 1-5/16 Inch Long	5	2-10
	535956	Stud, No. 10 x 5/8 Inch Long (Oil Seal Retainer)	2	* * *
	404007	Stud. 5/16 x 2 - 1/8 Inch Long	4	2-18
	401837	Bracket, Engine Mounting	4	6-2
	639518	Rod, Oil Gauge	1	6-42
	629409	O-Ring	1	6-43
	AN123860 626189	Oil Cooler and Associated Parts	•	24-
	641701	Bracket, Fuel Discharge Tubes, 1-3-5 Side	1	66-36
	628295	Bracket, Fuel Discharge Tubes, 2-4-6 Side	1	66-37
	640106A11	Fuel Injection Assembly, Complete	1	* * *
	638154-9A3	. Fuel Pump Assembly, Complete	1	***
	640118A5	. Throttle and Control Assembly	1	* * *
	631427A17	. Manifold Valve Assembly	1	61-26
10-470-F23	642174A1 C		1	* * *
	401804	. Stud, 1/4 x 1-1/16 Inch Long (Cam Hole Cover)	2	* * *
	531661	. Stud, 1/4 x 2-7/8 Inch Long	2	2-6
	401808 535956	Stud, 1/4 x 1-5/16 Inch Long Stud, No. 10 x 5/8 Inch Long	5	2-10
	555550	(Oil Seal Retainer)	2	* * *
	401837	Stud, 5/16 x 2-1/8 Inch Long	4	2-18
	631927	. Guide, Oil Gauge Rod	1	2-29

	MODEL SPEC	PART NUMBER	12345 DESCRIPTION	QTY	FIGURE INDEX
	10-470-F23	632062-4A1	Rod Assembly, Oil Gauge	1	6-42
_	(Continued)	25328	. O-Ring	1	6-43
	•	631928	Hose	1	5-47
		632151	Housing	1	5-48
		36151R	Clamp	2	5-49
		631266-1	Clamp	1	5-50
		632149	Bracket	1	5-51
		22904	Screw	1	5- 52
		2471	Washer	1	5-53
		22910	Washer	1	5- 5 4
		13XX1896	Nut	1	5- 55
		539374	Washer, C/C-to-C/C at O-Ring	1	4-15
		539518	Bracket, Engine Mounting	3	5-2
		628257	Bracket, Engine Mounting, Cyl. No. 2	1	5-3
		632357	Spacer	1	5-4
		626189	Oil Cooler & Associated Parts (See IO-470-M)		24-
		632823	Bracket, O/C (Secure to Rocker Cover)	1	* * *
		632824	Bracket, Oil Cooler	1	* * *
		629806	Bolt, Special, 1/4 - 28	1	***
		536779	Washer	1	* * *
		2437	Nut	1	* * *
		625765	Magneto Assembly	2	42-1
		633311	Harness Assembly	1	42-7
		640106A8	Fuel Injection Assembly, Complete	1	* * *
		638154-9A3	. Fuel Pump Assembly, Complete	1	* * *
	•	640118A2	. Throttle and Control Assembly	1	* * *
		631427A17	. Manifold Valve Assembly	1	61-26
	IO-470-F26	642174A1 ©	Crankcase Studding Assembly	1	***
		401804	. Stud, 1/4 x 1-1/16 Inch Long		
			(Cam Hole Cover)	2	***
		531661	Stud, 1/4 x 2-7/8 Inch Long	2	2-6
		401808	. Stud, 1/4 x 1-5/16 Inch Long	5	2-10
		535956	. Stud, No. 10 x 5/8 Inch Long		
			(Oil Seal Retainer)	2	* * *
		401837	. Stud, 5/16 x 2-1/8 Inch Long	4	2-18
		631927	. Guide, Oil Gauge Rod	1	2-29
		626334	Plug, Special	1	2-30
		625966	Gasket	1	2-31
		AN123866	Seal, O-Ring	1	2-32
		539518	Bracket, Engine Mounting	3	5- 2
		628257	Bracket, Engine Mounting, Cylinder No. 2	1	5-2
1		632357	Spacer	1	5-4
		637847	Starter, 24 Volt	1	32-1
		625765	Magneto Assembly	2	42-1
		633311	Harness Assembly	1	42-7
		641701	Bracket, Fuel Discharge Tubes, 1-3-5 Side	1	66-36
		628295	Bracket, Fuel Discharge Tubes, 2-4-6 Side	1	66-37
		639151	Oil Cooler and Associated Parts		80-
		000101	On Cocioi una / 10000iatea - arte		

MODEL SPEC	PART NUMBER	12345 DESCRIPTION	ΩΤΥ	FIGURE INDEX
	640106A11	Fuel Injection Assembly, Complete	1	* * *
10-470-F26	638154-9A3	Fuel Pump Assembly, Complete	1	***
(Continued)	640118A5	. Throttle and Control Assembly	1	* * *
	631427A17	. Magneto Valve Assembly	1	61-26
	F20772	Neck Assembly, Oil Filler	1	6-27
10-470-J6	538773	Cap Assembly, Oil Filler	1	6-29
	640620-5	Housing Assembly, Oil Pump	1	29-2
	632563A16	Generator, 12 Volt, 50 Amp	1	34-4
	628272	Fuel Injection Assembly, Complete	- 1	* * *
	639248A4	Fuel Pump Assembly, Complete	1	60-8
	638154-9A1	. Throttle and Control Assembly	1	* * *
	625487A3 631427A15	. Manifold Valve Assembly	1	60-26
10 470 1/0	000141	Thermo Unit, (Install in No. 4 Cyl.)	. 1	***
10-470-K3	629141	Washer, Lock, Thermo-Cyl. Head	1	* * *
	AN936A4 MS35649-242		1	* * *
		Generator, 12 Volt, 50 Amp	1	34-4
10-470-K6	627272	Thermo Unit, (Install in No. 4 Cyl.)	1	***
	629141	Washer, Lock, Thermo-to-Cyl. Head	1	***
	AN936A4 MS35649-242	~ 1 11 1	1	* * *
IO-470-K11	632563A33	Housing Assembly, Oil Pump	1	* * *
10 470 KT	21208A2	. Housing Assembly, Tach Drive	1	30-7
	636141	Magneto Assembly	2	***
	633311	Harness Assembly	1	42-7
	629141	Thermo Unit (Install in No. 4 Cyl.)	1	* * *
•	ΔN936Δ4	Washer, Lock, Thermo-to-Cylinder Head	1	* * *
	MS35649-242	Nut, Thermo-to-Cylinder Head	1	* * *
10-470-K12	632077	Adapter Assy., Mag. & Accy. Drive (2-4-6 Side)	1	40-13
10-470-K12	534861	Adapter Assy., Mag. & Accy. Drive	1	40-13
	628472	Magneto Assembly, Left Hand	1	44-1
	628473	Magneto Assembly, Right Hand	1	44-1
	636954	Harness Assembly	1	44-17
	629141	Thermo Unit (Install in No. 4 Cyl.)	1 .	***
	AN936A4	Washer, Lock, Thermo-to-Cyl. Head	1	* * *
	MS35649-242		1	* * *
10-470-L3	539518	Bracket, Engine Mounting	3	6-2
10-4/0°L3	628257	Bracket Engine Mounting	1	6-2
	629416	Generator, 24 Volt 40 Amp	1	* * *
	COCOE A	Harness Assembly	1	44-17
	636954	Fuel Injection Assembly, Complete	1	* * *
	639254A6		1	* * *
	638154-9A16	. Throttle and Control Assembly	1	* * *
	629770A7 631427-3A2	. Manifold Valve Assembly	1	63-26

	MODEL SPEC	PART NUMBER	12345 DESCRIPTION	QTY	FIGURE INDEX
	10-470-L5	642176A1 ①	Crankcase Studding Assembly	1	* * *
		539518	Bracket Engine Mounting	3	5-2
		628257	Bracket, Engine Mounting (No. 2 Cyl.)	1	5-3
		629416	Generator, 24 Volt, 40 Amp	1	* * *
		029410	(See IO-470-M 35-1 thru 35-21 for Assoc. Parts)		
		000054	Harness Assembly	1	44-17
		636954	Fuel Injection Assembly, Complete	1	* * *
		639254A5		1	***
		638154-9A16	. Fuel Pump Assy., Complete	1	***
		629770A4	. Throttle and Control Assembly	1	62.26
		631427-3A2	. Manifold Valve Assembly	ı	63-26
	IO-470-L8	539518	Bracket, Engine Mounting	3	6-2
	10 170 20	628257	Bracket, Engine Mounting	1	6-2
		636954	Harness Assembly	1	44-17
		639253A12	Fuel Injection Assembly, Complete	1	* * *
		638154-9A15	Fuel Pump Assembly, Complete	1	* * *
			. Throttle and Control Assembly	1	* * *
		629770A8	. Manifold Valve Assembly	1	63-26
		631427-3A2	. Wannoid Valve Assembly		
	IO-470-L9	639518	Bracket, Engine Mounting	3	6-2
	10-470-L3	628257	Bracket, Engine Mounting	1	6-2
		631111	Alternator and Associated Parts		37-
			Magneto Assembly, L.H.	1	* * *
		632958	Magneto Assembly, R.H	1	* * *
-		632959	Harness Assembly	1	* * *
		636952	Fuel Injection Assembly, Complete	1	* * *
		639253A12		1	* * *
		638154-9A15	Fuel Pump Assembly, Complete	1	***
		629770A8	. Throttle and Control Assembly	1	63-26
		631427-3A2	. Manifold Valve Assembly	•	03-20
	IO-470-L11	642176A1 O	Crankcase Studding Assembly	1	* * *
			(642176A1 is the same as 642177A1 except omit 2-3)		
		539518	Bracket, Engine Mounting	3	5-2
		628257	Bracket, Engine Mounting (Cyl. No. 2)	1	5-3
		631111	Alternator and Associated Parts	1	37-
		639253A9	Fuel Injection Assembly, Complete	1	* * *
			. Fuel Pump Assy., Complete	1	* * *
		638154-9A15	. Throttle and Control Assembly	1	* * *
		629770A3	. Manifold Valve Assembly	1	63-26
		631427-3A2	. Manifold Valve Assembly	·	
	IO-470-L12	642176A1 ^①		1	***
			(642176A1 is the same as 642177A1 except omit 2-3)	3	5-2
		539518	Bracket, Engine Mounting		5-2 5-3
		628257	Bracket, Engine Mounting, Cyl. No. 2	1	3-3 ***
		639254A5	Fuel Injection Assembly, Complete	1	***
		638154-9A16	. Fuel Pump Assy., Complete	7	* * *
		629770A4	. Throttle and Control Assembly	1	
		631427-3A2	. Manifold Valve Assembly	1	63-26

MODEL SPEC	PART NUMBER	12345 DESCRIPTION	QTY	FIGURE INDEX
IO-470-L13	539518	Bracket, Engine Mounting	3	6-2
10 170 210	628257	Bracket, Engine Mounting	1	6-2
	636954	Harness Assembly	1	44-17
	639254A6	Fuel Injection Assembly, Complete	1	***
	638154-9A16	. Fuel Pump Assembly, Complete	1	***
	629770A7	. Throttle and Control Assembly	1	***
	631427-3A2	. Manifold Valve Assembly	1	63-26
IO-470-L15	642176A1 ①	Crankcase Studding Assembly	1	* * *
	539518	Bracket, Engine Mounting	1	6-2
	634673	Bracket, Engine & Alt. Mounting	1	37-4
	641658	Alternator	1	***
	640261	Sheave, Alternator Driven	1 -	* * *
	634617	Bracket, Adjusting Arm	1	* * *
	530346	Screw, 5/16 x 7/8, Alternator-to-Arm	1	***
	13XX202B	Washer, Lock, Alternator-to-Arm	1	***
	537539	Washer, Alternator-to-Arm	2	* * *
	537750	Screw, 5/16 x 1-1/8 Arm to-Starter Adpt	1	* * *
	501868	Washer, Tab, Arm to Starter Adapter	1	* * *
	634657	Bolt, 3/8 x 4-39/64 Alt-to-Bracket	1	***
	22786	Washer, Alternator-to-Bracket	2	* * *
	2441	Nut, Alternator-to-Bracket	1	***
	539547-32.00		1	***
	635169	Sheave, Starter	1	32-40
	632958	Magneto Assembly, Left Hand	1	***
	632959	Magneto Assembly, Right Hand	1	***
	636952	Harness Assembly	1	
	639253A9	Fuel Injection Assembly, Complete	1	* * *
	638154-9A15		1	***
	629770A3	. Throttle and Control Assembly	1	***
	631427-3A2	. Manifold Valve Assembly	1	63-26
IO-470-L16	642176A1 C	(642176A1 same as 642177A1 except omit 2-3)	1	***
	539518	Bracket, Engine Mounting	3	5-2
	628257	Bracket, Engine Mounting, Cyl. No. 2	1	5-3
	631111	Alternator and Associated Parts		37-
	639151	Oil Cooler and Associated Parts	•	81- ***
	632958	Magneto Assembly, Left Hand	1	***
	632959	Magneto Assembly, Right Hand	1	***
	636952	Harness Assembly	1	***
	639253A9	Fuel Injection Assembly, Complete	1	***
	638154-9A15	. Fuel Pump Assy., Complete	1	
	629770A3	. Throttle and Control Assembly	1	***
	631427-3A2	. Manifold Valve Assembly	1	63-26
IO-470-L18	642176A1 C	Crankcase Studding Assembly	1	***

	MODEL SPEC	PART NUMBER	12345 DESCRIPTION	QTY	FIGURE INDEX
	IO-470-L18	539518	Bracket, Engine Mounting	3	5-2
_	Continued)	628257	Bracket, Engine Mounting, Cylinder No. 2	1	5-3
	Continuca	631111	Alternator and Associated Parts		37-
		632958	Magneto Assembly, Left Hand	1	* * *
		632959	Magneto Assembly, Right Hand	1	* * *
		636952	Harness Assembly	1	* * *
		639253A9	Fuel Injection Assembly, Complete	1	* * *
			. Fuel Pump Assy., Complete	1	***
		638154-9A15	. Throttle and Control Assembly	1	* * *
		629770A3	. Manifold Valve Assembly	1	63-26
		631427-3A2	. Manifold Valve Assembly	,	03-20
	10-470-L19	642525	Crankcase Studding Assembly	1	* * *
		635169	Sheave, Starter Adapter	1	32-40
		634673	Bracket, Engine & Alternator Mounting	1	37-4
		641658	Alternator	1	* * *
		640261	Sheave, Alternator Driven	1	* * *
		629825	Bracket, Adjusting Arm	1	* * *
		530346	Screw, 5/16 x 7/8, Altto-Arm	1	* * *
		13XX202B	Washer, Lock, Alternator-to-Arm	1	* * *
		537539	Washer, Alternator-to-Arm	2	* * *
		537750	Screw, 5/16 x 1-1/8, Arm-to-Str. Adpt	1	* * *
		501868	Washer, Tab, Arm to-Starter-Adpt	1	* * *
		634657	Bolt, 3/8 x 4-39/64, Alt-to-Bracket	1	* * *
		22786	Washer, Alternator-to-Bracket	2	* * *
	_	2441	Nut, Alternator-to-Bracket	1	* * *
		539547-31.19	Belt	1	* * *
		636141	Magneto Assembly	2	* * *
		636140	Harness Assembly	1	* * *
		639151	Oil Cooler and Associated Parts	1	80-
		639253A9	Fuel Injection Assembly, Complete	1	***
		638154-9A15	. Fuel Pump Assy., Complete	1	***
		629770A3	. Throttle and Control Assembly	1	* * *
		631427-3A2	. Manifold Valve Assembly	1	63-26
N.	IO-470-L20	642176A1 ①	Crankcase Studding Assembly	1	***
		F00F40	Bracket, Engine Mounting	3	5-2
		539518	Bracket, Engine Mounting, Cyl. No. 2	1	5-3
		628257	Generator 24 Volt, 40 Amp	1	***
		629416	(See IO-470-M 35-1 thru 35-21 for Associated Parts)	•	
		C220E0	Magneto Assembly, Left Hand	1	***
1		632958	Magneto Assembly, Right Hand	1	***
		632959	Harness Assembly	1	***
		636952	Fuel Injection Assembly, Complete	1	***
		639253A11		-	* * *
		638154-9A19	. Fuel Pump Assy., Complete	1	***
		629770A3	. Throttle and Control Assembly	1 1	63-26
		631427-3A2	. Manifold Valve Assembly	1	03-20

MODEL SPEC	PART NUMBER	12345 DESCRIPTION	QTY	FIGURE INDEX
		Crankcase Studding Assembly	1	***
IO-470-L21	642525	Sheave, Starter Adapter	1	32-40
	635169	Bracket, Engine & Alt. Mounting	1	37-4
	634673	Alternator	1	***
	641658	Sheave, Alternator Driven	1	***
	640261	Bracket, Adjusting Arm	1	***
	629825	Screw, 5/16 x 7/8, Alternator-to-Arm	1	***
	530346	Washer, Lock, Alternator-to-Arm	1	* * *
	13XX202B	Washer, Alternator-to-Arm	2	***
	537539	Screw, 5/16 x 1-1/8, Arm to-Starter Adpt	1	* * *
	537750	Washer, Tab, Arm-to-Starter Adapter	1	***
	501868	Bolt, 3/8 x 4-39/64, Alt-to-Bracket	1	* * *
	634657	Bolt, 3/8 x 4-39/04, Alt-to-Dracket	2	***
	22786	Washer, Alternator-to-Bracket	1	* * *
	2441	Nut, Alternator-to-Bracket	1	***
	539547-31.19	Belt	2	* * *
	640030	Magneto Assembly	1	* * *
	640031	Harness Assembly	1	***
	639253A9	Fuel Injection Assembly Complete	1	***
	638154-9A15	. Fuel Pump Assembly, Complete	1	***
	629770A3	. Throttle and Control Assembly	1	
	631427-3A2	. Magneto Valve Assembly	1	63-26
IO-470-N3	642181A1 ©	Crankcase Studding Assembly	1	***
10-470-113	401861	. Stud, 3/8 x 1-3/4 Inch Long	1	2-3
	637847	Starter, 24 Volts	1	32-1
	629417	Generator, 24 Volt, 50 Amp, and Associated Parts (See IO-470-M 35-1 thru 35-20)		
	630907	Bracket, Generator Mounting	1	35-21
	629204	Plate, Generator Bracket	1	***
	_	Fuel Injection Assembly, Complete	1	***
	639265A3	Fuel Pump Assembly	1	* * *
	638154-9A7	. Elbow, 90 Degree, F/P Outlet	1	70-B
	627119	. Fitting, Connector, F/P Outlet	1	70-B
	628438	. Elbow, 90 Degree, Vapor Return	1	70-D
	627119 628438	. Fitting, Connector, Vapor Return	1	70-D
IO-470-N7	636954	Harness Assembly	1	44-17
10 470 N10	632663	Bracket, Engine Mounting	4	***
10-470-N10	638152A1	Rod Assembly, Oil Gauge	1	6-42
	- - · · · · · · · · · · · · · · · · · ·	O-Ring	1	6-43
	AN123860	Magneto Assembly	2	***
	636141	Harness Assembly	1	42-7
	633311	Nut, Exhaust Flange	24	19-41
	536038	Fuel Injection Assembly, Complete	1	***
	639355A4	Fuel Injection Assembly, Complete	1	62-8
	638154-9A1	Fuel Pump Assembly, Complete	1	***
	639123A2	. Throttle and Control Assembly	1	* * *
	631427A20	. Manifold Valve Assembly	•	_

	MODEL SPEC	PART NUMBER	12345 DESCRIPTION	QTY	FIGURE INDEX
	10-470-N11	632663	Bracket, Engine Mounting	4	***
_	70 170 1111	638152A1	Rod Assembly, Oil Gauge	1	6-42
		AN123860	. O-Ring	1	6-43
		536038	Nut, Exhaust Flange	24	19-41
		640030	Magneto Assembly	2	* * *
		636603	Harness Assembly	1	* * *
		639355A4	Fuel Injection Assembly, Complete	1	87-
		638154-9A1	. Fuel Pump Assembly, Complete	1	62-8
		639123A2	. Throttle and Control Assembly	1	***
		631427A20	. Manifold Valve Assembly	1	***
		031427A20	. Mainfold Valve Assembly	•	
	IO-470-N12	642180A1 ①	Crankcase Studding Assembly	1	* * *
		402066	. Stud, 3/8 x 1-7/8 (Alternator Bracket)	2	2-3
		401945	. Stud, 3/8 x 1-5/8 (Alternator Bracket)	2	2-3
		632663	Bracket, Engine Mounting	4	* * *
		538801	Neck Assembly, Oil Filler	1	6-27
		638152A1	Rod Assembly, Oil Gauge	1	6-42
		AN123860	. O-Ring	1	6-43
		637847	Starter, 24 Volts	1	32-40
		641658	Alternator	1	***
		640261	Sheave, Alternator	1	***
		634649	Bracket, Engine & Alternator Mounting	1	* * *
		AN960-616L	Washer, Alt. Bracket-to-Crankcase	4	***
		2441	Nut, Alt. Bracket-to-Crankcase	4	* * *
_		634657	Bolt, 3/8 x 4-39/64, Altto-Bracket	1	* * *
		22786	Washer, Alternator-to-Bracket	2	* * *
		2441	Nut, Alternator-to-Bracket	1	* * *
		634617	Bracket, Adjusting Arm	1	* * *
		530346	Screw, 5/16 x 7/8, Adj. Arm-to-Alternator	1	* * *
		537539	Washer, Adj. Arm to-Alternator	2	***
			•	1	***
		539547-32.00		1	***
		632563A34	Housing Assembly, Oil Pump]	29-37
		538516	. Gear Assy, Oil Pump & Tach Drive	1	29-37 29-38
		535634	Dowel	1	29-36 29-40
		535900	. Gear, Bevel, Tach Drive	1	29-40
		640525	Screen Assembly, Oil	1	29-50 29-51
		AN123866 538789A1	. Gasket, O-Ring	1	
			Parts (See IO-470-L)		30-9
		640030	Magneto Assembly	2	***
		636603	Harness Assembly	1	* * *
		536038	Nut, Exhaust Flange	24	19-41
		639355A4	Fuel Injection Assembly	1	* * *
		638154-9A1	. Fuel Pump Assembly, Complete	1	62-8
		639123A2	. Throttle and Control Assembly	1	***
		631427A20	. Manifold Valve Assembly	1	***
	O 470 C2	642160A1 ()	Crank ages Chudding Assembly	1	* * *
	つ-470-S2	642168A1 ^①	Crank case Studding Assembly	1 -	•
		401893	. Stud, 1/4 x 1-1/4 Inch Long	5	2-10

MODEL SPEC	PART NUMBER	12345 DESCRIPTION	ΩΤΥ	FIGURE INDEX	
10-470-S2	626189	Oil Cooler and Associated Parts (See IO-470-M)		24-	ines T
(Continued)	625765	Magneto Assembly	2	42-1	**
(Continued)	633311	Harness Assembly	1	42-7	_
10-470-S3	626765	Magneto Assembly	2	42-1	
10 170 00	633311	Harness Assembly	2	42-7	
10-470-S8	642168A1 ①	Crankcase Studding Assembly	1	***	
.0 ,, 0 00	401893	Stud 1/4 x 1-1/4 Inch Long	5	2-10	
	626189	Oil Cooler and Associated Parts (See IO-470-M)		24-	
	632823	Bracket, O/C (Secure to Rocker Cover)	1	* * *	
	632824	Bracket, Oil Cooler	1	***	
	629806	Bolt, Special, 1/4 - 28	1	***	
	536779	Washer	1	* * *	
	2437	Nut	1	***	
	625765	Magneto Assembly	1	42-1	
	633311	Harness Assembly	1	42-7	
10-470-U3	628136	Washer, Thrust	4	9-11	
IO-470-V2	633942	Bracket, Engine Mounting	1	* * *	
10-470-72	631111	Alternator	• 1	37-1	
	631094	Fan, Alternator	1	37-2	
	633953	Sheave, Alternator	1	37-3	
	633917	Bracket, Alternator Adjustment Arm	1	* * *	
	628730	Screw, 5/16 X 1, Alternator-to-Adjustment Arm	1	* * *	
	537539	Washer, Alternator-to-Adjustment Arm	-1	* * *	
	AN75A10	Rolt 5/16 X 1/16 Arm-to-Str. Adapter	1	* * *	
	633948	Bolt, 3/8 X 7-9/16, Alternator-to-Bracket	1	***	
	401507	Washer, Alternator-to-Bracket	2	***	
	2441	Nut, Alternator-to-Bracket	1	***	
	539547-31.19	Belt	1	37-19	
IO-470-V6	642171A1 ©	Crankcase Studding Assembly	. 1	***	
10-470 00	629847	. Nozzle, Squirt	6	1-31	
	627995A2	Rod Assembly, Oil Gauge	. 1	6-42	
	AN123860	O-Ring	1	6-43	
	631481	Piston, 8:1 Compression Ratio	6	13-1	
	639565	Ring, Piston, Top Groove	6	13-2	
	639566	Ring, Piston, Second Groove	6	13-3	
	639563	Ring, Piston, Third Groove	6	13-4	
	627480	Ring, Piston, Fourth Groove	6	13-5	
	635169	Sheave, Starter Adapter	1	32-40 ***	
	634649	Bracket, Engine & Alternator Mounting	1	***	
	641658	Alternator	1	***	
	640261	Sheave, Alternator Driven	1	***	
	634617	Bracket, Adjustment Arm	1	***	
	530346	Screw, 5/16 x 7/8, Altto-Adjusting Arm	1	***	
	13XX202B	Washer, Lock, Alternator-to-Adjusting Arm	1 1	***	_
	537539	Washer, Alternator-to-Adjusting Arm	•		

	MODEL SPEC	PART NUMBER	12345 DESCRIPTION	QTY	FIGURE INDEX
``	10-470-V6	537750	Screw, 5/16 x 1-1/8, Arm-to-Starter Adpt	1	***
	(Continued)	501868	Washer, Tab, Arm-to-Starter Adpt	1	* * *
	(Continued)	634657	Bolt. 3/8 x 4-39/64, Altto-Mtg. Bracket	1	* * *
		22786	Washer, Alternator-to-Mtg. Bracket	2	* * *
		2441	Nut, Alternator-to-Mounting Bracket	1	* * *
		536038	Nut, Exhaust Flange	24	19-41
		639808	Regulator, Voltage	1	76-1
	IO-470-V8	642171A1 ^①	Craimedas Stadamig.	1	* * *
		629847	Nozzle, Squirt	6	1-31 ***
		633942	Bracket, Engine Mounting	1	
		631111	Alternator	1	37-1
		631094	Fan, Alternator	1	37-2
		633953	Sheave, Alternator	1	37-3 ***
		633917	Bracket, Alternator Adjustment Arm	1	
		628730	Screw, 5/16 X 1, Alternator-to-Adjustment Arm	1	* * *
		537539	Washer, Alternator-to-Adjustment Arm	1	* * *
		AN75A10	Bolt, 5/16 X 1/16, Arm-to-Str. Adapter	1	* * *
		633948	Bolt, 3/8 X 7-9/16, Alternator-to-Bracket	1	* * *
		401507	Washer, Alternator-to-Bracket	2	* * *
		2441	Nut, Alternator-to-Bracket	1	* * *
		539547-31.19	Belt	1	37-19
	10.470.1/0	C40171 A 1 (1)	Countries Chadding Assembly	1	***
	10-470-V9	642171A1 ①	,	1	
	•	629847	Nozzle, Squirt	6	1-31
		639589-1A1	Rod Assembly, Oil Gauge (Left Hand)	1	6-42
		639589-2A1	Rod Assembly, Oil Gauge (Right Hand)	1	6-42
		AN123860	. O-Ring	1	6-43
		631481	Piston, 8:1 Compression Ratio	6	13-1
		639565	Ring, Piston, Top Groove	6	13-2
		639566	Ring, Piston, Second Groove	6	13-3
		639563	Ring, Piston, Third Groove	6	13-4
		639480	Ring, Piston, Fourth Groove	6	13-5
		634649	Bracket, Engine and Alternator Mounting	1	* * *
		539058	Washer, Bracket-to-Crankcase	4	* * *
1		2441	Nut, Bracket-to-Crankcase	4	* * *
		636415	Harness Assembly	1	* * *
		641638	Bracket, Throttle Body Support	1	* * *
		536038	Nut, Exhaust Flange	24	19-41
J	O-470-V10	642171A1 ①	Crankcase Studding Assembly	1	* * *
		629847	. Nozzle, Squirt	6	1-31
		627995A2	Rod Assembly, Oil Gauge	1	6-42
		AN123860	. O-Ring	1	6-43
		631481	Piston, 8:1 Compression Ratio	6	13-1
		639565	Ring, Piston, Top Groove	6	13-2
		639566	Ring, Piston, Second Groove	6	13-3
		639563	Ring, Piston, Third Groove	6	13-4
	•	627480	Ring, Piston, Fourth Groove	6	13-5
		634000	Sheave, Starter Adapter	1	32-40

MODEL SPEC	PART NUMBER	12345 DESCRIPTION	QTY	FIGURE INDEX
IO-470-V10	633942	Bracket, Engine & Alt. Mounting	1	***
(Continued)	539058	Washer, Mounting Bracket-to-C/C		***
(Continued)	2441	Nut, Mounting Bracket-to-C/C		***
	631111	Alternator	_	37-1
	631094	Fan, Alternator		37-2
	633953	Sheave, Alternator Driven		37-3
	633917	Bracket, Alt. Adjustment Arm		***
	628730	Screw, 5/16 x 1, Altto-Adj. Arm		***
	537539	Washer, Alternator-to-Adj. Arm		* * *
	AN75A10	Bolt, 5/16 x 1-1/16, Arm-to-Starter Adpt		* * *
	633948	Bolt, 3/8 x 7-9/16, Altto-Bracket		* * *
	401507	Washer, Alternator-to-Bracket		* * *
	2441	Nut, Alternator-to-Bracket	_	* * *
	539547-31.19	Belt		37-19
	641638	Bracket, Throttle Body Support		* * *
	536038	Nut, Exhaust Flange	24	19-41
	631656	Regulator, Voltage	1	76-1

NOTES:

^{***} Not Illustrated.

① These are Phase 3 style crankcases. For earlier style, Phase 1 & 2, see Service Bulletin M78-9.

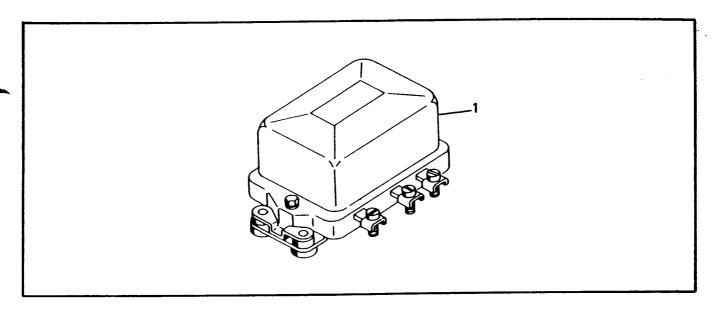


FIGURE 76

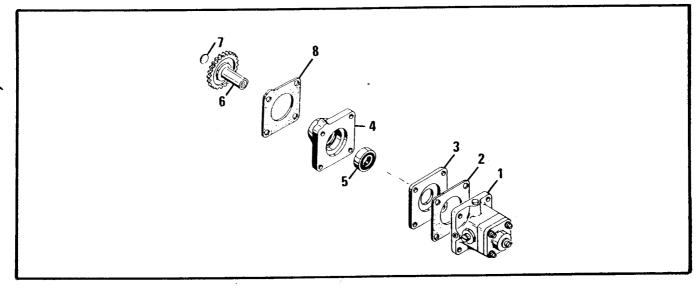


FIGURE 77

FIG. & INDEX	PART NUMBER	DESCRIPTION	QTY.
77-1	535262	Pump Assembly, Fuel	. 1
-2	AN4059-1	Gasket, Fuel Pump-to-Adapter	
-3	537682	Insulator, Fuel Pump	. 1
-4	627518	Adapter Assembly, Fuel Pump	. 1
-5	534956	. Seal, Oil	. 1
-6	534995	Gear Assembly, Fuel Pump Drive	. 1
-7	539634	. Plug, Oil	. 1
-8	534941	& Gasket, Adapter-to-Crankcase	. 1

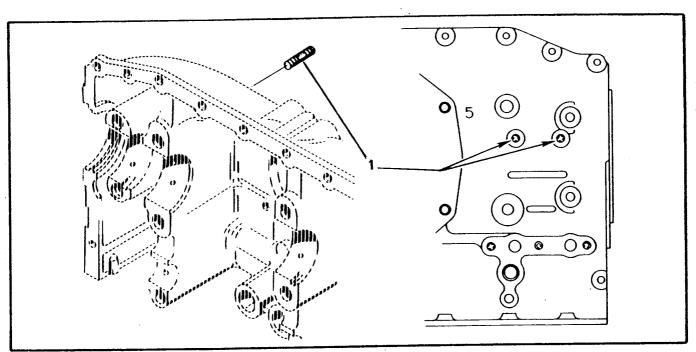


FIGURE 78

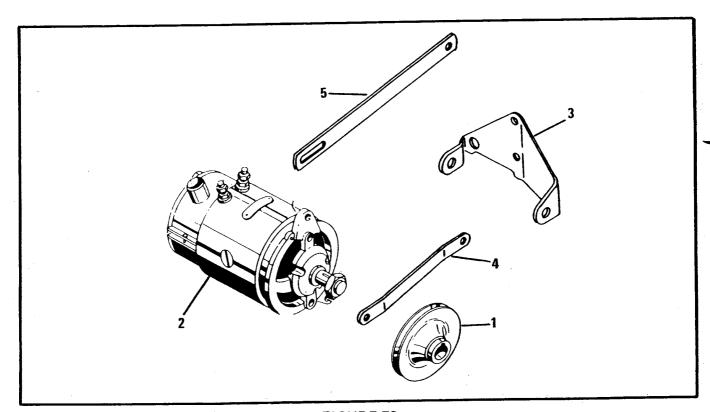


FIGURE 79

FIG. & INDEX	PART NUMBER	DESCRIPTION	QTY.
79-1	627377	Sheave, Generator Drive	
-2	627274	Generator, 24 Volt, 25 Amp	1
-3	539580	Bracket, Generator Support	1
-4	538283	Bracket, Generator Support	1
-5	538346	Arm, Generator Belt Adjusting	1

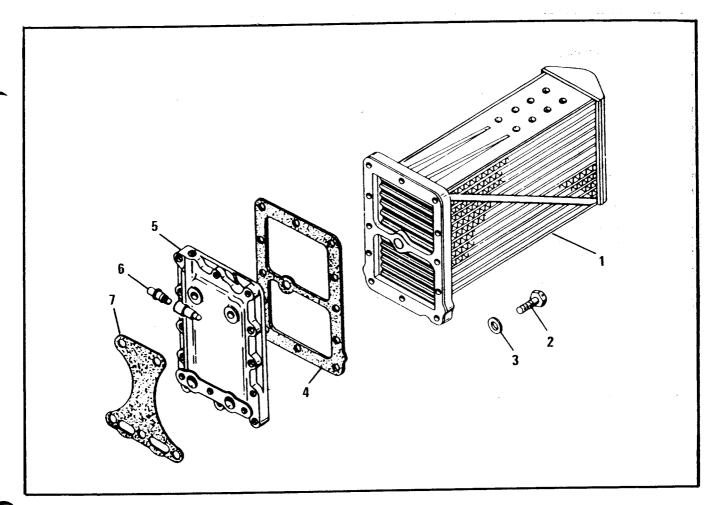


FIGURE 80

FIG. & INDEX	PART NUMBER	DESCRIPTION	QTY.
80-1	639151	Cooler, Oil	1
		ATTACHING PARTS	
-2	535668	Screw	12
-3	MS35338-44	Washer, Lock	12
-4	20522	Washer	12
		* * *	4
-5	626342	Gasket, Oil Cooler-to-Plate	1
-6	626332	Plate, Oil Cooler	1
-7	639305	Valve, Oil Temperature Control	1
8	627496	. Gasket	1
-9	626341	Gasket, Plate-to-Crankcase]
-10	2026	Plug	1

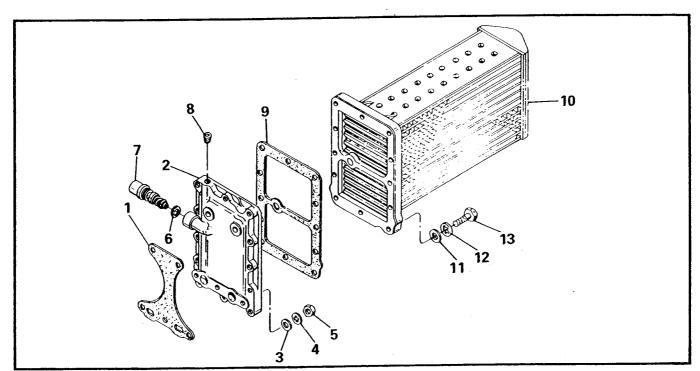


FIGURE 81

FIG. & INDEX	PART NUMBER	DESCRIPTION	QTY.
81-1	626341	Gasket, Crankcase-to-Plate	1
-2	626332	Plate Oil Cooler Adapter	2
		ATTACHING PARTS	
-3	20522	Washer, Plain	5
-4	MS35338-44		5
-5	2437	Nut, Plain, Hex	5
		* * * *	_
-6	639305	Oil Temperature Control Valve	1
-7	627496	. Gasket, Oil Temperature Control Valve	1
-8	2026	Plug, Pipe, 1/4 - 18	1
-9	626342	Gasket, Oil Cooler-to-Adapter	1
-10	639171	Cooler Assembly, Oil	. 1
		ATTACHING PARTS	
-11	20522	Washer, Plain	12
-12	MS35338-44		12
-13	535668	Screw, 1/4 - 20 x 3/8 Inch Long	12

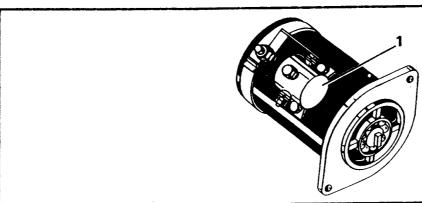


FIGURE 82